

Mattel FYM50

Mattel Harry Potter Doll (Model FYM50) Instruction Manual

Your guide to setup, operation, and care.

INTRODUCTION

This manual provides essential information for the Mattel Harry Potter Doll, Model FYM50. This doll is designed for fans and collectors to recreate scenes from the Harry Potter films or imagine new adventures. It features multiple points of articulation for dynamic posing and comes with a personalized wand.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Please ensure all small accessories, such as the wand, are handled appropriately, especially around young children, to prevent choking hazards.

SETUP

Follow these steps to prepare your Harry Potter doll for play or display:

1. **Unboxing:** Carefully remove the Harry Potter doll and its accessories from the packaging. Ensure all components, including the doll and wand, are accounted for.
2. **Initial Posing:** The doll features eleven points of articulation (neck, shoulders, hips, knees, elbows, and wrists). Gently move the joints to achieve desired poses. If joints feel stiff initially, carefully manipulate them to loosen.



The Harry Potter doll, removed from its packaging and ready for display or play.

OPERATING THE DOLL

The Harry Potter doll is designed for imaginative play and display. Its articulated body allows for a wide range of poses.

- **Posing:** Utilize the eleven movable joints to position the doll in various stances. This allows for dynamic storytelling and scene recreation.
- **Wand Use:** The included personalized wand can be placed in the doll's hand. This accessory enhances role-play scenarios, allowing the doll to 'cast spells'.



The doll's hand holding its personalized wand, ready for spellcasting.





Detailed facial features of the Harry Potter doll, including his iconic glasses and scar.

MAINTENANCE

Proper care will ensure the longevity of your Harry Potter doll.

- **Cleaning:** To clean the doll, gently wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the doll away from direct sunlight and extreme temperatures to prevent material degradation or color fading.
- **Clothing Care:** The doll's fabric clothing can be spot cleaned with a mild detergent and water. Allow to air dry completely.

TROUBLESHOOTING

If you encounter any issues with your doll, consider the following:

- **Stiff Joints:** If a joint feels stiff, gently manipulate it back and forth a few times. Avoid excessive force to prevent damage.
- **Lost Accessories:** Keep small accessories like the wand in a secure place when not in use to prevent loss.
- **Clothing Fit:** Ensure the doll's clothing is properly adjusted to avoid restricting movement or causing wear.


SPECIFICATIONS

Brand	Mattel
Model Number	FYM50
Item Type Name	Harry Potter Harry Potter Doll
Material Type	Plastic
Item Dimensions (L x W x H)	8 x 2.5 x 12.75 inches (20.32 x 6.35 x 32.38 cm)
Item Weight	242 Grams
Age Range Description	6 years and up
Included Components	Doll, Wand
Articulation Points	Eleven (neck, shoulders, hips, knees, elbows, wrists)

12.75cm

2.5cm

8cm

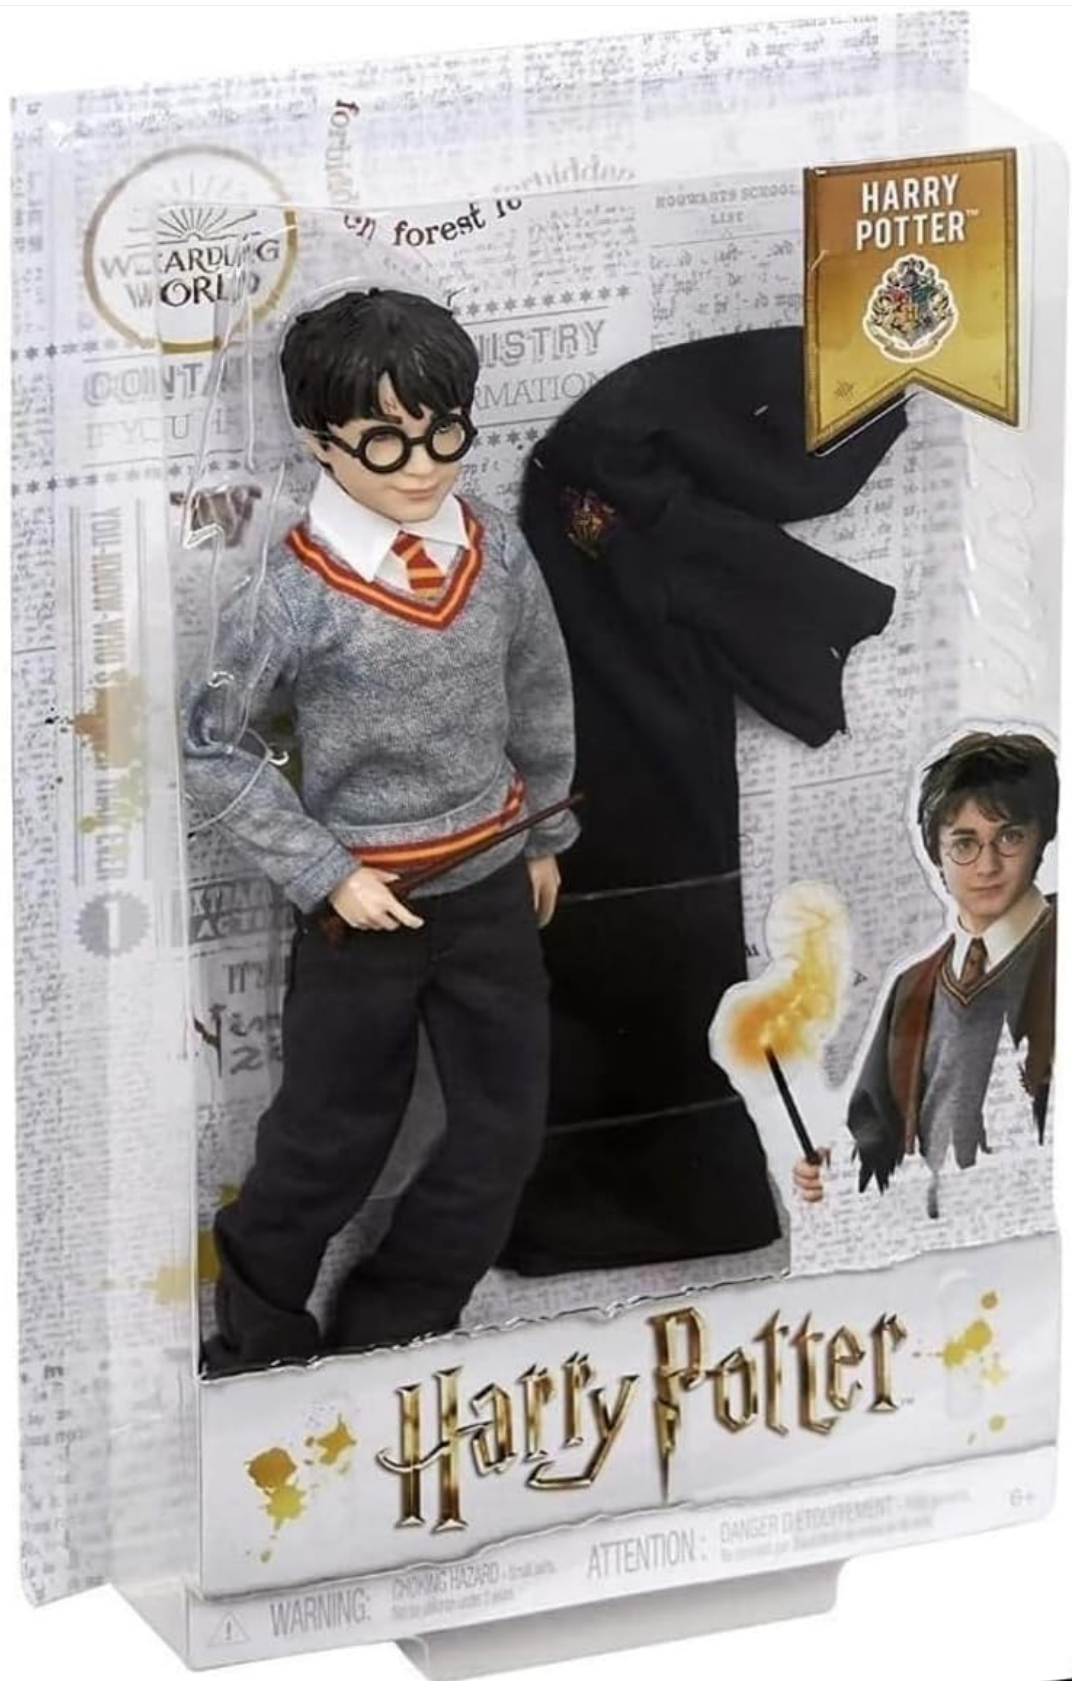

Packaging dimensions of the Harry Potter doll.

WARRANTY INFORMATION

For information regarding product warranty, please refer to the official Mattel website or contact their customer service directly. Warranty terms and conditions may vary by region and purchase date.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Mattel customer service. Visit the official Mattel website for contact details and support resources.
Mattel Official Website: www.mattel.com

© 2026 Mattel. All rights reserved. Harry Potter characters, names and related indicia are © ™ Warner Bros. Entertainment Inc. WB SHIELD: © ™ WBEI. Publishing Rights © JKR.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question