

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Unold](#) /

> [Unold 4888044 Mixer Paddle for Profi Plus 48880 Ice Cream Maker Instruction Manual](#)

## Unold 4888044

# Unold 4888044 Mixer Paddle for Profi Plus 48880 Ice Cream Maker

Instruction Manual

## INTRODUCTION

---

This manual provides essential instructions for the Unold 4888044 mixer paddle, a genuine replacement part specifically designed for the Unold Profi Plus 48880 ice cream maker. It covers proper installation, usage guidelines, maintenance procedures, and product specifications to ensure optimal performance and longevity of your appliance.

## SETUP AND INSTALLATION

---

Follow these steps to correctly install the mixer paddle into your Unold Profi Plus 48880 ice cream maker:

- Safety First:** Always ensure the ice cream maker is unplugged from the power outlet before beginning installation or maintenance.
- Prepare the Bowl:** Place the cooling bowl securely into the ice cream maker's main unit.
- Insert the Paddle:** Carefully align the central opening of the mixer paddle with the drive shaft located at the bottom center of the cooling bowl. Gently push the paddle down until it is firmly seated on the shaft. Ensure it can rotate freely without obstruction.
- Close the Lid:** Once the paddle is in place, close the lid of the ice cream maker, ensuring it is properly secured according to your ice cream maker's main manual.



This image displays the Unold 4888044 mixer paddle. It is a white, durable plastic component designed to fit into the ice cream maker's bowl, featuring a central shaft attachment point and two broad, curved blades for efficient mixing.

## OPERATING INSTRUCTIONS

---

The mixer paddle is an integral component for preparing frozen desserts. Once correctly installed, its operation is directly linked to the ice cream maker's functionality:

- The paddle continuously stirs the ingredients within the cooling bowl, preventing ice crystal formation and ensuring a smooth, consistent texture for your ice cream, sorbet, or frozen yogurt.
- For detailed operating procedures, including ingredient ratios, processing times, and specific recipes, please refer to the comprehensive instruction manual provided with your Unold Profi Plus 48880 ice cream maker.
- Do not operate the ice cream maker without the mixer paddle properly installed, as this can affect the quality of the frozen dessert and potentially damage the appliance.

## CARE AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your mixer paddle:

- **Cleaning After Use:** After each use, unplug the ice cream maker and remove the mixer paddle. Wash it thoroughly with warm water and a mild dish soap. Rinse completely to remove all soap residue.
- **Drying:** Dry the paddle completely before storing it to prevent water spots or mineral buildup.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the paddle's surface.
- **Dishwasher Safety:** While the paddle is generally dishwasher-safe, hand washing is recommended for optimal care and to preserve its finish over time.

## TROUBLESHOOTING

---

If you encounter issues with your mixer paddle, consider the following:

- **Paddle Not Rotating:**
  - Ensure the paddle is correctly seated on the drive shaft within the cooling bowl.
  - Verify that the ice cream maker's lid is properly closed and locked, as some models have safety mechanisms that prevent operation if the lid is not secure.
  - Check if the ice cream maker itself is powered on and functioning according to its own manual.
- **Paddle Appears Damaged:**
  - If the paddle is cracked, bent, or shows any signs of wear that could impede its function or compromise food safety, it should be replaced immediately with a genuine Unold 4888044 part.

## SPECIFICATIONS

---

<b>Brand</b>	Unold
<b>Model Number</b>	4888044
<b>Compatibility</b>	Unold Profi Plus 48880 Ice Cream Maker
<b>Product Dimensions (L x W x H)</b>	19 x 13 x 3.5 cm
<b>Item Weight</b>	60 grams
<b>Material</b>	Durable Plastic
<b>ASIN</b>	B07CH3SMRC

## WARRANTY INFORMATION

---

Warranty information for this specific replacement part (Unold 4888044 Mixer Paddle) is not explicitly provided as a standalone item. Please refer to the warranty policy that came with your original Unold Profi Plus 48880 ice cream maker for details regarding replacement parts or contact Unold customer service directly for specific warranty inquiries.

## CUSTOMER SUPPORT

---

For further assistance, technical support, or to inquire about purchasing replacement parts, please contact Unold customer service. Contact details, including phone numbers and website information, are typically found in the main instruction manual of your Unold Profi Plus 48880 ice cream maker or on the official Unold website.