



Manuals.plus /

- › Westek /
- › Westek 6004B 200W 3-Level Touch Lamp Plug-in Dimmer User Manual

Westek 6004B

Westek 6004B 200W 3-Level Touch Lamp Plug-in Dimmer User Manual

Model: 6004B | Brand: Westek

1. INTRODUCTION

Thank you for choosing the Westek 6004B 200W 3-Level Touch Lamp Plug-in Dimmer. This device is designed to add convenient 3-level touch dimming functionality to compatible lamps, allowing you to easily adjust light intensity with a simple touch. Please read this manual thoroughly before installation and use to ensure proper operation and safety.

2. IMPORTANT SAFETY INFORMATION

- **Risk of Electric Shock:** Always unplug the lamp from the wall outlet before installing or removing the dimmer.
- **Indoor Use Only:** This dimmer is intended for indoor use in dry locations. Do not expose to water or moisture.
- **Maximum Wattage:** Do not exceed the maximum rated wattage of 200 watts. Overloading may cause damage to the dimmer or create a fire hazard.
- **Lamp Compatibility:** This dimmer is designed for incandescent or halogen lamps. It may not be compatible with all LED or CFL bulbs. Test compatibility before extended use.
- **Lamp Switch Type:** This dimmer is generally compatible with lamps that have a turn-knob switch. It may not function correctly with lamps featuring a push-through socket switch.
- **Children and Pets:** Keep the device out of reach of children and pets.

3. PACKAGE CONTENTS

Your package should contain the following item:

- Westek 6004B 200W 3-Level Touch Lamp Plug-in Dimmer unit(s)

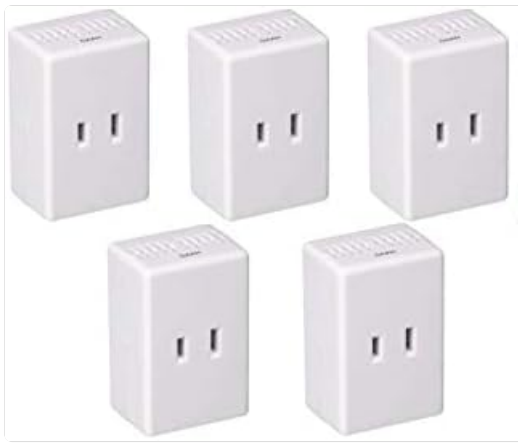


Image: Multiple Westek 6004B 3-Level Touch Lamp Plug-in Dimmers. Each unit is a compact white rectangular device with two standard electrical outlets on its front face, designed to be plugged into a wall outlet.

4. SETUP AND INSTALLATION

1. **Unplug Lamp:** Ensure the lamp you intend to use with the dimmer is unplugged from the wall outlet.
2. **Plug in Dimmer:** Insert the Westek 6004B dimmer into a standard 120V AC wall outlet.
3. **Connect Lamp:** Plug your lamp's power cord into the outlet provided on the front of the Westek 6004B dimmer.
4. **Verify Lamp Switch:** Ensure your lamp's built-in switch (if any) is in the "ON" position. The dimmer will then control the lamp's power and brightness.
5. **Test Functionality:** Gently touch any metal part of the lamp (e.g., base, stem) to test the touch dimming feature.

Important Note on Lamp Compatibility: For optimal performance, this dimmer is best suited for lamps with a traditional turn-knob switch that can be left in the "ON" position. Lamps with push-through socket switches or other non-standard switch types may not function reliably with this dimmer.

5. OPERATING INSTRUCTIONS

The Westek 6004B dimmer provides three levels of brightness control via touch interaction with your lamp.

1. **First Touch:** Gently touch any metal part of the connected lamp. The lamp will illuminate at its lowest brightness setting.
2. **Second Touch:** Touch the lamp again. The brightness will increase to the medium setting.
3. **Third Touch:** Touch the lamp a third time. The brightness will increase to the highest setting.
4. **Fourth Touch:** Touch the lamp a fourth time. The lamp will turn OFF.

Repeat the touch sequence to cycle through the brightness levels and turn the lamp on or off.

6. MAINTENANCE

- **Cleaning:** To clean the dimmer, unplug it from the wall outlet and wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, unplug the dimmer and store it in a cool, dry place.
- **Inspection:** Periodically inspect the dimmer and its cords for any signs of damage. Discontinue use if damage is observed.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on or dim.	<ul style="list-style-type: none"> ◦ Dimmer not properly plugged in. ◦ Lamp not properly plugged into dimmer. ◦ Lamp's built-in switch is OFF. ◦ Incompatible lamp type (e.g., certain LEDs/CFLs). ◦ Lamp bulb is burnt out. ◦ Lamp has a push-through socket switch. 	<ul style="list-style-type: none"> ◦ Ensure dimmer is securely plugged into a live wall outlet. ◦ Ensure lamp is securely plugged into the dimmer. ◦ Turn the lamp's built-in switch to the ON position. ◦ Try a different lamp or bulb type (incandescent/halogen recommended). ◦ Replace the lamp bulb. ◦ Use with a lamp that has a turn-knob switch.
Dimmer cycles randomly or behaves erratically.	<ul style="list-style-type: none"> ◦ Electrical interference. ◦ Faulty lamp wiring or bulb. ◦ Dimmer malfunction. 	<ul style="list-style-type: none"> ◦ Try plugging the dimmer into a different outlet. ◦ Ensure lamp wiring is secure and bulb is functioning correctly. ◦ If issues persist, discontinue use and contact customer support.
Dimmer feels hot.	<ul style="list-style-type: none"> ◦ Overloaded wattage. ◦ Poor ventilation. 	<ul style="list-style-type: none"> ◦ Ensure total lamp wattage does not exceed 200W. ◦ Ensure dimmer is not covered or in an enclosed space. ◦ If excessively hot, unplug immediately and discontinue use.

8. SPECIFICATIONS

Model: 6004B (Item model number: 15957-2x5)

Brand: Westek

Manufacturer: Amertac

Operation Mode: Plug

Control Method: Touch

Number of Positions: 3 (Low, Medium, High)

Wattage: 200 watts (Maximum)

Voltage: 120V AC (Standard US household)

Color: White

Material: Metal (Contact Material)

Dimensions (L x W x H): 8.5 x 7 x 4.25 inches (Product Dimensions)

Item Weight: 13.4 ounces

Connectivity Protocol: Wi-Fi (*Note: While listed, the primary function is touch control for dimming*)

UPC: 735520746373

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical support, please contact Westek customer service. Refer to the product packaging or the official Westek website for the most current contact details.

Website: Visit the Westek Store on Amazon

