

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Zebra DLD80 Educational Walker Instruction Manual

Fisher-Price DLD80

Fisher-Price Zebra DLD80 Educational Walker Instruction Manual

Model: DLD80

1. INTRODUCTION

The Fisher-Price Zebra DLD80 Educational Walker is designed to support your child's development from sitting play to taking their first steps. This interactive toy offers two modes of play: a 'Sit & Play' activity center and a 'Stand & Walk' push-along walker. It features engaging activities, music, and sounds to encourage learning and motor skill development for children aged 6 months and older.



Image 1.1: The Fisher-Price Zebra DLD80 Educational Walker, showcasing its design and interactive elements.

2. SAFETY INFORMATION

Please read and retain these instructions for future reference. Adult supervision is required at all times when the child is using this product.

- Ensure all components are securely assembled before use.

- Use only on flat, level surfaces. Do not use on stairs, inclines, or uneven terrain.
- Keep away from open flames, heaters, and other heat sources.
- Do not allow children to play with batteries.
- Dispose of batteries properly.
- This toy is intended for children who can sit unassisted and are beginning to walk.

3. PACKAGE CONTENTS

Verify that all parts are present before assembly:

- Zebra main body with activity panel
- Handlebar
- Four wheels
- Connecting support pieces

4. SETUP & ASSEMBLY

Assembly requires a Phillips head screwdriver (not included) and 2 AA batteries (not included).

4.1 Battery Installation

1. Locate the battery compartment on the back or underside of the zebra's main body.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover and remove the cover.
3. Insert 2 new AA (LR6) alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and tighten the screw.

4.2 Assembling the Walker

1. Attach the support pieces to the main zebra body, ensuring they click securely into place.
2. Slide the four wheels onto their respective axles on the support pieces until they lock.
3. Insert the handlebar into the designated slots on the top of the zebra's head until it clicks firmly into position.
4. Verify that all connections are secure before allowing a child to use the toy.

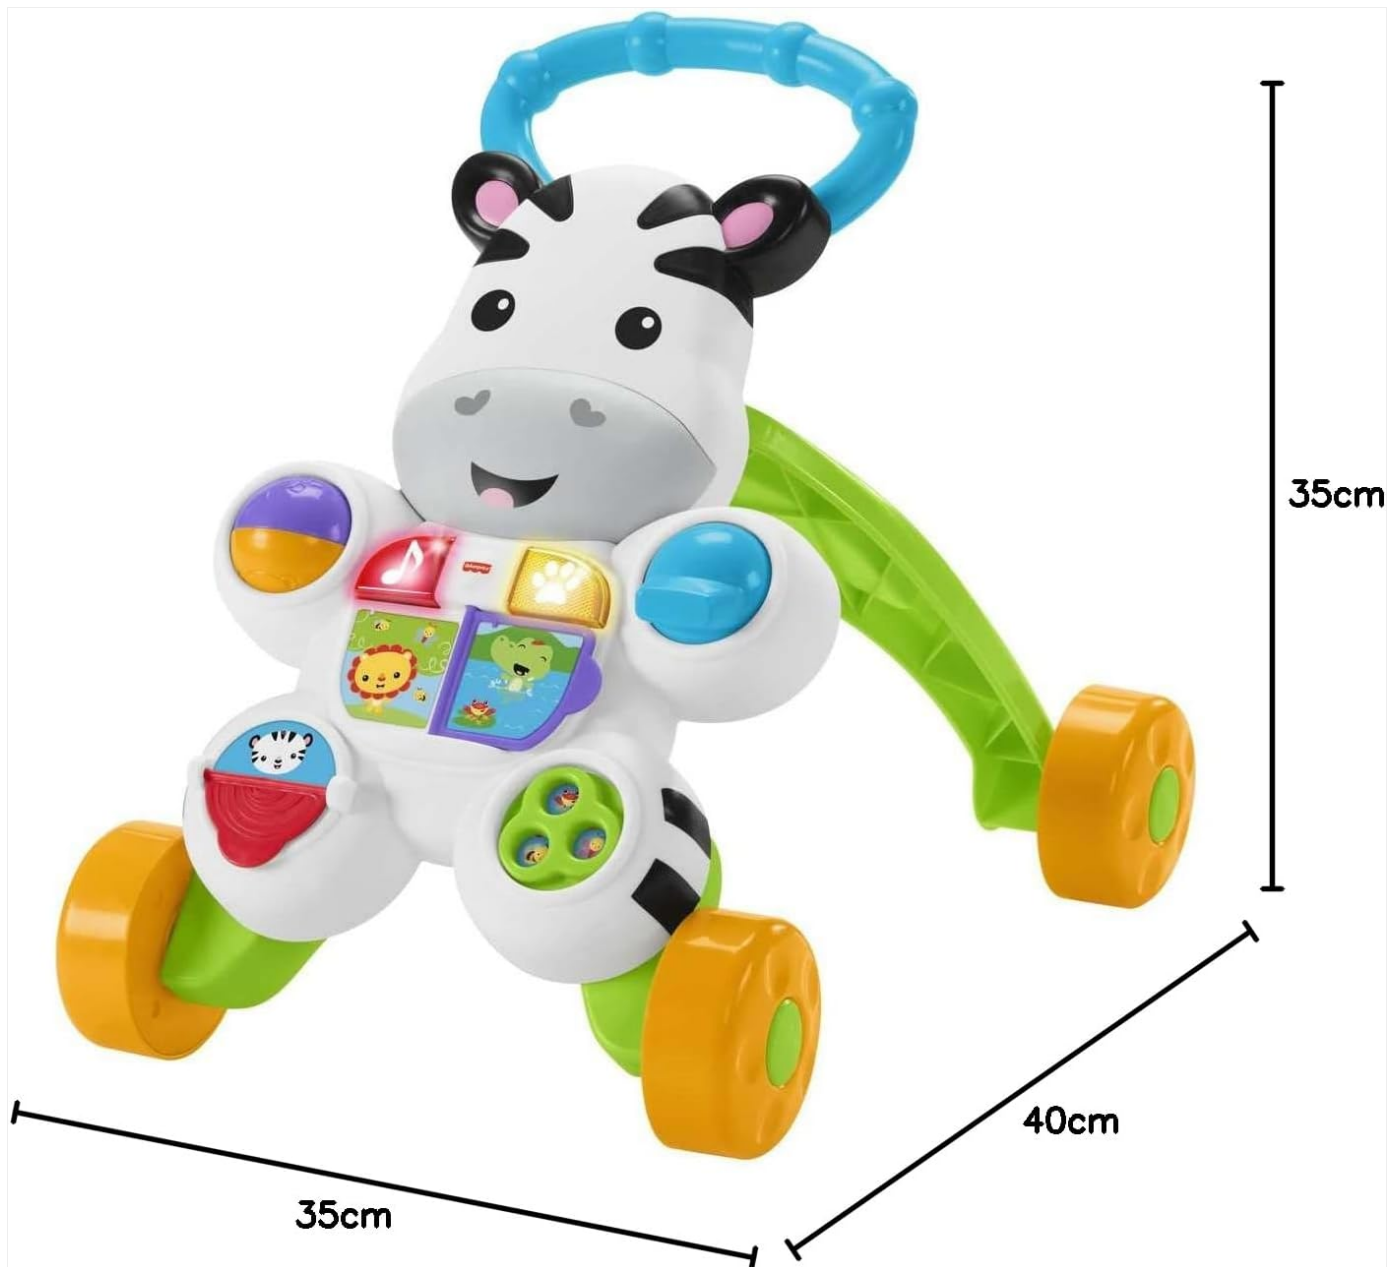


Image 4.1: Diagram showing the assembled Fisher-Price Zebra DLD80 with approximate dimensions.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Volume Control

Locate the power switch and volume control on the zebra's activity panel. Slide the switch to turn the toy ON or OFF. The volume control typically offers two settings: low and high.

5.2 Sit & Play Mode

When your child is sitting, the front activity panel provides various interactive elements:

- **Light-Up Buttons:** Press the buttons to activate songs, phrases, and animal sounds.
- **Flip Book Page:** Turn the page to learn about the alphabet and numbers.
- **Spinning Roller:** Engage with the spinning roller for tactile exploration.
- **Other Activities:** Explore additional manual activities designed for fine motor skill development.



Image 5.1: A child engaging with the activity panel of the Fisher-Price Zebra DLD80 in Sit & Play mode.



5.3 Stand & Walk Mode

Once your child is ready to take their first steps, the sturdy handle and four-wheel base provide support and stability.

- **Encouraging Sounds:** As your child pushes the walker, it plays fun phrases, music, and songs to encourage movement and reward their efforts.
- **Stable Design:** The wide base and easy-to-grip handle help your child maintain balance while learning to walk.



Image 5.3: A toddler happily walking with the Fisher-Price Zebra DLD80, utilizing its stable design for support.



Image 5.4: A child pushing the Fisher-Price Zebra DLD80 walker across a room, demonstrating its use for early steps.

6. MAINTENANCE

6.1 Cleaning

Wipe the toy with a damp cloth using mild soap and water. Do not immerse the toy in water. Do not use harsh cleaners or abrasives.

6.2 Battery Care

Remove batteries if the toy will not be used for an extended period to prevent leakage. Always replace all batteries at the same time with new ones of the same type and brand.

7. TROUBLESHOOTING

- **No Sound or Lights:**

- Ensure the power switch is in the 'ON' position.
- Check battery installation for correct polarity.
- Replace old batteries with new ones.

- **Intermittent Operation:**

- This may indicate low batteries. Replace them.
- Ensure battery compartment cover is securely closed.

8. SPECIFICATIONS

Feature	Detail
Model Number	DLD80
Brand	Fisher-Price
Product Dimensions	10.5 x 46 x 27.7 cm (approx.)
Item Weight	2 kg
Batteries Required	2 AA (LR6) alkaline batteries
Material	Plastic
Recommended Age	6 months and up

9. WARRANTY & SUPPORT

For product support, replacement parts, or warranty information, please contact Fisher-Price customer service. Refer to the packaging or the official Fisher-Price website for the most current contact details in your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I remove the front wheels of the Fisher-Price Zebra DLD80 walker if they were assembled in the wrong order?

According to the Fisher-Price Zebra DLD80 manual, the wheels are designed to "lock" onto the axles once they are slid into place. Because these toys are designed for child safety, the wheel fasteners are...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B07CJWZ3Z8>

More documents and user manuals: <https://manuals.plus/>