

## SENCOR SPV 2920

# Sencor SPV 2920 Portable DVD Player User Manual

Model: **SPV 2920** | Brand: **SENCOR**

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using the Sencor SPV 2920 Portable DVD Player. Keep this manual for future reference.

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources or in direct sunlight.
- Use only the specified power adapter.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Keep discs clean and free from scratches to ensure optimal playback.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

## 2. PRODUCT OVERVIEW

---

The Sencor SPV 2920 is a portable DVD player designed for on-the-go entertainment. It features a 9-inch display and supports various disc formats.



Figure 2.1: Front view of the Sencor SPV 2920 Portable DVD Player, showing the 9-inch screen and control buttons.

## 2.1 Main Components

- **9-inch LCD Display:** High-resolution screen for viewing content.
- **Disc Tray:** For inserting DVDs and CDs.
- **Control Buttons:** Play, Pause, Stop, Skip, Volume, Menu, Setup.
- **AV Output:** Connect to an external display or TV.
- **Headphone Jack:** For private listening.
- **USB Port:** For playing media from USB flash drives.
- **SD Card Slot:** For playing media from SD memory cards.
- **Power Input:** For connecting the AC power adapter.

## 3. SETUP

### 3.1 Unpacking

Carefully remove all components from the packaging. Ensure all items listed in the package contents are present. Retain the packaging for future transport or storage.

## 3.2 Connecting Power

1. Connect the AC power adapter to the DC IN port on the portable DVD player.
2. Plug the other end of the power adapter into a standard electrical outlet.
3. If the unit has an internal rechargeable battery (not included), allow it to charge fully before first use. The charging indicator light will typically change color or turn off when charging is complete.



Figure 3.1: Illustration of connecting the power adapter to the unit.

## 3.3 Initial Power On

Press and hold the **POWER** button to turn on the unit. The Sencor logo will appear on the screen, followed by the main menu or disc loading screen.

# 4. OPERATING INSTRUCTIONS

---

## 4.1 Inserting and Removing Discs

1. Gently open the disc tray cover.
2. Place a DVD or CD onto the spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the disc tray cover firmly until it clicks. The player will automatically begin reading the disc.
4. To remove a disc, open the tray cover and gently press the center spindle to release the disc, then lift it out.



Figure 4.1: Correct method for inserting a DVD or CD.

## 4.2 Basic Playback Controls

- **PLAY/PAUSE** (▶ / ⏸): Press to start playback or pause it. Press again to resume.
- **STOP** (⏹): Press to stop playback.
- **SKIP** (⏮ / ⏭): Press to skip to the next or previous chapter/track.
- **FAST FORWARD/REWIND** (⏩ / ⏪): Press and hold to fast forward or rewind through content.
- **VOLUME** (+/-): Adjust the audio output level.
- **MENU**: Access the disc's main menu.
- **SETUP**: Access the player's system settings.



Figure 4.2: Overview of the main control buttons on the unit.

## 4.3 Using USB and SD Card Media

Insert a USB flash drive into the USB port or an SD card into the SD card slot. The player should automatically detect the media and display a file browser. Navigate through your files using the directional buttons and press **PLAY** to start playback of supported media files.

## 4.4 Connecting to an External Display

To view content on a larger screen, connect an AV cable (not included) from the AV OUT port on the

portable DVD player to the AV IN ports on your television or monitor. Select the appropriate AV input on your external display.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- For the screen, use a soft, lint-free cloth specifically designed for LCD screens. Do not use abrasive cleaners or solvents.
- Ensure the unit is powered off and unplugged before cleaning.

### 5.2 Disc Care

- Handle discs by their edges to avoid fingerprints.
- Store discs in their cases when not in use to prevent scratches.
- Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

### 5.3 Storage

When not in use for extended periods, store the portable DVD player in a cool, dry place, away from direct sunlight and extreme temperatures. If the unit has an internal battery, charge it periodically to maintain battery health.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Sencor SPV 2920, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	No power, discharged battery, faulty power adapter.	Check power connection. Ensure battery is charged. Try a different outlet.
Disc not playing/detected.	Disc inserted incorrectly, dirty/scratched disc, unsupported disc format.	Reinsert disc correctly. Clean the disc. Ensure disc is DVD/CD format.
No sound.	Volume too low, headphones not connected properly, mute activated.	Increase volume. Check headphone connection. Deactivate mute function.
Picture distorted/unclear.	Dirty disc, screen settings, external display connection issue.	Clean disc. Adjust screen settings. Check AV cable connection to external display.

If the problem persists after trying these solutions, please contact Sencor customer support.

## 7. SPECIFICATIONS

---

Feature	Detail
---------	--------

Feature	Detail
Model Number	SPV 2920
Brand	Sencor
Screen Size	9 inches (22.9 cm)
Resolution	800 x 480 Pixels
Supported Media	DVD, CD, CD Video (and likely USB/SD card media files)
Product Dimensions	50 x 50 x 28 cm (L x W x H)
Item Weight	4.84 kg
Power Source	AC Power Adapter (internal battery not included, if applicable)

*Note: Product dimensions and weight may refer to packaging. Actual unit dimensions are typically smaller for a portable device.*

## 8. WARRANTY AND SUPPORT

Sencor products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Sencor website.

When contacting support, please have your model number (SPV 2920) and purchase information ready.