

[Manuals.plus](#) /

› [UBay](#) /

› UBay N2QAYB000485 Remote Control Instruction Manual

UBay N2QAYB000485

Instruction Manual

UBay N2QAYB000485 Remote Control Replacement

For 99% Panasonic LCD LED Plasma Viera TVs



1. PRODUCT OVERVIEW

The UBay N2QAYB000485 is a replacement remote control designed for a wide range of Panasonic LCD, LED, and Plasma Viera TVs. This remote is engineered to function without the need for programming or pairing, offering a straightforward solution for controlling your television.



Figure 1: Front view of the UBay N2QAYB000485 remote control, displaying all buttons and the model number at the bottom.



Figure 2: Angled view of the UBay N2QAYB000485 remote control, showcasing its ergonomic design and button layout.

2. SETUP AND INSTALLATION

This remote control requires no programming or pairing. Simply insert batteries, and it will be ready for use with compatible Panasonic TVs.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two (2) new 1.5V AA alkaline batteries, ensuring the positive (+) and negative (-) ends are aligned correctly according to the diagram inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible Panasonic TV. Point the remote directly at the TV's infrared sensor.

3.1 Compatible Models

This remote control is compatible with a wide range of Panasonic TV models, including but not limited to:

- TC-32LX24, TC-42LD24, TC-42LS24, TC-42PX24, TC-50PS24, TC-50PX24, TC-58PS24, TC-65PS24
- TC-L22X2, TC-L32C22, TC-L32U22, TC-L32X2, TC-L37C22, TCL37D2, TC-L37U22, TC-L37X2
- TC-L42D2, TC-L42U22, TC-L42U25
- TC-P42C2, TC-P42S2, TC-P42U2, TC-P46C2, TC-P46S2, TC-P50C2, TC-P50S2, TC-P50U2, TC-P50X2, TC-P54S2, TC-P58S2, TC-P65S2
- TC-42PX34, TH-42LRU30, TH-32LRU5, TH-42LRU5, TH-37LRU5, TH-85PF12UK
- TH-32LRU50, TH-37LRU50, TH-55LRU50
- TH-32LRU20, TH-37LRU20, TH-42LRU20
- TH-32LRH30U, TH-32LRU30, TH-42LRU50, TH-37LRU50, TH-37LRU30

It also replaces compatible remote models such as N2QAYB000100, N2QAYB000221, N2QAYB00048, N2QAYB000321, N2QAYB000570, and more.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water; avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If your remote control is not functioning as expected, try the following troubleshooting steps:

1. **Remove Obstacles:** Ensure there are no objects blocking the line of sight between the remote control and the TV's infrared sensor. The sensor is typically located in the bottom left or bottom right corner of the television.
2. **Check Batteries:**
 - Verify that the batteries are inserted correctly with the positive (+) and negative (-) ends aligned as indicated.
 - Replace old batteries with new, fresh alkaline batteries.
3. **Power Cycle the Remote:**
 - Remove the batteries from the remote control.
 - Press every button on the remote at least once to drain any residual power and check for stuck buttons.
 - Re-insert the batteries into the remote control.
4. **Power Cycle the TV:** If the above steps do not resolve the issue, try power cycling your television.
 - Unplug the TV from the power outlet.
 - Press and hold the TV's power button for five (5) seconds.
 - Plug the TV back into the power outlet and turn it on.

If the problem persists after following these steps, contact customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	N2QAYB000485
Brand	UBay
Manufacturer	UBay Factory
Compatible Devices	Television (Panasonic LCD, LED, Plasma Viera TVs)
Max Number of Supported Devices	1
Power Supply	2 x 1.5V AA Batteries (Not Included)
Color	Black
Special Feature	Ergonomic
Product Dimensions	8 x 1.8 x 0.5 inches
Item Weight	3 ounces

7. WARRANTY AND SUPPORT

Information regarding specific warranty terms for the UBay N2QAYB000485 remote control is not provided in this manual. Please refer to the product packaging or contact the seller directly for warranty details.

7.1 Customer Support

For further assistance, technical support, or inquiries regarding your UBay remote control, please contact the manufacturer or the retailer from whom you purchased the product. Keep your purchase receipt or order details

handy when contacting support.

