



Manuals.plus /

› NoBrand /

› NoBrand LinQ CLS-URC-5706 6-in-1 Universal Remote Control Instruction Manual

NoBrand CLS-URC-5706

NoBrand LinQ CLS-URC-5706 6-in-1 Universal Remote Control Instruction Manual

Model: CLS-URC-5706

INTRODUCTION

This instruction manual provides detailed guidance for the setup, operation, and maintenance of your NoBrand LinQ CLS-URC-5706 6-in-1 Universal Remote Control. This remote is designed to consolidate control of up to six different audio/video devices, including TVs, DVDs, DVB-T receivers, AUX devices, VCRs, and Satellite receivers, into a single, convenient unit. Please read this manual thoroughly before first use to ensure proper functionality and to maximize your user experience.

PRODUCT OVERVIEW

The LinQ CLS-URC-5706 is a versatile universal remote control featuring 57 keys for comprehensive control over various home entertainment systems. Its 6-in-1 capability allows it to replace multiple original remote controls, simplifying your setup.



Image 1: The NoBrand LinQ CLS-URC-5706 6-in-1 Universal Remote Control shown alongside its retail packaging. The remote is black with clearly labeled buttons for various functions and device types. The packaging highlights its "6 in 1" multi-functionality and model number URC-5706.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two new AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover, ensuring it clicks securely into place.

2. Device Programming

The LinQ CLS-URC-5706 remote requires programming to control your specific devices. This typically involves entering a code corresponding to your device's brand. Refer to the code list provided with your remote (if available) or use the auto-search function.

General Programming Steps (Consult your remote's specific code list for detailed instructions):

1. **Identify Device Type:** Press and hold the desired device button (e.g., **TV**, **DVD**, **DVB-T**, **AUX**, **VCR**, **SAT**) for approximately 3 seconds until the indicator light illuminates.
2. **Enter Code:** Using the numeric keypad, enter the 3 or 4-digit code for your device's brand. The indicator light should turn off after successful code entry.
3. **Test Functionality:** Point the remote at your device and test basic functions like Power (**ALL OFF**), Volume (**VOL+/VOL-**), and Channel (**CH+/CH-**). If the device responds, programming is complete.
4. **Troubleshooting:** If the device does not respond, repeat the process with the next code listed for your brand, or try the auto-search method if available.

Note: Specific programming methods and code lists vary. Always refer to the detailed instructions that came with your remote for the most accurate programming procedure.

OPERATING INSTRUCTIONS

Once programmed, operating your LinQ CLS-URC-5706 remote is straightforward.

- **Device Selection:** Press the corresponding device button (**TV, DVD, DVB-T, AUX, VCR, SAT**) once to select the device you wish to control. The indicator light may flash to confirm selection.
- **Power On/Off:** Use the **ALL OFF** button to power off all programmed devices, or the specific device's power button (if available and programmed) to control individual devices.
- **Volume Control:** Use **VOL+** and **VOL-** buttons to adjust the volume. Press **MUTE** to silence the audio.
- **Channel Navigation:** Use **CH+** and **CH-** buttons to change channels. Use the numeric keypad (0-9) for direct channel entry.
- **Menu and Navigation:** The **MENU** button accesses device menus. Use the directional arrow buttons (up, down, left, right) and **OK** button to navigate and confirm selections.
- **Playback Controls:** For DVD/VCR/DVB-T devices, use buttons like **PLAY, PAUSE, STOP, REW, FF, REC** (if programmed).
- **Additional Functions:** Buttons like **EPG** (Electronic Program Guide), **INFO, TEXT, LANG** (Language), **TV/AV** (Input Source), **ZOOM, MACRO**, and **GOTO** provide access to specific features of your devices, depending on their compatibility and programming.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's indicator light becomes dim or if the remote stops responding. Always replace both batteries at the same time with new ones of the same type. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not working:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the device.
 - Verify that the correct device mode (TV, DVD, etc.) is selected.
- **Device not responding after programming:**
 - Re-enter the programming code, ensuring accuracy.
 - Try other codes listed for your device brand.
 - Ensure the remote is pointed directly at the device's IR receiver.
 - Attempt the auto-search programming method if available for your remote.
- **Some functions not working:**

- Not all functions of your original remote may be supported by a universal remote.
- Ensure the remote is in the correct device mode.
- Some advanced functions may require specific programming or may not be available for all device models.

SPECIFICATIONS

Model	CLS-URC-5706
Brand	NoBrand LinQ
Type	6-in-1 Universal Remote Control
Compatible Peripherals	TV, DVD, DVB-T, AUX, VCR, SAT
Number of Keys	57
Material	Vinyl (as per product data)
Color	Black
Power Source	2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Specific warranty terms and support channels may vary by region and seller.