

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for VIZIO Smart TV (Models E60-C3, XRT122) User Manual

UpStart Components RC-XRT122-DL95

UpStart Components Replacement Remote Control for VIZIO Smart TV

Model: RC-XRT122-DL95 (Compatible with E60-C3, XRT122)

INTRODUCTION

This instruction manual provides comprehensive guidance for the setup, operation, and maintenance of your UpStart Components Replacement Remote Control. This remote is designed to function as a direct replacement for original VIZIO Smart TV remote controls, specifically compatible with models such as E60-C3 and XRT122. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

- 1 x UpStart Components Replacement Remote Control (Model: RC-XRT122-DL95)
- *Note: Batteries are not included. Two AAA batteries are required for operation.*

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Important: This remote control does not require programming. Once batteries are installed, it is ready for use with compatible VIZIO Smart TVs.





Image: Rear view of the UpStart Components remote control, highlighting the battery compartment. This is where two AAA batteries are inserted for operation.

OPERATING INSTRUCTIONS

This remote control is designed to replicate the functionality of your original VIZIO Smart TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

Key Functions Overview





Image: Front view of the UpStart Components remote control, displaying all buttons and their labels.

- **POWER ()**: Turns the TV on or off.
- **INPUT**: Cycles through available input sources (HDMI, AV, etc.).
- **AMAZON / NETFLIX / iHeartRadio**: Direct access buttons for streaming services.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
- **BACK**: Returns to the previous menu or screen.
- **EXIT**: Exits the current menu or application.
- **MENU**: Opens the TV's main menu.
- **INFO**: Displays information about the current program or input.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (+/-)**: Changes the television channel.
- **MUTE ()**: Mutes or unmutes the TV audio.
- **PIC**: Accesses picture settings.
- **CC**: Activates or deactivates Closed Captions.
- **Number Pad (0-9, ENTER)**: For direct channel entry or numerical input.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop)**: Controls media playback.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries**: Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old

batteries with new AAA alkaline batteries.

- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Distance:** Operate the remote within a reasonable distance from the TV (typically up to 20 feet or 6 meters).
- **Infrared Interference:** Bright sunlight or strong artificial light sources can interfere with the remote's signal. Try operating the remote in a different lighting condition.
- **TV Sensor:** Ensure the TV's infrared sensor is clean and not covered.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or immerse the remote in liquid.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

SPECIFICATIONS

Model Number	RC-XRT122-DL95
Brand	UpStart Components
Compatibility	VIZIO Smart TVs (e.g., E60-C3, XRT122)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Dimensions	1.97 x 0.59 x 6.5 inches
Item Weight	2.38 ounces

WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. It is not an Original Equipment Manufacturer (OEM) product and is not covered under any warranties offered by the original manufacturers (e.g., VIZIO).

Any warranties for this product are offered solely by UpStart Components. For specific warranty details or technical support, please refer to the contact information provided by UpStart Components at the point of purchase or on their official website.

All mentions of brand names or model descriptions (e.g., VIZIO, E60-C3, XRT122) are made strictly to illustrate compatibility and are registered trademarks of their respective owners.