

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for VIZIO Smart TVs (M55-D0, XRT122 Compatible) - User Manual

UpStart Components RC-XRT122-DL107

UpStart Components Replacement Remote Control for VIZIO Smart TVs

Model: RC-XRT122-DL107 (Compatible with M55-D0, XRT122)

INTRODUCTION

This manual provides comprehensive instructions for the UpStart Components Replacement Remote Control. This remote is designed to function as a direct replacement for original VIZIO Smart TV remote controls, specifically compatible with models such as M55-D0 and XRT122. It offers the same functionality as the original remote without requiring any programming.

Please note: This is an UpStart Components brand replacement part and is not an Original Equipment Manufacturer (OEM) product. It is not affiliated with any OEM brands, and any warranties for this product are provided solely by UpStart Components.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Dispose of used batteries according to local regulations.
- Avoid exposing the remote control to extreme temperatures, direct sunlight, or moisture.

PACKAGE CONTENTS

- 1 x UpStart Components Replacement Remote Control (Batteries not included)

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with battery compartment.

2. Initial Use

This replacement remote control is pre-programmed and ready to use with compatible VIZIO Smart TV models. No additional programming or setup is required. Simply install the batteries and point the remote towards your television to begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions on your new remote control.





Image: Front view of the remote control with button layout.

Power Button (): Turns the television on or off.

Input: Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).

Amazon / Netflix / iHeartRadio: Dedicated buttons for quick access to these streaming applications.

CC (Closed Captioning): Toggles closed captions on or off.

Playback Controls (Rewind, Play/Pause, Fast Forward, Stop): Controls media playback.

EXIT: Exits current menu or application.

BACK: Returns to the previous screen or menu.

MENU: Opens the TV's main menu.

INFO: Displays information about the current program or input.

Directional Pad (Up, Down, Left, Right): Navigates through menus and options.

OK: Confirms selections or enters a menu item.

VOL (+/-): Adjusts the volume level.

Mute (): Mutes or unmutes the television audio.

CH (Channel Up/Down): Changes television channels.

PIC (Picture Mode): Cycles through picture modes (e.g., Standard, Vivid, Custom).

GUIDE: Opens the electronic program guide.

Number Pad (0-9): Directly enters channel numbers.

ENTER: Confirms channel selection after using the number pad.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight when not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Remote control is not working.	◦ Ensure batteries are inserted correctly with the correct polarity. ◦ Replace old batteries with new AAA batteries. ◦ Check for any obstructions between the remote control and the TV's infrared sensor. ◦ Ensure you are within the effective range and pointing the remote directly at the TV.
Some buttons are not responding.	◦ Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. ◦ Replace batteries, as low power can sometimes cause intermittent button functionality.
Remote control works intermittently.	◦ Replace batteries. ◦ Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the IR signal.

SPECIFICATIONS

- Model Number:** RC-XRT122-DL107
- Compatible VIZIO Models:** M55-D0, XRT122, and others (check your TV's original remote for compatibility)
- Power Source:** 2 x AAA Batteries (not included)
- Product Dimensions:** 1.97 x 0.59 x 6.5 inches (approximately)
- Item Weight:** 2.38 ounces (without batteries)
- Color:** Black
- Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This UpStart Components Replacement Remote Control is covered by a warranty provided solely by UpStart Components. For warranty claims, technical support, or any questions regarding your product, please contact UpStart Components directly through their official support channels.

Please refer to the packaging or the UpStart Components website for the most current contact information and warranty details.