

Manuals.plus /

› UpStart Components /

› UpStart Components Replacement Remote Control for Insignia NS42E760A12 HDTV (Model NSRC02A12)

UpStart Components RC-NSRC02A12-DL4

UpStart Components Replacement Remote Control for Insignia NS42E760A12 HDTV (Model NSRC02A12)

Instruction Manual

1. INTRODUCTION

This manual provides instructions for the UpStart Components replacement remote control, designed to be compatible with Insignia NS42E760A12 HDTVs and function like the original NSRC02A12 remote control. Please read this manual carefully before use to ensure proper operation.

2. PRODUCT OVERVIEW

The UpStart Components replacement remote control is a direct replacement, offering full functionality without the need for programming. It is designed for ease of use and durability.





Figure 2.1: Front view of the remote control, displaying power, input, number, channel, volume, menu, and playback buttons.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 3.1: Back view of the remote control, highlighting the battery compartment cover.

Note: Batteries are not included with the remote control. Always use new batteries and dispose of old batteries responsibly.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with compatible Insignia TVs. No programming is required.

4.1. Basic Functions

- **Power ():** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, Video, Component).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (▲ ◀ ▼ ▶):** Navigate through menu options.
- **ENTER:** Confirms a selection in the menu.
- **EXIT:** Exits the current menu or on-screen display.
- **INFO:** Displays information about the current program or input.

4.2. Advanced Functions

- **FAVORITE:** Accesses favorite channels list.
- **MTS/SAP:** Selects Multi-channel Television Sound/Secondary Audio Program.
- **CCD:** Activates Closed Captioning.
- **ZOOM:** Adjusts screen zoom level.
- **SLEEP:** Sets a sleep timer for the TV.
- **CH-LIST:** Displays the channel list.
- **PICTURE:** Accesses picture settings.
- **AUDIO:** Accesses audio settings.
- **Playback Controls (◀◀ ▶▶, ■, ▶▶▶):** Control media playback if supported by the TV and source.

5. MAINTENANCE

5.1. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Refer to Section 3.1 for battery installation instructions.

5.2. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure the remote control is pointed directly at the TV.
- **Some buttons not working:**
 - This may indicate low battery power. Replace batteries.
 - Ensure the TV model is compatible with the NSRC02A12 remote.

7. SPECIFICATIONS

Model Number	RC-NSRC02A12-DL4
Compatible TV Models	Insignia NS42E760A12 HDTV (and other models compatible with NSRC02A12)
Power Source	2 x AAA Batteries (not included)
Connectivity	Infrared (IR)
Dimensions	6.42 x 1.97 x 0.79 inches (16.3 x 5.0 x 2.0 cm)
Weight	2.28 ounces (64.6 grams)
Manufacturer	UpStart Components

8. WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For support or warranty inquiries, please contact UpStart Components directly through their official channels.