

- Manuals.plus /
- › UpStart Components /
 - › UpStart Components Replacement D55-D2 Dual Side Remote Control for VIZIO TV - XRT500 User Manual

UpStart Components D55-D2

UpStart Components Replacement D55-D2 Dual Side Remote Control User Manual

Compatible with VIZIO TV models including XRT500

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your UpStart Components Replacement D55-D2 Dual Side Remote Control. This remote is designed to function as a direct replacement for your original VIZIO TV remote, including compatibility with models that use the XRT500 remote.

PRODUCT OVERVIEW

The D55-D2 remote control features a dual-sided design, offering standard TV control buttons on one side and a full QWERTY keyboard on the reverse side for enhanced text input capabilities.





Figure 1: Front Side of the Remote Control. This image displays the primary control surface of the remote, featuring standard television function buttons such as power, input selection, volume, channel navigation, and dedicated buttons for streaming services like Amazon, Netflix, and MGO.





Figure 2: Back Side of the Remote Control (QWERTY Keyboard). This image shows the reverse side of the remote, which integrates a compact QWERTY keyboard. This keyboard is designed for easier text entry, such as searching or entering passwords on compatible VIZIO Smart TVs.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

2. Initial Use

This replacement remote control is designed for immediate use with compatible VIZIO TVs. No programming or pairing is required. Once batteries are installed, the remote is ready to operate your television.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on both sides of the remote control for optimal use.

Front Side (TV Control)

- **Power Button** (●): Turns the TV on or off.
- **INPUT**: Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **Amazon, NETFLIX, MGO**: Direct access buttons for these streaming applications.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and select options.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (+/-)**: Changes the television channel.
- **Mute** (): Mutes or unmutes the TV audio.
- **MENU**: Opens the TV's main menu.
- **EXIT**: Closes the current menu or screen.
- **BACK**: Returns to the previous screen or menu.
- **GUIDE**: Displays the program guide (if available).
- **Number Pad (0-9)**: Directly enters channel numbers.
- **ENTER**: Confirms selections or enters channel numbers.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record)**: Controls media playback.
- **CC (Closed Caption)**: Toggles closed captions on or off.
- **INFO**: Displays information about the current program or input.
- **PIC (Picture Mode)**: Cycles through picture modes.

Back Side (QWERTY Keyboard)

To use the QWERTY keyboard, flip the remote over. The TV screen should automatically recognize the keyboard input when text entry is required (e.g., in search bars or login fields).



Figure 3: QWERTY Keyboard Layout. This image provides a detailed view of the full QWERTY keyboard, including alphanumeric keys, symbols, and function keys like TAB, CAPS SHIFT, ALT, and ENTER, designed for efficient text input.

- **Alphanumeric Keys:** Standard letters and numbers for text input.
- **Shift / Caps Shift:** Toggles uppercase letters or accesses secondary characters.
- **Alt:** Accesses alternative characters or functions.
- **Space:** Inserts a space.
- **Enter:** Confirms text input or selection.
- **DEL:** Deletes the character to the left of the cursor.
- **Arrow Keys:** For navigation within text fields or menus.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure the TV is powered on.
- **Buttons are unresponsive or sticky:**
 - Clean the remote control as described in the Maintenance section.
 - If the issue persists after cleaning and battery replacement, the remote may require replacement.
- **Keyboard not working:**
 - Ensure the remote is flipped to the keyboard side.

- Verify that the TV application or menu you are using supports keyboard input.
- Check batteries.

SPECIFICATIONS

Model Number	RC-XRT500-DL28 (Compatible with D55-D2, XRT500)
Brand	UpStart Components
Dimensions	1.97 x 0.79 x 6.5 inches
Item Weight	3.05 ounces
Batteries Required	2 x AAA (not included)
Connectivity Technology	Infrared
Compatible Devices	Television (VIZIO TVs compatible with XRT500 remotes)

WARRANTY AND SUPPORT

This product is covered by warranties offered solely by UpStart Components. For specific warranty details or support inquiries, please refer to the UpStart Components official website or contact their customer service directly. Please note that this is a replacement part and is not covered under any warranties offered by the original equipment manufacturers (OEMs).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CL4KQSX>

More documents and user manuals: <https://manuals.plus/>