

Manuals.plus /

- › UpStart Components /
- › UpStart Components Replacement Remote Control for Panasonic TV (N2QAYB000486, TC-32LX14) Instruction Manual

## UpStart Components RC-N2QAYB000485-DL2

# UpStart Components Replacement Remote Control for Panasonic TV (N2QAYB000486, TC-32LX14) - Instruction Manual

## 1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your UpStart Components replacement remote control. This remote is designed to be compatible with various Panasonic TV models, including those originally using the N2QAYB000486 remote and the TC-32LX14 HDTV model. It functions as a direct replacement, requiring no programming.

## 2. PRODUCT OVERVIEW

The UpStart Components replacement remote control is engineered to replicate the functionality and layout of the original Panasonic remote. It features a standard array of buttons for power, channel, volume, input selection, menu navigation, and playback controls.





**Figure 2.1:** Front view of the remote control, displaying the button layout for various functions including power, input, channel, volume, and navigation.

### 3. SETUP

#### 3.1. Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install

the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





**Figure 3.1:** Rear view of the remote control, highlighting the battery compartment for installation.

Once batteries are installed, the remote is ready for use with your compatible Panasonic TV. No programming is required.

## 4. OPERATING INSTRUCTIONS

---

This section details the primary functions of the buttons on your replacement remote control.

**POWER:** Turns the TV on or off.

**INPUT / VIERA Link:** Selects the input source (e.g., HDMI 1, AV, Component) or activates VIERA Link functions.

**MENU:** Accesses the TV's main menu.

**VIERA TOOLS:** Provides quick access to common VIERA functions.

**Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.

**RETURN / EXIT:** Returns to the previous screen or exits the current menu.

**VOL (+/-):** Increases or decreases the volume level.

**CH (Up/Down):** Changes the TV channel.

**MUTE:** Silences the TV audio.

**FORMAT:** Changes the screen aspect ratio or display format.

**INFO:** Displays information about the current program or input.

**FAVORITE:** Accesses favorite channels or settings.

**Number Pad (0-9, LAST, -):** Directly enters channel numbers. "LAST" recalls the previous channel. "-" is for digital sub-channels.

**Playback Controls (Rewind, Play, Fast Forward, Previous, Pause, Next):** Controls media playback functions when connected to compatible devices or media.

**Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or interactive services, as indicated on the TV screen.

## 5. MAINTENANCE

### 5.1. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

### 5.2. Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries simultaneously with new AA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation.

### 5.3. Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent potential leakage and damage.

## 6. TROUBLESHOOTING

### Remote is not responding:

- Ensure batteries are installed correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Check for any obstructions between the remote and the TV's infrared sensor.
- Ensure the remote is pointed directly at the TV.

### Certain buttons are not working:

- This may indicate a specific button malfunction or a need for battery replacement. Try replacing batteries first.
- Ensure the TV is in the correct mode for the button's function (e.g., playback buttons require media to be playing).

## 7. SPECIFICATIONS

<b>Brand</b>	UpStart Components
<b>Model Number</b>	RC-N2QAYB000485-DL2
<b>Compatible with</b>	Panasonic TV models (e.g., N2QAYB000486, TC-32LX14)
<b>Connectivity Technology</b>	Infrared
<b>Power Source</b>	2 x AA Batteries (not included)
<b>Product Dimensions</b>	9.06 x 1.97 x 0.91 inches
<b>Item Weight</b>	2.91 ounces

## 8. WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. It is not an OEM product and is

not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components.

For support or warranty inquiries, please refer to the contact information provided by UpStart Components at the point of purchase or on their official website. Please retain your proof of purchase for warranty claims.