



Manuals.plus /

- › **UpStart Components** /
- › UpStart Components Replacement Dual-Side Remote Control for VIZIO TV (XRT500 / M321i-A2) Instruction Manual

UpStart Components RC-XRT500-DL75

UpStart Components Replacement Dual-Side Remote Control for VIZIO TV (XRT500 / M321i-A2) Instruction Manual

INTRODUCTION

This manual provides instructions for the UpStart Components replacement dual-side remote control, designed for use with VIZIO TV models compatible with the XRT500 and M321i-A2 remote controls. This remote offers a traditional button layout on one side and a full QWERTY keyboard on the reverse side for enhanced functionality. It is a direct replacement and does not require programming.



Image: The UpStart Components dual-side remote control, showing its ergonomic design and the primary button layout. The remote is black with white and red buttons, featuring dedicated buttons for streaming services like Amazon and Netflix.

SETUP

The UpStart Components replacement remote control is designed for immediate use without complex setup procedures. Simply install batteries, and it will be ready to operate your compatible VIZIO TV.

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.

3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for operation. No programming or pairing is required for compatible VIZIO TV models.

OPERATING INSTRUCTIONS

This remote features two distinct sides for controlling your VIZIO TV: a primary control side and a full QWERTY keyboard side.

Primary Control Side (Front)

The front side of the remote provides standard TV control functions. Refer to the image below for button layout.





Image: The front face of the remote control, displaying buttons for power, input selection, navigation (up, down, left, right, OK), volume, channel, menu, guide, and dedicated app buttons for Amazon, Netflix, and M-GO.

- **Power Button (●):** Turns the TV on or off.
- **Input:** Selects the video input source (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes TV channels.
- **Mute ():** Mutes or unmutes the TV audio.
- **Menu:** Accesses the TV's main menu.
- **Guide:** Displays the TV program guide.
- **Dedicated App Buttons (Amazon, Netflix, M-GO):** Provides quick access to these streaming services.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback.

QWERTY Keyboard Side (Back)

The reverse side of the remote features a full QWERTY keyboard, useful for entering text in search fields, web browsers, or app interfaces on your VIZIO Smart TV.







Image: The back face of the remote control, featuring a compact QWERTY keyboard layout. Keys include letters, numbers, symbols, and function keys like Shift, Alt, Tab, Space, Enter, and Delete.

- **Typing:** Use the individual keys to input letters, numbers, and symbols.
- **Shift/Caps:** Toggles uppercase letters or accesses secondary key functions.
- **Alt:** Accesses alternative symbols on certain keys.
- **Space:** Inserts a space.
- **Enter:** Confirms input or selection.
- **Delete:** Removes characters.
- **Navigation Arrows:** Small arrow keys are also present for cursor movement within text fields.

To use the keyboard, simply flip the remote over. The TV should automatically recognize input from the active side.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

Storage

Store the remote in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure there is a clear line of sight between the remote and the TV's infrared sensor.
 - Check the batteries. Replace them if they are old or depleted.
 - Verify that the TV is powered on.
- **Buttons not working:**
 - Clean the remote's surface, especially around the buttons, to remove any debris that might be obstructing them.
 - Replace the batteries, even if other buttons seem to work, as low power can affect certain functions.
- **Keyboard not responding:**
 - Ensure the remote is flipped to the keyboard side.
 - Confirm that the TV's input field is active and ready for text entry.

- Check batteries as described above.

SPECIFICATIONS

Feature	Detail
Product Dimensions	1.97 x 0.79 x 6.5 inches
Item Weight	3.05 ounces
Item Model Number	RC-XRT500-DL75
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic, Dual-Side with QWERTY Keyboard

WARRANTY AND SUPPORT

This product is an UpStart Components brand replacement part and is not an OEM (Original Equipment Manufacturer) product. It is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

Any warranties for this product are offered solely by UpStart Components. For specific warranty details or support inquiries, please refer to the documentation provided with your purchase or contact UpStart Components directly through their official channels.

All mentions of brand names or model descriptions (e.g., VIZIO, XRT500, M321i-A2) are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners.