

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for VIZIO TV (Model RC-XRT112-DL41)

UpStart Components RC-XRT112-DL41

UpStart Components Replacement Remote Control for VIZIO TV (Model RC-XRT112-DL41)

Instruction Manual

INTRODUCTION

This manual provides instructions for the UpStart Components Replacement Remote Control, designed for VIZIO Smart TVs and compatible with models like XRT112. This remote is a direct replacement and does not require programming.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 1: Rear view of the remote control, highlighting the battery compartment cover. To open, slide the cover downwards.

2. Initial Use

This replacement remote control is designed to work immediately with compatible VIZIO TVs without any programming. Once batteries are installed, point the remote at your TV and begin use.

OPERATING INSTRUCTIONS

The remote control features standard buttons for TV operation, along with dedicated buttons for smart TV functions.



Image 2: Front view of the remote control, displaying all buttons including power, input, volume, channel, navigation, and dedicated app buttons.

- **Power Button:** Located at the top right, turns the TV on or off.
- **Input Button:** Selects the video input source (e.g., HDMI 1, HDMI 2).
- **Volume Up/Down:** Adjusts the TV's audio level.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back Button:** Returns to the previous screen or menu.
- **Menu Button:** Accesses the TV's main menu.
- **Dedicated App Buttons:** Quick access to streaming services like Netflix, Amazon, and MGO.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of

batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's infrared receiver.
- **Specific buttons not working:**
 - This remote is designed to be compatible with VIZIO TVs that originally used the XRT112 remote. Ensure your TV model is compatible.
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris that might be preventing proper contact.
- **Remote is not an OEM product:**
 - This is a replacement part manufactured by UpStart Components. While designed for compatibility, it is not an original VIZIO product.

SPECIFICATIONS

Model Number	RC-XRT112-DL41
Brand	UpStart Components
Compatible Devices	VIZIO Televisions (compatible with XRT112 models)
Batteries Required	2 x AAA (not included)
Product Dimensions	1.97 x 0.59 x 6.5 inches
Item Weight	2.38 ounces
Color	Black

WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components and are not covered under any warranties offered by the original manufacturers (e.g., VIZIO).

For support or warranty inquiries, please refer to the contact information provided by UpStart Components at the point of purchase or on their official website.

© 2024 UpStart Components. All rights reserved.

All brand names and logos mentioned are registered trademarks of their respective owners and are used strictly to illustrate compatibility.