

UpStart Components RC-XRT122-DL65

UpStart Components Replacement Remote Control for VIZIO Smart TVs

Compatible with XRT122 and E70C3 Models

1. INTRODUCTION

This manual provides instructions for the UpStart Components Replacement Remote Control, designed to function as a direct replacement for your original VIZIO Smart TV remote, specifically compatible with models that originally used the XRT122 or E70C3 remote controls. This remote offers the same functionality as the original, allowing you to control your VIZIO television with ease. No programming is required; simply install batteries and begin use.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.





Image: Back view of the remote control, indicating the battery compartment for AAA batteries.

Note: Batteries are not included with the remote control. Always use new batteries for optimal performance.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready for immediate use with your compatible VIZIO Smart TV. Point the remote directly at your television.





Image: Front view of the remote control, showing the layout of all buttons.

3.1 Basic Functions

- **Power ()**: Turns the TV on or off.
- **INPUT**: Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **VOL (+/-)**: Adjusts the volume level.
- **CH (+/-)**: Changes the television channel.
- **Mute ()**: Mutes or unmutes the TV audio.
- **Number Pad (0-9)**: Directly enters channel numbers.
- **ENTER**: Confirms selections.

3.2 Navigation and Menu Controls

- **Directional Pad (Up, Down, Left, Right)**: Navigates through menus and on-screen options.
- **OK**: Selects the highlighted item in a menu.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Closes the current menu or application.
- **MENU**: Opens the TV's main menu.
- **INFO**: Displays information about the current program or input.
- **GUIDE**: Accesses the electronic program guide (if available).

3.3 Quick Access Buttons

Dedicated buttons provide direct access to popular streaming services:

- **amazon**: Launches the Amazon Prime Video application.
- **NETFLIX**: Launches the Netflix application.
- **iHeartRadio**: Launches the iHeartRadio application.

3.4 Media Playback Controls

- **Rewind (◀◀)**: Rewinds media playback.
- **Play/Pause (▶||)**: Plays or pauses media.
- **Fast Forward (▶▶)**: Fast forwards media playback.

- **Stop (■):** Stops media playback.
- **Record (●):** Initiates recording (if supported by TV and external device).

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove old batteries promptly to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote and the TV's infrared sensor.
 - Verify the remote is pointed directly at the TV.
- **Certain buttons not working:**
 - This remote is designed to replicate the original functionality. If a specific button does not work, ensure your TV model originally supported that function with the XRT122 or E70C3 remote.
 - Clean the remote surface, especially around the unresponsive button, to remove any debris.

6. SPECIFICATIONS

- **Brand:** UpStart Components
- **Model Number:** RC-XRT122-DL65
- **Compatible Devices:** VIZIO Smart Televisions (models originally using XRT122 or E70C3 remotes)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 1.97 x 0.59 x 6.5 inches
- **Item Weight:** 2.38 ounces
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

This UpStart Components replacement part is not an OEM product. Any warranties for this product are offered solely by UpStart Components. For support or warranty inquiries, please refer to the contact information provided with your purchase or visit the UpStart Components official website.

All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners.

