

UpStart Components RC-AKB74915305-2PK-DL23

UpStart Components Replacement Remote Control for LG TV

Model: RC-AKB74915305-2PK-DL23

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your UpStart Components Replacement Remote Control for LG TV. This remote is designed to be compatible with various LG TV models, including those that originally used the AKB74915327 remote control, such as the 43UH7500-UA series. It functions as a direct replacement, requiring no programming.

PACKAGE CONTENTS

- 2 x UpStart Components Replacement Remote Control for LG TV

Note: AAA batteries are not included and must be purchased separately.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

This replacement remote control does not require any programming. Once batteries are installed, it is ready for use with compatible LG TV models.



Image: Back view of the remote control with the battery compartment.

OPERATING INSTRUCTIONS

The UpStart Components Replacement Remote Control is designed to function identically to the original LG TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

Basic Functions

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Selects channels directly.
- **VOL (+/-)**: Adjusts the volume level.
- **CH PAGE (▲/▼)**: Changes channels sequentially.

- **Mute Button** (): Mutes or unmutes the TV audio.

Navigation and Menu Functions

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK Button:** Confirms selections.
- **BACK Button:** Returns to the previous screen or menu.
- **EXIT Button:** Exits the current menu or application.
- **INFO Button:** Displays information about the current program.
- **MENU / SETTINGS Button (Gear icon):** Accesses the TV's main settings menu.

Special Functions

- **CAPTION Button:** Toggles closed captions on or off.
- **LIST Button:** Displays a list of channels or recorded programs.
- **FAV Button:** Accesses favorite channels.
- **FLASHBK Button:** Returns to the previously viewed channel.
- **RECENT Button:** Shows recently used apps or inputs.
- **LIVE MENU Button:** Accesses live TV features.
- **ZOOM Button:** Adjusts screen zoom.
- **SAP/* Button:** Selects Secondary Audio Program or other audio options.
- **SLEEP Button:** Sets the TV sleep timer.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback.





Image: Front view of the remote control, displaying button layout.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.

- Check if there are any obstructions between the remote and the TV.
- Verify that the batteries are inserted correctly with the correct polarity.
- Replace the batteries with new ones if they are depleted.
- **Some functions not working:**
 - Confirm that your TV model is fully compatible with the AKB74915327 remote control. While this remote is broadly compatible, specific advanced functions may vary slightly depending on the exact TV model.
 - Ensure the TV's firmware is up to date, if applicable.

SPECIFICATIONS

Product Dimensions	5.91 x 1.77 x 0.91 inches
Item Weight	2.38 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic design
Manufacturer	UpStart Components

WARRANTY AND SUPPORT

Any warranties for this UpStart Components replacement product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers. For support or warranty inquiries, please refer to the contact information provided with your purchase or visit the UpStart Components official website.