

UpStart Components RC-VB100U-DL5

UpStart Components Replacement Remote Control Instruction Manual

For Sony Blu-ray Disc Player Models BDP-S1500 and VB100U

INTRODUCTION

This manual provides comprehensive instructions for the UpStart Components replacement remote control, designed to be fully compatible with Sony Blu-ray Disc Player models BDP-S1500 and VB100U. This remote offers the same functionality as your original remote, ensuring seamless operation of your Blu-ray player. Please read this manual carefully before use to ensure proper setup and operation.

PACKAGE CONTENTS

- 1 x UpStart Components Replacement Remote Control (Model: RC-VB100U-DL5)

Note: Batteries are not included and must be purchased separately.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back view of the remote control with the battery compartment. The compartment cover slides downwards to reveal the battery slots.

Once batteries are installed, the remote control is ready for use. No programming is required.

OPERATING INSTRUCTIONS

Basic Functions

Point the remote control directly at your Sony Blu-ray Disc Player. Ensure there are no obstructions between the remote and the player. Press the desired button to perform the corresponding function.



Figure 2: Front view of the remote control, displaying the layout of all functional buttons including power, navigation, playback, and dedicated service buttons.

Key Button Functions

- **OPEN/CLOSE:** Opens or closes the disc tray.
- **INPUT:** Switches the input source on your TV (if the remote is programmed for TV control).
- **TV I/O (Power):** Turns the TV power on or off (if the remote is programmed for TV control).
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **RETURN:** Returns to the previous screen or menu.
- **OPTIONS:** Displays context-sensitive options during playback or menu navigation.
- **HOME:** Accesses the main home menu of the Blu-ray player.
- **NETFLIX:** Direct access button for the Netflix streaming service.
- **Playback Controls (PREV, PLAY, PAUSE, STOP, NEXT, FAST REWIND, FAST FORWARD):** Standard controls for disc playback.
- **SUBTITLE:** Toggles subtitle display.
- **AUDIO:** Changes audio tracks or formats.
- **VOL +/-, MUTING:** Controls the volume and mutes audio (if the remote is programmed for TV control).

- **DISPLAY:** Shows playback information or status.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

- **Remote is not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the Blu-ray player's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the player.
- **Some buttons are not working:**
 - This remote is specifically designed for Sony Blu-ray Disc Players BDP-S1500 and VB100U. Some buttons (e.g., TV power/volume) may require your Blu-ray player to have TV control capabilities or may not be functional if your player does not support that specific feature.
 - Clean the remote's surface and buttons to ensure no debris is interfering with button presses.
- **Limited range or intermittent response:**
 - Replace batteries with fresh ones.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

SPECIFICATIONS

Model Number	RC-VB100U-DL5
Compatible Devices	Sony Blu-ray Disc Players BDP-S1500, VB100U
Power Source	2 x AAA Batteries (not included)
Product Dimensions	5.12 x 1.77 x 0.71 inches (13 x 4.5 x 1.8 cm)
Item Weight	1.89 ounces (53.6 grams)
Color	Black

WARRANTY AND SUPPORT

This UpStart Components replacement remote control is covered by a warranty provided solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties

offered by the original manufacturers.

For any questions, troubleshooting assistance, or warranty claims, please contact UpStart Components customer support through the retailer where the product was purchased or refer to the official UpStart Components website for contact information.