

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for Panasonic TV (N2QAYB000525, TC-P42C2) User Manual

UpStart Components RC-N2QAYB000485-DL41

UpStart Components Replacement Remote Control User Manual

Compatible with Panasonic TV Models (e.g., TC-P42C2) and N2QAYB000525 Remote

INTRODUCTION

This document provides comprehensive instructions for the UpStart Components replacement remote control, model RC-N2QAYB000485-DL41. This remote is designed to function as a direct replacement for original Panasonic TV remote controls, including the N2QAYB000525, and is compatible with various Panasonic TV models such as the TC-P42C2. It offers a user-friendly experience with no programming required. Please note that this is an UpStart Components brand replacement product and is not an OEM (Original Equipment Manufacturer) item.

SETUP

1. Battery Installation

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AA alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back of the remote control showing the battery compartment.

2. Initial Use

This replacement remote control requires no programming. Once batteries are installed, it is ready for immediate use with your compatible Panasonic TV. Simply point the remote at your television and begin operating it.

OPERATING INSTRUCTIONS

The UpStart Components replacement remote control is designed to mimic the functionality of your original Panasonic TV remote. Below is a general guide to its primary functions. Refer to your television's original user manual for specific functions related to your TV model.



UpStart Components



Figure 2: Front of the remote control with button layout.

- **POWER:** Turns the TV on or off.
- **INPUT:** Selects the input source (e.g., HDMI 1, AV, Component).
- **MENU:** Accesses the TV's main menu.
- **VIERA TOOLS:** Accesses Panasonic's VIERA Tools menu (if supported by your TV).
- **VOL (+/-):** Adjusts the volume level.

- **CH (▲/▼):** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **Number Buttons (0-9):** Directly selects channels.
- **Navigation Buttons (▲, ▼, ◀, ▶):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **RETURN/EXIT:** Returns to the previous screen or exits a menu.
- **CC/SAP:** Accesses Closed Captioning or Secondary Audio Program options.
- **FORMAT/INFO/FAVORITE:** Provides access to various TV functions as labeled.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls playback of media (if supported by your TV and input source).

MAINTENANCE

Cleaning

To clean your remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA alkaline batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Ensure the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - This remote is designed to be compatible with many Panasonic TVs. Some advanced functions or buttons specific to certain original remotes might not be fully supported or may require your TV to be in a specific mode.
 - If a button is physically stuck, gently try to free it.
- **Interference:**
 - Bright light sources, such as direct sunlight or fluorescent lighting, can interfere with the remote's infrared signal. Try to minimize such interference.

SPECIFICATIONS

Feature	Detail
Brand	UpStart Components

Model Number	RC-N2QAYB000485-DL41
Compatible Devices	Television (Panasonic)
Connectivity Technology	Infrared
Controller Type	Button Control
Number of Buttons	25
Maximum Range	10 Meters (approx. 33 feet)
Batteries Required	2 AA Alkaline batteries (not included)
Color	Black
Item Weight	2.91 Ounces

WARRANTY AND SUPPORT

This product is an UpStart Components brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For support or warranty inquiries, please contact the seller or UpStart Components directly through the platform where the purchase was made. Please have your purchase details and product model number (RC-N2QAYB000485-DL41) ready when contacting support.

© 2024 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CL8FGBK>

More documents and user manuals: <https://manuals.plus/>