

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [UpStart Components](#) /
- › [UpStart Components Replacement Remote Control for VIZIO Smart TVs \(XRT112, E24-C1 Compatible\) - Instruction Manual](#)

UpStart Components RC-XRT112-DL5

UpStart Components Replacement Remote Control

Model: RC-XRT112-DL5

Compatible with VIZIO Smart TVs (XRT112, E24-C1)

INTRODUCTION

This manual provides instructions for the UpStart Components Replacement Remote Control, designed to function as a direct replacement for your original VIZIO Smart TV remote, specifically compatible with models that use the XRT112 and E24-C1 remote controls. This remote offers the same functionality as the original, ensuring seamless operation of your television.

Important Note: This is an UpStart Components brand replacement product and is not an OEM (Original Equipment Manufacturer) product. It is not affiliated with any OEM brands, and any warranties for this product are provided solely by UpStart Components. Brand names and model descriptions are used strictly to illustrate compatibility.

SETUP

The UpStart Components Replacement Remote Control is designed for immediate use without programming. Simply install the batteries, and it will be ready to operate your compatible VIZIO Smart TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



UpStart Components



Image: Back of the remote control with the battery compartment. Ensure correct battery polarity when inserting two AAA batteries.

Your remote is now ready for use. No additional programming or pairing is required.

OPERATING INSTRUCTIONS

This replacement remote control is designed to replicate the functionality of your original VIZIO Smart TV remote. Point the remote directly at your television's infrared sensor for optimal performance.





Image: Front view of the remote control, displaying all buttons for TV operation.

Key Functions

- **Power Button ():** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **Volume Up/Down (VOL +/-):** Adjusts the television's volume level.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute ():** Mutes or unmutes the television's audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back:** Returns to the previous menu or screen.
- **Menu:** Opens the TV's main settings menu.
- **Info:** Displays information about the current program or input.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **Numbered Buttons (0-9):** Directly enter channel numbers.
- **App Buttons (Amazon, Netflix, MGO):** Direct access to popular streaming applications.
- **Guide:** Opens the electronic program guide (if available).
- **Wide:** Adjusts the screen aspect ratio.

For specific functions related to your VIZIO TV model, refer to your television's original user manual.

MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Damage:** Do not drop the remote, expose it to water, or place heavy objects on it.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

1. **Remote Not Responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.

- Check the batteries. Replace them with fresh AAA batteries, ensuring correct polarity.
- Remove any obstructions between the remote and the TV.

2. Limited Range:

- Replace the batteries. Low battery power can reduce the remote's effective range.
- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.

3. Specific Buttons Not Working:

- Clean the remote, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing contact.
- If only certain app buttons (e.g., Netflix) are not working, ensure your TV is connected to the internet and the apps are functioning correctly on the TV itself.

4. Remote Still Not Working:

- If after trying the above steps the remote still does not function, it may indicate a faulty remote or an issue with your TV's infrared receiver.

SPECIFICATIONS

Brand	UpStart Components
Model Number	RC-XRT112-DL5
Compatible Devices	VIZIO Smart Televisions (compatible with XRT112, E24-C1 remotes)
Connectivity Technology	Infrared
Power Source	2 x AAA Batteries (not included)
Color	Black
Product Dimensions	1.97 x 0.59 x 6.5 inches
Item Weight	2.38 ounces
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This UpStart Components Replacement Remote Control is covered by a warranty provided solely by UpStart Components. This product is not covered under any warranties offered by the original manufacturers of VIZIO televisions. For warranty claims, technical support, or any questions regarding your replacement remote control, please contact UpStart Components directly. Refer to the packaging or the retailer's website for specific contact information. You can typically find support information on the [UpStart Components brand page](#) or through the retailer where the product was purchased.

This manual is for informational purposes only. UpStart Components is not responsible for any damages or issues arising from improper use of this product.