

GJS Gourmet Sealing Ring for 10/12 Liter/Quart Pressure Cookers

GJS Gourmet Electric Pressure Cooker Sealing Ring User Manual

MODEL: FOR 10 LITER, 12 LITER, 10 QUART, OR 12 QUART PRESSURE COOKERS

1. Introduction

This manual provides instructions for the proper installation, use, and maintenance of your GJS Gourmet Electric Pressure Cooker Sealing Ring. This sealing ring is designed for many 10 Liter, 12 Liter, 10 Quart, or 12 Quart electric pressure cooker models. Please read these instructions carefully before use to ensure safe and effective operation.

2. Safety Information

- Always ensure the pressure cooker is unplugged and completely depressurized before attempting to remove or install the sealing ring.
- Inspect the sealing ring for any cracks, tears, or deformation before each use. A damaged ring can lead to pressure leakage and unsafe operation.
- Use only genuine GJS Gourmet replacement parts to ensure compatibility and safety.
- Keep out of reach of children.

3. Product Overview & Compatibility

The GJS Gourmet Electric Pressure Cooker Sealing Ring is made from high-quality, durable, and flexible food-grade silicone. It is a crucial component for maintaining pressure within your electric pressure cooker.

Dimensions:

Interior Diameter: 27.5 cm

Exterior Diameter: 29.5 cm

This size is compatible with many 10 and 12 quart or liter pressure cookers.

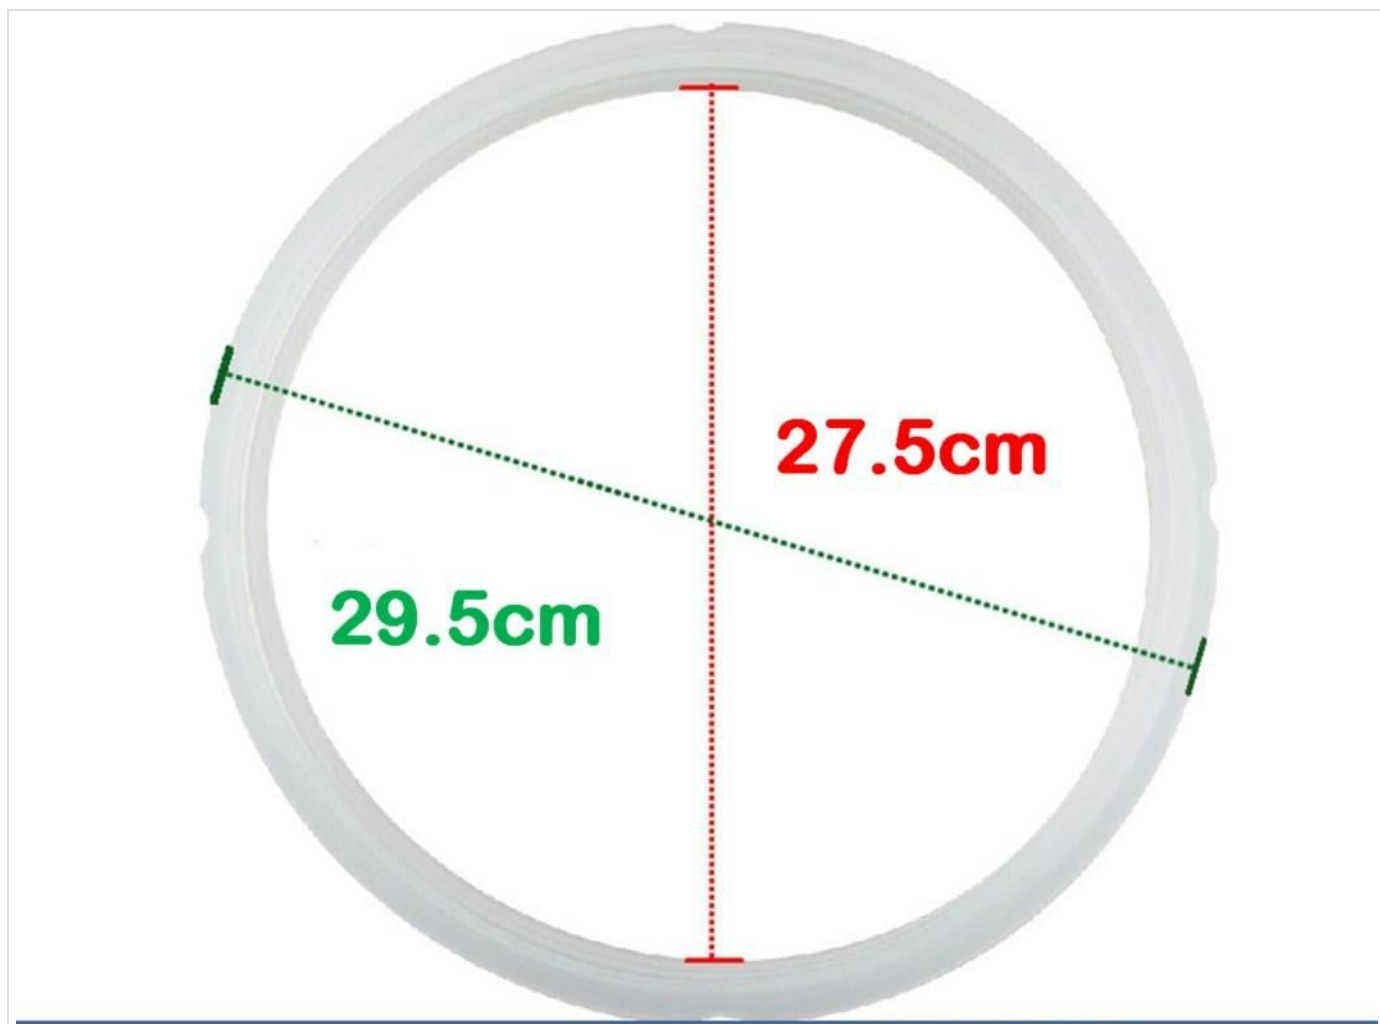


Image 3.1: Sealing Ring Dimensions (27.5 cm interior, 29.5 cm exterior)

Important Compatibility Warning:

It is essential to measure the diameter of your existing pressure cooker pot or lid to ensure you purchase the correct size sealing ring. While this ring fits many 10 and 12 quart/liter models, some 10 quart cookers may require a different size (26.0 cm interior diameter and 28.0 cm exterior diameter). If your cooker requires the smaller size, please search for product B09L1L6XYG.

Warning

Size of this ring: 27.5 cm interior diameter and 29.5 cm exterior diameter. This is the size for many 10 and 12 quart or litter pressure cookers

A few 10 quart cookers: 26.0 cm interior diameter and 28.0 cm exterior diameter. Please search for Amazon using keyword B09L1L6XYG to find this type of ring.

Image 3.2: Compatibility Warning for Sealing Ring Sizes

4. Setup & Installation

Follow these steps to replace your pressure cooker's sealing ring:

1. **Prepare the New Ring:** Soak the newly received silicone ring in warm soapy water for a few minutes. This helps to straighten it out and makes installation easier due to the flexible material.
2. **Remove the Old Ring:** Carefully pull the old sealing ring out from the groove on the underside of your pressure cooker lid.

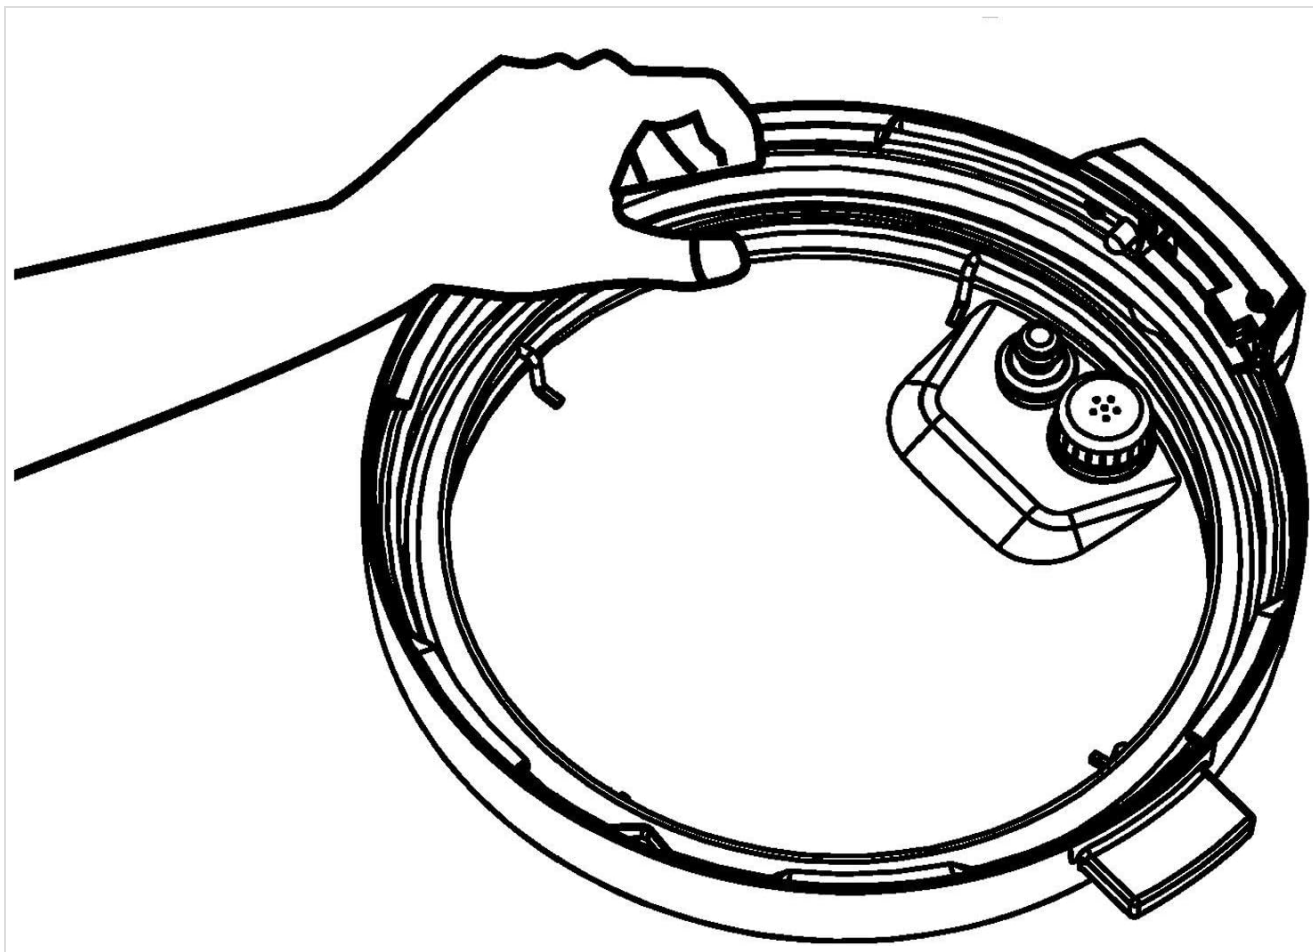


Image 4.1: Removing the Old Sealing Ring

3. **Install the New Ring:** Place the new, softened sealing ring into the groove on the underside of the lid. Ensure it is seated evenly and securely all the way around. The soapy water from step 1 will help the ring slide into place effortlessly.

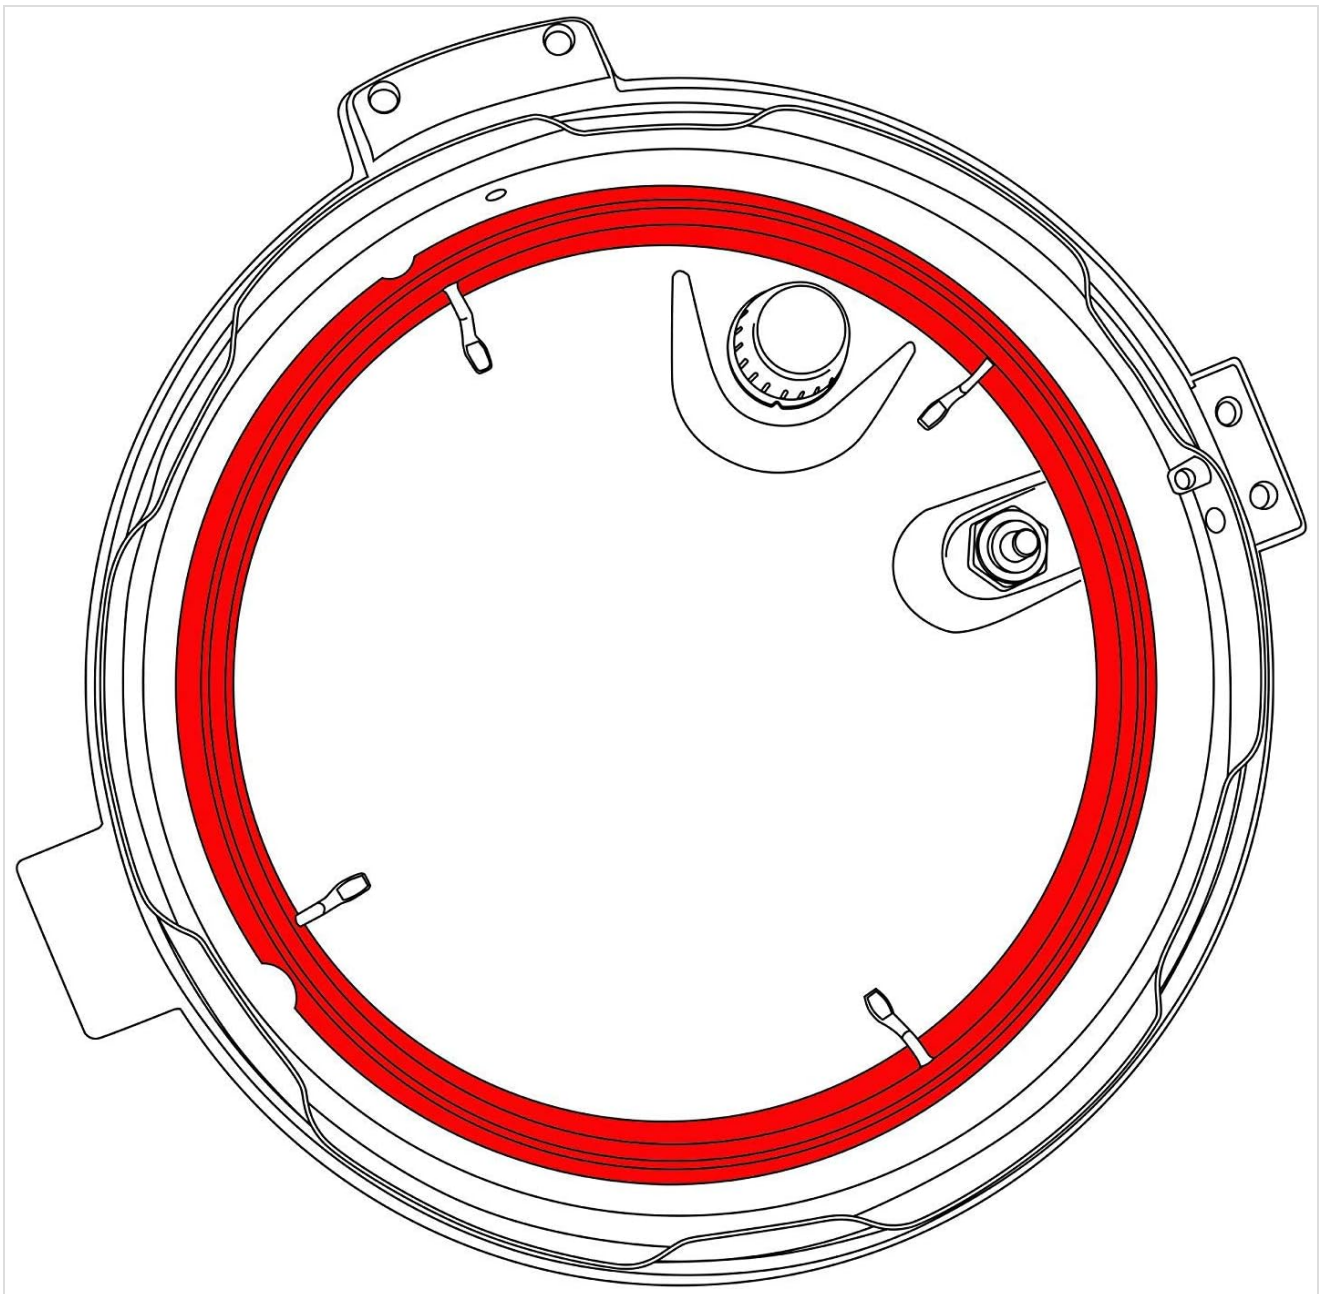 


Image 4.2: Installing the New Sealing Ring

Installation Video:



Video 4.1: EZ Steps to Install Silicone Pressure Ring or Gasket. This video demonstrates the process of soaking the new ring, removing the old one, and installing the new sealing ring into a pressure cooker lid.

5. Operating Instructions

After installing the new sealing ring:

- Ensure the sealing ring is perfectly seated in its groove before closing the pressure cooker lid.
- Close the lid according to your pressure cooker's manufacturer instructions, ensuring it locks securely.
- Always perform a water test (cooking water only) after replacing the sealing ring to confirm proper sealing before cooking food.

6. Maintenance & Care

Proper care extends the life of your sealing ring and ensures safe operation:

- **Cleaning:** Hand wash the sealing ring with warm, soapy water after each use. Rinse thoroughly and allow it to air dry completely before storing.
- **Dishwasher Safety:** This sealing ring is **not** dishwasher safe. Washing in a dishwasher may cause damage or deformation.
- **Storage:** Store the sealing ring flat and away from direct sunlight or extreme temperatures to prevent deformation.
- **Replacement:** Sealing rings are consumable parts and should be replaced every 6-12 months, or sooner if signs of wear, cracking, or leakage are observed.

7. Troubleshooting

If your pressure cooker is not sealing properly or is leaking pressure after replacing the ring, consider the following:

- **Incorrect Installation:** Ensure the sealing ring is fully and evenly seated in the groove of the lid. Remove and re-install if necessary.
- **Ring Damage:** Inspect the ring for any nicks, cuts, or permanent deformation. Even minor damage can prevent a proper seal. Replace the ring if damaged.
- **Lid Issues:** Check that the pressure cooker lid is clean and free from food debris, which could interfere with the seal. Ensure the lid is closed and locked correctly according to your cooker's instructions.
- **Incorrect Size:** Double-check that you have the correct size sealing ring for your specific pressure cooker model. Refer to Section 3 for compatibility information.

8. Specifications

Brand	GJS Gourmet
Material	Food-Grade Silicone
Color	Clear
Interior Diameter	27.5 cm
Exterior Diameter	29.5 cm
Compatibility	Many 10 Liter, 12 Liter, 10 Quart, or 12 Quart Electric Pressure Cookers
Dishwasher Safe	No

9. Warranty & Support

Return Policy: This product is eligible for a 30-day refund or replacement policy from the date of purchase, subject to the retailer's terms and conditions.

For further assistance or inquiries, please refer to the official GJS Gourmet website or contact your retailer's customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question