

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for LG TV - Instruction Manual

UpStart Components RC-AGF76692608-DL109

UpStart Components Replacement Remote Control for LG TV

Model: RC-AGF76692608-DL109

INTRODUCTION

This manual provides instructions for the UpStart Components Replacement Remote Control, designed to operate various LG TV models, including those originally compatible with AGF76692608 and 60PN5700-UA remotes. This remote is a direct replacement and does not require programming.





Image: Front view of the UpStart Components Replacement Remote Control. It features a black casing with various buttons for TV operation, including power, number pad, volume, channel, navigation, and smart TV functions.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



UpStart Components



Image: Back view of the UpStart Components Replacement Remote Control, showing the battery compartment cover. The cover is designed to slide open for battery insertion.

Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Point the remote directly at your LG TV and press the desired function button.

OPERATING INSTRUCTIONS

This section outlines the primary functions of the remote control buttons.





Image: Detailed front view of the UpStart Components Replacement Remote Control, highlighting the layout of all buttons for TV operation.

- **Power Button** (●): Turns the TV on or off. Located at the top right.
- **TV/Blu-ray Mode Buttons:** Switches between TV and Blu-ray player control modes.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Ratio Button:** Adjusts the screen aspect ratio.
- **Number Pad (0-9):** Directly enters channel numbers.
- **LIST Button:** Displays the channel list.
- **FAV Button:** Accesses favorite channels.
- **VOL +/- Buttons:** Increases or decreases the volume level.
- **CH +/- Buttons:** Changes the TV channel up or down.
- **MUTE Button:** Mutes or unmutes the TV audio.
- **Home/Smart Button:** Accesses the TV's Smart Home menu or dashboard.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections. The OK button is in the center.
- **Back Button** (↶): Returns to the previous screen or menu.
- **INFO Button:** Displays information about the current program or input.
- **EXIT Button:** Exits the current menu or application.
- **Netflix Button:** Direct access to the Netflix application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls media playback.
- **Open/Close Button:** For disc tray operation on compatible devices.
- **Repeat Button:** Repeats playback.
- **Title/Popup Button:** Accesses title or popup menus on compatible devices.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	• Ensure batteries are installed correctly with the correct polarity (+/-). • Replace old batteries with new AAA batteries. • Check for any obstructions between the remote control and the TV's infrared sensor. • Ensure you are within the effective range and pointing the remote directly at the TV.
Some buttons are not responding.	• Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris. • Ensure the remote is in the correct mode (e.g., TV mode for TV functions). • If only specific advanced functions are not working, verify your TV model supports those functions with a standard remote.
Remote control works intermittently.	• This often indicates low battery power. Replace the batteries. • Check for strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the infrared signal.

SPECIFICATIONS

Brand	UpStart Components
Model Number	RC-AGF76692608-DL109
Compatible Devices	LG Televisions (compatible with original AGF76692608 and 60PN5700-UA remotes)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	9.13 x 1.81 x 0.83 inches
Item Weight	3.4 ounces
Color	Black
Special Feature	Ergonomic design

WARRANTY INFORMATION

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the

original manufacturers. For specific warranty details, please refer to the documentation provided with your purchase or contact UpStart Components directly.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your UpStart Components Replacement Remote Control that are not addressed in this manual, please contact the seller or UpStart Components customer support for assistance. Please have your product model number (RC-AGF76692608-DL109) available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CLBXWC3>

More documents and user manuals: <https://manuals.plus/>