

UpStart Components RC-XRT122-DL12

UpStart Components Replacement Remote Control for VIZIO TVs

MODEL: RC-XRT122-DL12

Instruction Manual

Introduction

Thank you for choosing the UpStart Components Replacement Remote Control. This remote is designed to function like your original VIZIO TV remote, offering easy setup and reliable performance. Please read this manual carefully to ensure proper use and longevity of your remote control.

This remote control is compatible with various VIZIO Smart TV models, including those originally using XRT122 and XRT133 remotes.

Setup

Installing Batteries

The remote requires **2 AAA batteries** (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming is required. The remote is ready to use once batteries are installed.



This image displays the back of the UpStart Components replacement remote control, indicating the location of the battery compartment cover.

Operating Instructions

Basic Functions

This remote operates using infrared (IR) technology. Ensure a clear line of sight between the remote and your VIZIO TV's IR receiver for optimal performance.







This image shows the front of the UpStart Components replacement remote control, highlighting its button layout including power, input, streaming service shortcuts, volume, channel, navigation, and number pad.

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Amazon / Netflix Buttons:** Direct access to Amazon Prime Video and Netflix streaming services.
- **Volume Up/Down:** Adjusts the TV's volume level.
- **Channel Up/Down:** Changes the TV channel.
- **Mute Button:** Mutes or unmutes the TV audio.
- **OK Button:** Confirms selections in menus.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through on-screen menus and options.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Menu Button:** Opens the TV's main menu.
- **Info Button:** Displays information about the current program or input.
- **Guide Button:** Opens the electronic program guide (if available).
- **Number Pad (0-9):** Directly enters channel numbers.

Maintenance

Cleaning the Remote

Use a soft, dry cloth to clean the remote. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries or different types of batteries.

Storage

Avoid exposing the remote to extreme temperatures, high humidity, or direct sunlight. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

Troubleshooting

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions.
 - Try moving closer to the TV.

- **Specific Buttons Not Working:**

- Check for any physical damage or debris stuck under the buttons.
- If only certain functions are not working, verify that your TV model fully supports those functions with a replacement remote.

- **Limited Functionality:**

- While broadly compatible, some advanced or unique functions of your original VIZIO remote might not be replicated exactly on this replacement unit. Refer to your TV's original manual for specific features.

Specifications

Feature	Detail
Model Number	RC-XRT122-DL12
Product Dimensions	1.97 x 0.59 x 6.5 inches
Item Weight	2.38 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	VIZIO Televisions
Special Feature	Ergonomic Design
Manufacturer	UpStart Components

Warranty and Support

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For support or warranty inquiries, please contact UpStart Components directly through your purchase platform or their official website.