

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for VIZIO TV (M70-C3, XRT500) Instruction Manual

## UpStart Components RC-XRT500-DL117

# UpStart Components Replacement Remote Control for VIZIO TV (M70-C3, XRT500)

Model: RC-XRT500-DL117

Brand: UpStart Components

## INTRODUCTION

This manual provides instructions for the UpStart Components Replacement Remote Control, designed for use with VIZIO TV models M70-C3 and XRT500. This remote control offers functionality similar to the original remote, ensuring a seamless user experience. It is a direct replacement and does not require programming.

## SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.
- Avoid exposing the remote control to extreme temperatures or direct sunlight.

## PACKAGE CONTENTS

- 1 x UpStart Components Replacement Remote Control (Model: RC-XRT500-DL117)

*Note: Batteries are not included and must be purchased separately.*

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with

the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for use. No programming is required.

## OPERATING INSTRUCTIONS

This remote control features a dual-sided design, with standard TV controls on one side and a full QWERTY keyboard on the other for easier text input.

### Front Side: TV Controls





*Image: Front side of the remote control. This side features standard television control buttons, including power, input selection, volume up/down, channel up/down, mute, navigation arrows with an OK button, and dedicated buttons for streaming services like Amazon and Netflix.*

- **Power Button:** Turns the VIZIO TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Volume (VOL) Buttons:** Adjusts the television's volume level.
- **Channel (CH) Buttons:** Changes the television channel.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back Button:** Returns to the previous menu or screen.
- **Menu Button:** Accesses the TV's main menu.
- **Dedicated App Buttons:** Provides quick access to specific streaming applications (e.g., Amazon, Netflix).

### Back Side: QWERTY Keyboard





*Image: Back side of the remote control. This side features a complete QWERTY keyboard, designed for efficient text entry when searching, browsing, or entering passwords on your VIZIO TV. It includes alphanumeric keys, symbols, and modifier keys like Shift and Alt.*

The QWERTY keyboard is ideal for entering text in search fields, web browsers, or login screens on your VIZIO Smart TV. Simply flip the remote to this side when text input is required.

- **Alphanumeric Keys:** Standard letters and numbers for typing.
- **Shift/Caps Lock:** For uppercase letters and alternative characters.
- **Space Bar:** Inserts a space.
- **Enter Key:** Confirms input or selection.
- **DEL Key:** Deletes characters.
- **Navigation Arrows:** For cursor movement within text fields.

## MAINTENANCE

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

### Battery Replacement

If the remote control's performance degrades or it stops responding, replace the batteries. Follow the "Battery Installation" steps in the Setup section to replace the two (2) AAA batteries.

## TROUBLESHOOTING

- **Remote not responding:**
  - Ensure fresh AAA batteries are correctly installed.
  - Check for any obstructions between the remote and the TV's infrared sensor.
  - Verify that the TV is powered on.
- **Buttons not working:**
  - Clean the remote control surface to ensure no debris is interfering with button presses.
  - Replace batteries.

## SPECIFICATIONS

| Feature                    | Detail                                     |
|----------------------------|--------------------------------------------|
| Brand                      | UpStart Components                         |
| Model Number               | RC-XRT500-DL117                            |
| Compatible VIZIO TV Models | M70-C3, XRT500                             |
| Connectivity Technology    | Infrared (IR)                              |
| Power Source               | 2 x AAA Batteries (not included)           |
| Product Dimensions         | 1.97 x 0.79 x 6.5 inches                   |
| Item Weight                | 3.05 ounces                                |
| Special Feature            | Ergonomic, Dual-sided with QWERTY keyboard |

## WARRANTY AND SUPPORT

---

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For support or warranty inquiries, please contact UpStart Components directly.