



Manuals.plus /

› UpStart Components /

› UpStart Components Replacement Remote Control for LG TV Models 42LD450-ZA and AKB74115501 Instruction Manual

## UpStart Components RC-AKB74115501-DL135

# UpStart Components Replacement Remote Control Instruction Manual

COMPATIBLE WITH LG TV MODELS 42LD450-ZA AND AKB74115501

## Introduction

---

This manual provides instructions for the UpStart Components replacement remote control, designed to function as a direct substitute for the original LG TV remote control models 42LD450-ZA and AKB74115501. This remote offers the same functionality and button layout as the original, ensuring seamless operation with your compatible LG television.

Please note: This is a replacement product manufactured by UpStart Components and is not an original equipment manufacturer (OEM) product. It is engineered to provide reliable performance for your compatible LG TV.

## Package Contents

---

- 1 x UpStart Components Replacement Remote Control
- *Note: AAA batteries are not included and must be purchased separately.*

## Setup

---

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.

4. Slide the battery cover back into place until it clicks securely.





**Figure 1:** Rear view of the remote control, illustrating the battery compartment for AAA battery insertion.

Once batteries are installed, the remote control is ready for use. No programming is required.

## Operating Instructions

---

This remote control is designed to replicate the functions of your original LG TV remote. Point the remote directly at your television's infrared receiver for optimal performance.





Figure 2: Front view of the remote control, highlighting the various function buttons.

## Key Functions Overview

- **POWER** (⏻): Turns the television on or off.
- **INPUT**: Selects the video input source (e.g., HDMI 1, AV, Component).
- **TV**: Switches to TV mode.
- **Number Buttons (0-9)**: Directly enter channel numbers.
- **LIST**: Displays a list of available channels.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (▲/▼)**: Changes channels up or down.
- **MUTE**: Silences or restores the television's audio.
- **Navigation Pad** (◀ ▶ ▲ ▼): Navigates through menus and options.
- **ENTER** (Ⓞ): Confirms a selection in menus.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Closes the current menu or application.
- **HOME**: Accesses the TV's main home screen or smart features.
- **SMART TV / Premium**: Direct access to smart TV features or premium content services.
- **Q.MENU**: Quick menu access for common settings.
- **3D OPTION**: Activates or adjusts 3D viewing modes (if supported by TV).
- **LIVE TV**: Switches to live television broadcast.

- **INFO:** Displays information about the current program or input.
- **REC:** Initiates recording (if TV supports PVR functionality).
- **MY APPS / WIDGETS:** Accesses installed applications or widgets.

For detailed information on specific TV functions, refer to your LG television's original user manual.

## Maintenance

### Cleaning

To clean the remote control, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

### Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- If the remote will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage to the remote.
- Dispose of used batteries according to local regulations.

## Troubleshooting

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed directly at TV.	Replace batteries. Ensure a clear line of sight to the TV's infrared sensor. Point the remote directly at the TV.
Specific buttons are not working.	Dirt or debris under the button; Internal malfunction.	Clean the remote surface. If the issue persists after battery replacement, the remote may require replacement.

## Specifications

- **Brand:** UpStart Components
- **Model Number:** RC-AKB74115501-DL135
- **Compatible LG TV Remote Models:** 42LD450-ZA, AKB74115501
- **Product Dimensions:** 9.13 x 1.81 x 0.83 inches
- **Item Weight:** 2.5 ounces
- **Batteries Required:** 2 x AAA (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Television
- **Special Feature:** Ergonomic design

## Warranty and Support

---

This UpStart Components replacement remote control is covered by a warranty provided solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For warranty claims or technical assistance, please contact UpStart Components directly through their official support channels. Refer to your purchase documentation for specific warranty terms and contact information.