

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for Panasonic TV Models TC-L32C12 and N2QAYB000504 User Manual

UpStart Components RC-N2QAYB000485-DL20

UpStart Components Replacement Remote Control User Manual

For Panasonic TV Models TC-L32C12 and N2QAYB000504

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your UpStart Components Replacement Remote Control. This remote is designed to function as a direct replacement for your original Panasonic TV remote, specifically compatible with models TC-L32C12 and N2QAYB000504. Please read these instructions carefully before use.

2. PRODUCT OVERVIEW

The UpStart Components Replacement Remote Control is engineered to provide seamless control over your compatible Panasonic television. It features a design that mirrors the original remote, ensuring familiarity and ease of use. No programming is required; simply insert batteries to begin operation.





Figure 2.1: Front view of the UpStart Components Replacement Remote Control. This image displays the full layout of the remote control, including all buttons such as Power, Input, Volume, Channel, Menu, and number keys, designed to match the original Panasonic remote.

Key Features:

- **Direct Replacement:** Functions identically to the original remote control.

- **No Programming Required:** Ready to use immediately after battery installation.
- **Durable Construction:** Made from quality materials for extended lifespan.
- **Ergonomic Design:** Comfortable to hold and operate.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery cover back into place until it clicks securely.

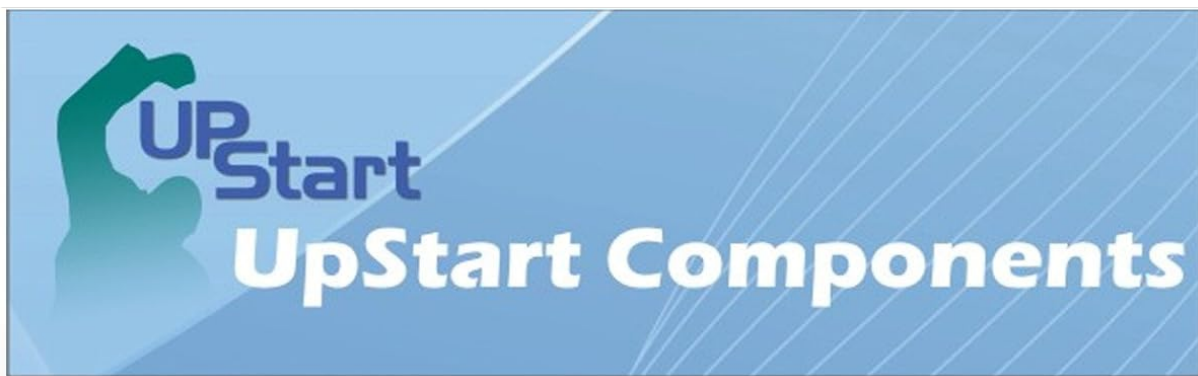


Figure 3.1: Back view of the remote control. This image highlights the battery compartment, indicating where to open and insert the AA batteries.

Once batteries are installed, the remote control is ready for use with your compatible Panasonic TV.

4. OPERATING INSTRUCTIONS

This replacement remote control is designed to operate your Panasonic TV in the same manner as the original remote. Point the remote control directly at your television's infrared receiver.

Common Button Functions:

- **POWER:** Turns the TV on or off.

- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **MENU:** Accesses the TV's main menu for settings adjustments.
- **VOL +/-:** Increases or decreases the volume level.
- **CH +/-:** Changes the television channel up or down.
- **MUTE:** Silences or restores the TV audio.
- **Number Buttons (0-9):** Directly select channels.
- **Navigation (Up/Down/Left/Right) & OK:** Used to navigate menus and confirm selections.
- **RETURN/EXIT:** Returns to the previous screen or exits the current menu.

5. MAINTENANCE

5.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.

5.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types of batteries.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device.

6. TROUBLESHOOTING

Remote Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AA batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared receiver.
- **Distance:** Ensure you are within the effective operating range of the TV.
- **TV Power:** Confirm that the TV is powered on and not in standby mode.

Intermittent Operation:

- This often indicates low battery power. Replace the batteries.
- Ensure the remote's infrared emitter is clean and free from debris.

7. SPECIFICATIONS

- **Model Number:** RC-N2QAYB000485-DL20
- **Product Dimensions:** 9.06 x 1.97 x 0.91 inches

- **Item Weight:** 2.91 ounces
- **Batteries Required:** 2 x AA (not included)
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Television (Panasonic models TC-L32C12, N2QAYB000504)
- **Max Number of Supported Devices:** 1

8. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. It is not an OEM (Original Equipment Manufacturer) product and is not affiliated with any OEM brands. This product is not covered under any warranties offered by the original manufacturers.

Any warranties for this product are offered solely by UpStart Components. For warranty claims or technical support, please contact UpStart Components directly through their official channels. Please refer to your purchase documentation for specific warranty terms and contact information.

All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners.