

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [UpStart Components](#) /
- > [Upstart Components Replacement TV Remote Control for LG TV Models including 65UH6030-UC - User Manual](#)

UpStart Components RC-AKB74915305-DL112

Upstart Components Replacement TV Remote Control for LG TV Models - User Manual

Model: RC-AKB74915305-DL112



INTRODUCTION

This manual provides instructions for the Upstart Components Replacement TV Remote Control, designed for compatibility with various LG TV models, including the 65UH6030-UC and those originally using AKB74915416 remotes. This remote offers a direct replacement experience without the need for complex programming.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



UpStart Components



Image: Back view of the remote control, illustrating the battery compartment. The cover slides off to reveal slots for two AAA batteries.

Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Simply point the remote at your LG TV and begin operating it.

OPERATING INSTRUCTIONS

This remote control is designed to replicate the functionality of your original LG TV remote. Below are descriptions of

common buttons and their functions.





Image: Front view of the remote control, displaying its array of buttons for TV operation. The Upstart Components logo is visible at the top.

- **Power (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Page Up/Down):** Changes channels sequentially.
- **Mute ():** Mutes or unmutes the TV audio.
- **Input/Source:** Selects the input source (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Home/Smart:** Accesses the TV's smart features or home screen.
- **Settings/Gear (⚙):** Opens the TV's settings menu.
- **Play/Pause/Stop/Rewind/Fast Forward:** Controls media playback.

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote.

Battery Care

- Replace batteries when the remote's responsiveness decreases.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Point the remote directly at the TV's sensor.

- **Specific buttons not working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
- If only a few buttons are affected, it might indicate internal damage; consider contacting support.

- **Short operating range:**

- Replace the batteries. Weak batteries can reduce the remote's effective range.
- Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR sensor.

SPECIFICATIONS

Model Number	RC-AKB74915305-DL112
Brand	UpStart Components
Compatible Devices	LG Televisions (e.g., 65UH6030-UC, AKB74915416 series)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Color	Black
Product Dimensions	5.91 x 1.77 x 0.91 inches
Item Weight	2.38 ounces
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This product is a replacement part manufactured by Upstart Components. Any warranties for this product are offered solely by Upstart Components and are not covered under any warranties offered by the original manufacturers.

For support or warranty inquiries, please contact Upstart Components directly through their official channels or the retailer from whom the product was purchased.

© 2024 Upstart Components. All rights reserved.

All brand names and logos mentioned are registered trademarks of their respective owners and are used strictly to illustrate compatibility.