

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NeeGo](#) /

› [NeeGo Portable Boombox B07CLH45SL User Manual](#)

NeeGo B07CLH45SL

NeeGo Portable Boombox B07CLH45SL User Manual

Model: B07CLH45SL

Introduction	Safety Information	Package Contents	Product Overview	Setup	Operation
Maintenance	Troubleshooting	Specifications	Warranty & Support		

1. INTRODUCTION

Thank you for choosing the NeeGo Portable Boombox B07CLH45SL. This versatile audio system combines a CD player, cassette player, AM/FM radio, and includes a NeeGo Bluetooth receiver for wireless audio streaming. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the best experience from your device.

2. SAFETY INFORMATION

- Read all instructions before operating the unit.
- Keep the unit away from water, moisture, and direct sunlight.
- Do not block ventilation openings.
- Use only the power sources specified in this manual.
- Do not attempt to repair the unit yourself. Refer all servicing to qualified personnel.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- NeeGo Portable Boombox (Main Unit)

- NeeGo Bluetooth Receiver
- AC Power Cord
- 3.5mm Audio Cable (for Bluetooth receiver connection)
- USB Charging Cable for Bluetooth Receiver



Figure 3.1: Contents of the NeeGo Portable Boombox bundle, including the main unit, Bluetooth receiver, and necessary cables.

4. PRODUCT OVERVIEW

4.1. Main Boombox Unit

The main unit features controls for CD, cassette, and radio functions, along with volume and input selection. Key features include:

- AM/FM Radio Tuner
- CD Player (supports standard and MP3 CDs)
- Cassette Player/Recorder
- Headphone Output (3.5mm stereo mini)
- Auxiliary Input (3.5mm)
- Automatic Shut-off Sleep Timer



Figure 4.1: Front panel and key features of the NeeGo Portable Boombox.

4.2. NeeGo Bluetooth Receiver

The included NeeGo Bluetooth receiver allows you to stream audio wirelessly to your boombox. It is compact and connects via the 3.5mm auxiliary port.

- Universal 3.5mm Stereo Port
- Micro Charge Port (for charging the receiver)
- Built-in Microphone (for hands-free calls, if supported by your device)



Figure 4.2: Detailed view of the NeeGo Bluetooth Receiver ports.

5. SETUP

5.1. Powering the Boombox

The boombox can be powered by either AC power or batteries.

AC Power Connection:

1. Ensure the boombox is turned off.
2. Connect the supplied AC power cord to the AC IN jack on the back of the boombox.
3. Plug the other end of the AC power cord into a standard wall outlet.

Battery Installation:

For portable use, the boombox requires 6 'C' size batteries (not included).

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 6 'C' size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.

3. Close the battery compartment cover securely.

5.2. Connecting and Charging the Bluetooth Receiver

The NeeGo Bluetooth receiver allows your boombox to receive wireless audio signals.

Charging the Bluetooth Receiver:

Before first use, fully charge the Bluetooth receiver.

1. Connect the micro USB charging cable to the micro charge port on the Bluetooth receiver.
2. Connect the other end of the USB cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The indicator light on the receiver will show charging status (e.g., red while charging, off when fully charged). A full charge provides approximately 6 hours of operation.

Connecting to the Boombox:

1. Plug the 3.5mm audio cable into the universal 3.5mm stereo port on the Bluetooth receiver.
2. Plug the other end of the 3.5mm audio cable into the AUX IN jack on the boombox.
3. Set the boombox's function selector to 'AUX' or 'AUDIO IN'.

PORTABILITY

The Wireless Bluetooth Receiver Adapter Weights Than 100 Grams And Is Very Small In Dimension. Therefore, The Adapter Can Be Plugged In Anywhere.



Figure 5.1: The NeeGo Bluetooth Receiver connected to the boombox for wireless audio.

6. OPERATING INSTRUCTIONS

6.1. Basic Operation

- **Power On/Off:** Press the POWER button to turn the unit on or off.
- **Volume Control:** Rotate the VOLUME knob to adjust the sound level.
- **Function Selection:** Use the FUNCTION selector (e.g., CD, TAPE, RADIO, AUX) to choose your desired audio source.

6.2. CD Player Operation

1. Set the FUNCTION selector to 'CD'.
2. Open the CD compartment cover by pressing the 'OPEN/CLOSE' button or lifting the cover.
3. Place a CD with the label side facing up onto the spindle.
4. Close the CD compartment cover. The display will show the total number of tracks.
5. Press the PLAY/PAUSE button (▶/⏸) to start playback.
6. Press the STOP button (⏹) to stop playback.
7. Use the SKIP buttons (◀◀/▶▶) to skip tracks or fast forward/rewind within a track.
8. The unit may feature a 'REPEAT' or 'PROGRAM' function for customized playback. Refer to the on-unit labels for specific controls.

6.3. Cassette Player Operation

1. Set the FUNCTION selector to 'TAPE'.
2. Press the STOP/EJECT button (⏹/▲) to open the cassette compartment.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette compartment.
5. Press the PLAY button (▶) to start playback.
6. Press the FAST FORWARD (FF) or REWIND (REW) buttons to advance or reverse the tape. Note that the unit may not have an auto-stop feature for FF/REW, so manually press STOP when desired.
7. Press the STOP/EJECT button (⏹/▲) to stop playback and eject the tape.

6.4. AM/FM Radio Operation

1. Set the FUNCTION selector to 'RADIO'.
2. Select 'AM' or 'FM' band using the band selector switch.
3. Rotate the TUNING knob to find your desired station.
4. Extend and adjust the telescopic antenna for optimal FM reception. For AM reception, rotate the unit for best signal.

6.5. Bluetooth Connectivity (via NeeGo Receiver)

1. Ensure the NeeGo Bluetooth receiver is charged and connected to the boombox's AUX IN port (as described in Section 5.2).
2. Set the boombox's FUNCTION selector to 'AUX' or 'AUDIO IN'.
3. Turn on the NeeGo Bluetooth receiver. It will automatically enter pairing mode (indicated by a flashing

LED).

4. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to its Bluetooth settings and search for available devices.
5. Select 'NeeGo BT' or a similar name from the list to pair.
6. Once paired, the receiver's LED will stop flashing and remain solid. You can now play audio from your device, and it will be heard through the boombox speakers.

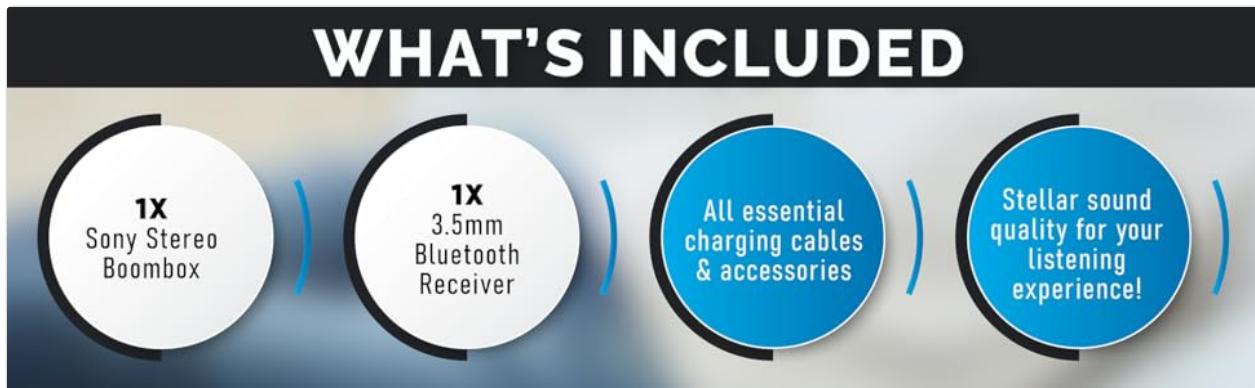


Figure 6.1: The boombox's classic stereo functions enhanced by the NeeGo Bluetooth receiver.

6.6. Auxiliary Input

To play audio from an external device directly:

1. Connect a 3.5mm audio cable from the headphone jack or line-out of your external device to the AUX IN jack on the boombox.
2. Set the boombox's FUNCTION selector to 'AUX' or 'AUDIO IN'.
3. Start playback on your external device.

6.7. Headphone Output

For private listening, plug any standard 3.5mm stereo headphones into the HEADPHONE jack on the boombox. The speakers will automatically mute when headphones are connected.

6.8. Automatic Shut-off / Sleep Timer

This feature allows the unit to automatically turn off after a set period. Consult the specific buttons or menu options on your unit for activating and setting the sleep timer, typically labeled 'SLEEP' or 'TIMER'.

7. MAINTENANCE

7.1. Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner.
- For the cassette head, use a cassette head cleaning kit periodically to ensure optimal sound quality.

7.2. Battery Replacement

When the unit's performance degrades or the battery indicator (if present) shows low power, replace all 6 'C' batteries with new ones. Do not mix old and new batteries, or different types of batteries.

8. TROUBLESHOOTING

If you encounter issues with your NeeGo Portable Boombox, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	AC cord not properly connected; Batteries are dead or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
No sound from speakers.	Volume too low; Headphones connected; Incorrect function selected.	Increase volume; Disconnect headphones; Select correct function (CD, TAPE, RADIO, AUX).
CD not playing or skipping.	CD is dirty, scratched, or inserted incorrectly; CD lens is dirty.	Clean or replace CD; Reinsert CD correctly; Clean CD lens with a specialized cleaner.
Cassette tape not playing or poor sound.	Tape is damaged; Cassette head is dirty or demagnetized.	Try a different tape; Clean cassette head with a cleaning kit.
Poor radio reception (static).	Antenna not extended or adjusted; Weak signal.	Extend and adjust the telescopic antenna; Try repositioning the unit for AM.
Bluetooth receiver not pairing.	Receiver not in pairing mode; Receiver battery low; Device too far.	Ensure receiver is on and flashing; Charge receiver; Move device closer (within 10 meters).
Sound quality is		