

UpStart Components RC-NH000UD-DL12

User Manual
REPLACEMENT REMOTE CONTROL FOR EMERSON TVs

Model: RC-NH000UD-DL12 | Brand: UpStart Components

Introduction

This manual provides instructions for the setup, operation, and maintenance of your new UpStart Components Replacement Remote Control, compatible with Emerson TVs, including models like LC320EM2 and those using the NH000UD remote. This remote is designed to function like the original, offering a seamless replacement experience.

Setup

Your replacement remote control requires no programming. Simply install the batteries, and it will be ready for use with your compatible Emerson TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control, highlighting the battery compartment cover. The cover is designed to slide open for battery insertion.

Note: Batteries are not included with the remote control. Please use new AAA alkaline batteries for optimal performance.

Operating Instructions

Once batteries are installed, point the remote control directly at your Emerson TV and press the desired buttons. The remote is designed to mimic the functionality of your original remote.





Image: Front view of the remote control, displaying all buttons including power, volume, channel, navigation, and number keys.

Key Button Functions

Button	Function
POWER (●)	Turns the TV on or off.
SOURCE	Selects input source (HDMI, AV, Component, etc.).
VOL+ / VOL-	Increases or decreases the volume level.
CH+ / CH-	Changes the TV channel up or down.
MUTE ()	Mutes or unmutes the TV sound.
OK / Navigation Arrows	Navigates through menus and confirms selections.
INFO	Displays current channel information.
Number Buttons (0-9)	Directly selects TV channels.
PREV.CH	Switches to the previously viewed channel.
SLEEP	Sets a sleep timer for the TV.
SAP	Selects Secondary Audio Program (SAP) if available.
ECO	Activates or deactivates power-saving mode.
BACK	Returns to the previous screen or menu.
FREEZE	Freezes the current image on screen.
FORMAT	Adjusts the screen aspect ratio.

Maintenance

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe the surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the remote.

Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range and pointing the remote directly at the TV.
- **Some buttons not working:**
 - This remote is designed to be a direct replacement. If specific buttons do not function, verify that your TV model is compatible with the NH000UD remote series.
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris that might be preventing proper contact.

Specifications

Model Number	RC-NH000UD-DL12
Brand	UpStart Components
Product Dimensions	5.91 x 1.73 x 0.79 inches
Item Weight	2.5 ounces
Batteries Required	2 AAA batteries (not included)
Compatible Devices	Television (Emerson TVs compatible with NH000UD series remotes)
Connectivity Technology	Infrared

Warranty and Support

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by Upstart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For further assistance or support, please refer to the seller's contact information or the UpStart Components website.

© 2025 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CLHPFZ1>

More documents and user manuals: **<https://manuals.plus/>**