

Manuals.plus /

› UpStart Components /

› UpStart Components Replacement Remote Control for Emerson LC260EM2 and NH000UD TVs User Manual

UpStart Components RC-NH000UD-DL8

UpStart Components Replacement Remote Control User Manual

For Emerson LC260EM2 HDTV and NH000UD TV Models

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your UpStart Components replacement remote control. This remote is designed to be compatible with Emerson LC260EM2 HDTV and NH000UD TV models, offering a direct replacement experience without the need for complex programming.

PRODUCT OVERVIEW

The UpStart Components replacement remote control is engineered to function identically to the original remote for compatible Emerson TV models. It features a standard layout for intuitive navigation and control of your television.





Image 1: Front view of the UpStart Components replacement remote control. This image displays the full button layout, including power, volume, channel, source, menu, navigation, and number buttons.

SETUP

This replacement remote control requires no programming. Simply install the batteries, and it will be ready for use with your compatible Emerson TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the release tab (if present) to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image 2: Back view of the remote control, illustrating the battery compartment and its opening mechanism.

Once batteries are installed, the remote is ready to operate your Emerson TV.

OPERATING INSTRUCTIONS

Point the remote control directly at your television's infrared sensor. Ensure there are no obstructions between the remote and the TV.

Key Functions

- **Power ():** Turns the TV on or off.
- **SOURCE:** Cycles through available input sources (e.g., HDMI 1, HDMI 2, AV).
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **CH+ / CH-:** Changes the channel up or down.
- **SAP:** Activates or deactivates the Secondary Audio Program function.
- **Mute ():** Mutes or unmutes the TV audio.
- **BACK:** Returns to the previous menu or screen.
- **ECO:** Accesses energy-saving modes or settings.
- **MENU:** Opens the TV's main menu.
- **INFO:** Displays information about the current program or input.
- **Navigation Buttons (Up, Down, Left, Right):** Used to navigate through menus and options.
- **OK:** Confirms selections in menus.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **PREV.CH:** Switches to the previously viewed channel.
- **SLEEP:** Sets a timer for the TV to turn off automatically.
- **FREEZE:** Pauses the current image on screen.
- **FORMAT:** Adjusts the screen aspect ratio or display format.

MAINTENANCE

Proper care ensures the longevity and optimal performance of your remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING GUIDE

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and TV. Remote out of range.	Check battery orientation and replace with fresh AAA batteries. Ensure clear line of sight to the TV's IR sensor. Move closer to the TV.
Specific buttons not working	Dirt or debris under the button. Internal malfunction.	Clean the remote surface. If the issue persists after battery replacement and cleaning, the remote may require replacement.
TV not responding to any remote commands	TV's IR sensor is blocked or faulty. TV is off or unplugged.	Ensure the TV's IR sensor is not blocked. Check TV power connection. Try using the TV's manual controls.

TECHNICAL SPECIFICATIONS

- **Model Number:** RC-NH000UD-DL8
- **Product Dimensions:** 5.91 x 1.73 x 0.79 inches
- **Item Weight:** 2.5 ounces
- **Batteries Required:** 2 AAA batteries (not included)
- **Compatible Devices:** Television (Emerson LC260EM2 HDTV, NH000UD TV)
- **Connectivity Technology:** Infrared
- **Max Number of Supported Devices:** 1

WARRANTY AND CUSTOMER SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For support or warranty inquiries, please contact the seller directly through your purchase platform. Ensure you have your order details available for faster assistance.

