

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [OLEVS](#) /
- › [OLEVS Women's Quartz Watch Model 0001200 Instruction Manual](#)

OLEVS 0001200

OLEVS Women's Quartz Watch Model 0001200 Instruction Manual

INTRODUCTION

Thank you for choosing the OLEVS Women's Quartz Watch, Model 0001200. This manual provides essential information for the proper setup, operation, and maintenance of your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.



Image: The OLEVS Women's Quartz Watch, Model 0001200, featuring a black mesh band and a blue dial, worn on a wrist.

SETUP

Adjusting the Mesh Bracelet

The stainless steel mesh bracelet is adjustable to fit various wrist sizes. An adjustment tool is included with your watch to facilitate this process. Follow these steps to adjust the bracelet length:


1. **Pry the locking plate:** Use the provided tool to gently pry open the locking plate on the clasp.
2. **Move the clasp:** Slide the clasp along the mesh band to your desired length. Ensure the clasp engages in the grooves on the underside of the bracelet.
3. **Secure the locking plate:** Press the locking plate down firmly until it snaps closed. Avoid using excessive force, as this may damage the clasp.

How To Adjust Mesh Bracelet


1. Pry the locking plate to open clasp. (Picture-1)
2. Move clasp to desired bracelet length. (Picture-2)
3. Exert pressure while holding locking plate, Slide clasp back and forth until it engages in grooves on underside of bracelet. (Picture-3)
4. Press locking plate down until it snaps closed. Clasp can be damaged if excessive force is used. (Picture-3)



Picture - 1

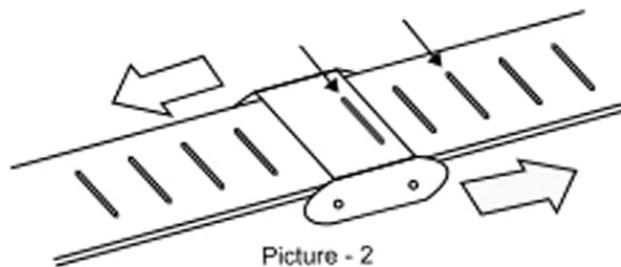

Picture - 2

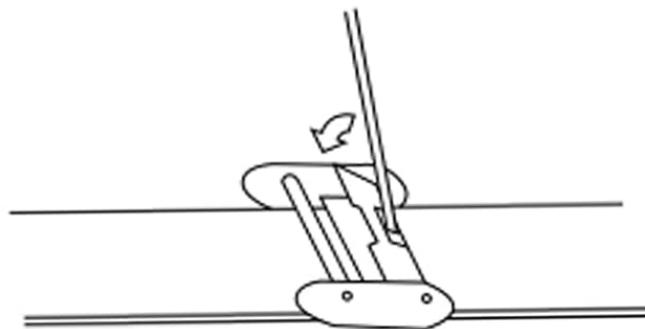

Picture - 3

Image: A step-by-step diagram illustrating the process of adjusting the mesh watch bracelet using the provided tool.

Setting the Time and Date

To set the time and date on your OLEVS watch:

1. **Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) outwards.
2. **Adjust the time:** Turn the crown to move the hands and set the correct time.
3. **Adjust the date:** If your watch has a date function, you may need to pull the crown out to a specific position or turn it in a particular direction to adjust the date. Refer to the included mini-manual for precise instructions if needed.
4. **Push in the crown:** Once the time and date are set, push the crown back into its original position to

start the watch and ensure water resistance.

OPERATION

Basic Timekeeping

Your OLEVS watch is equipped with a high-quality Japanese quartz movement, ensuring accurate timekeeping. The analog display shows hours, minutes, and seconds. Some models also feature a date display.

Water Resistance

This watch is designed with 30 meters (3ATM) water resistance. This means it is suitable for daily use and can withstand splashes, rain, and hand washing. It is not recommended for showering, swimming, diving, or any activities involving prolonged water immersion or high-pressure water exposure.

PRODUCT PARAMETERS





Product Size

33	6.5
Case diameter(MM)	Case thickness(MM)
16	23
Chain width(MM)	Chain length(CM)

Brand model number:	OLEVS/5869女
Mirror:	High hardness coated glass mirror
Watchband:	Milanese steel strap
Movement:	Japan quartz movement
Waterproof:	30 meters waterproof
Watch weight:	42g

Image: The OLEVS watch partially submerged in water, illustrating its 30-meter water resistance capability.

Your browser does not support the video tag.

Video: A demonstration of the OLEVS watch's water resistance and its overall design, showcasing the black mesh band and blue dial.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your OLEVS watch, regularly wipe the case and bracelet with a soft, dry cloth. For the mesh band, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

Battery Information

Your watch is powered by a single LR44 battery, which is included. When the watch stops running, it indicates that the battery needs to be replaced. It is recommended to have the battery replaced by a qualified watch technician to ensure the watch's water resistance is maintained.

TROUBLESHOOTING

Common Issues

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Incorrect time/date:** Ensure the crown is fully pushed in after setting. If the date is not advancing, verify that the watch has passed midnight or adjust it manually as described in the 'Setting the Time and Date' section.
- **Fog or water droplets on the surface:** If you notice fog or water droplets inside the watch, contact the manufacturer immediately for maintenance to prevent internal damage.

SPECIFICATIONS

Product Specifications for OLEVS Model 0001200

Feature	Detail
Brand	OLEVS
Model Name	0001200
Movement Type	Japanese Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	33 Millimeters (1.3 Inches)
Case Thickness	6.5 Millimeters (0.25 Inches)
Band Material Type	Stainless Steel Mesh
Band Width	16 Millimeters (0.63 Inches)
Band Length	23 Centimeters (9 Inches)
Water Resistance Depth	30 Meters (3ATM)
Power Source	Battery Powered (1 LR44 included)

Feature	Detail
Item Weight	42 Grams (1.48 Ounces)
Included Components	Watch, Watch Box, User Manual, Bracelet Adjustment Tool

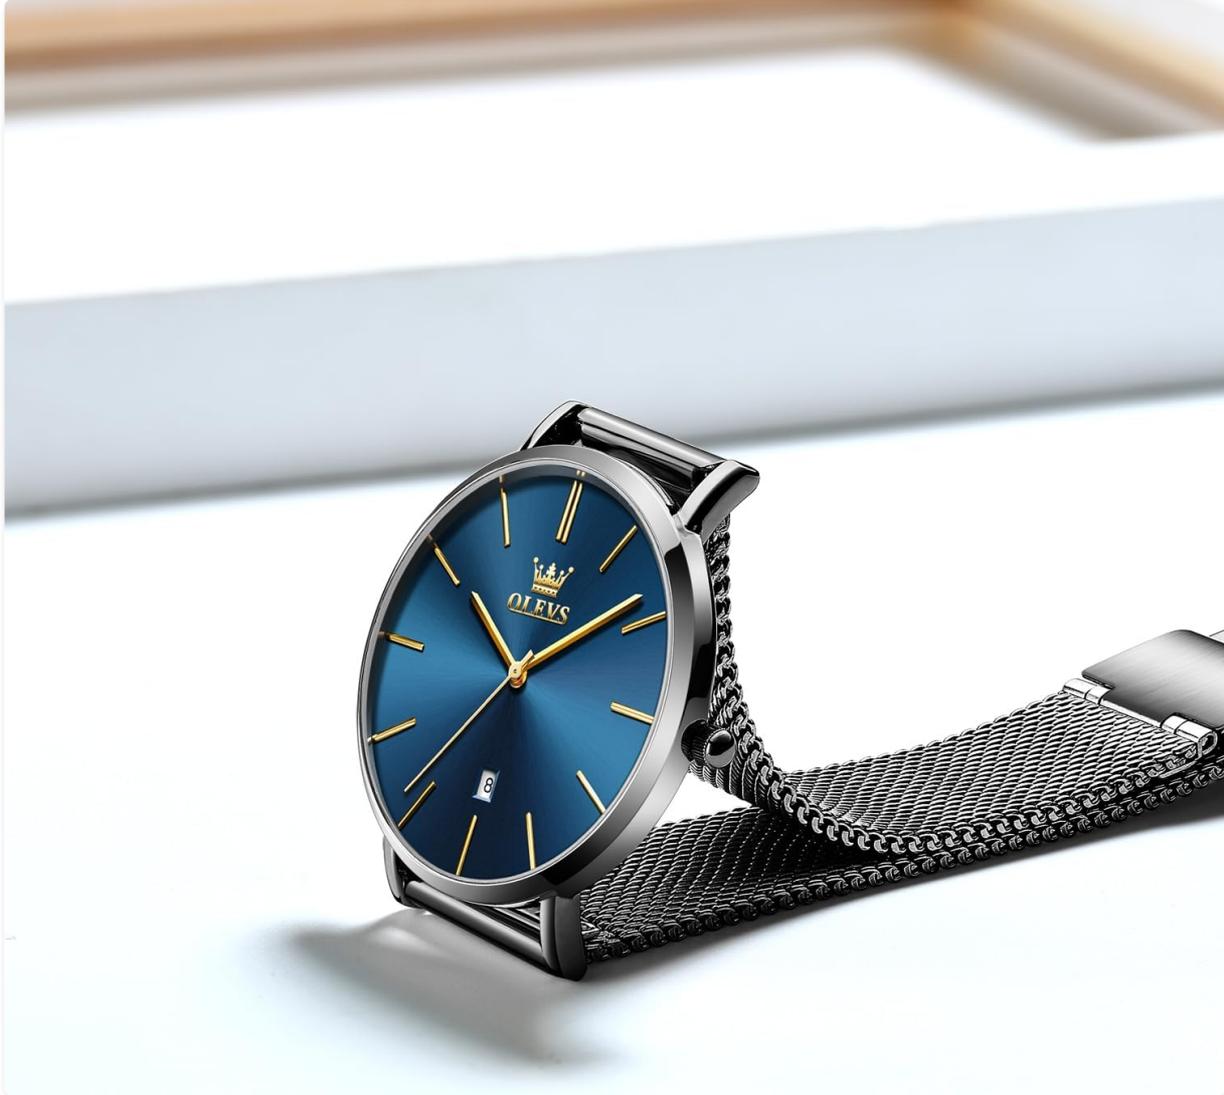


Image: A visual representation of the watch's dimensions and key product parameters.

WARRANTY AND SUPPORT

Warranty Information

This OLEVS watch comes with a seller warranty. For specific details regarding the warranty period and coverage, please refer to the documentation provided with your purchase or contact the seller directly.

Customer Support

If you encounter any issues or have questions about your OLEVS watch, please contact the seller or manufacturer for assistance. When contacting support, please have your model number (0001200) and purchase details readily available.

