

MAJORITY Histon 2

MAJORITY Histon Portable DAB/DAB+ Digital Radio User Manual

Model: Histon 2

INTRODUCTION

Thank you for purchasing the MAJORITY Histon Portable DAB/DAB+ Digital Radio. This manual provides essential information for setting up, operating, and maintaining your radio. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

What's in the Box

- MAJORITY Histon Radio
- Mains Power Cable
- Owner's Manual (this document)



MAJORITY Histon

H 11cm
L 18cm
W 4.5cm



Mains Power



User Manual

Image: The contents of the product packaging, including the Histon radio, its mains power cable, and the user manual.

PRODUCT OVERVIEW

The MAJORITY Histon radio is designed for portable and mains-powered listening, offering both DAB/DAB+ and FM radio reception. It features a clear LED display, dual alarm functionality, and a sleep timer.



Image: A detailed view of the Majority Histon radio, highlighting its compact design and front speaker.

Controls and Display



MAJORITY



Image: A close-up of the radio's top panel, illustrating the various control buttons and the LED display showing station information.

- **Mode:** Switches between DAB, FM, and other modes.
- **Info/Menu:** Displays station information or accesses menu settings.
- **Dimmer:** Adjusts display brightness.
- **Preset:** Accesses or saves preset stations.
- **Prev/Next:** Navigates through stations or menu options.
- **Enter/Snooze:** Confirms selections or activates snooze during an alarm.
- **Vol-/Vol+:** Adjusts volume.

Ports and Connections

- **DC IN Port:** For connecting the mains power cable.
- **3.5mm Headphone Jack:** For private listening.
- **Battery Compartment:** Located on the rear for 4 AA batteries (not included).
- **Telescopic Antenna:** Extendable for optimal signal reception.

SETUP

Powering On

The Histon radio can be powered by either the included mains power cable or 4 x AA batteries (not supplied).

1. **Mains Power:** Connect the mains power cable to the DC IN port on the radio and plug the adapter into a wall socket.
2. **Battery Power:** Open the battery compartment on the rear of the radio and insert 4 x AA batteries, ensuring correct polarity.



Image: The radio in a portable setting, emphasizing its 15-hour battery life capability.

Antenna Adjustment

Extend the telescopic antenna fully for the best possible signal reception, especially for DAB/DAB+ and FM broadcasts.

Initial Scan (DAB/DAB+)

Upon first power-on, the radio will automatically perform a full scan for DAB/DAB+ stations. This process may take a few minutes. Once complete, the radio will tune to the first available station.

- If no stations are found, ensure the antenna is fully extended and reposition the radio, then perform a

manual scan (see Operating Instructions).

OPERATING INSTRUCTIONS

DAB/DAB+ Radio Operation

1. **Selecting DAB Mode:** Press the **Mode** button until "DAB" is displayed.
2. **Station Selection:** Use the **Prev** or **Next** buttons to scroll through available DAB stations. Press **Enter** to select a station.
3. **Full Scan:** To perform a full scan for new stations, press and hold the **Info/Menu** button to enter the menu, then navigate to "Full Scan" and press **Enter**.
4. **Preset Stations:**
 - **Saving a Preset:** While listening to a station, press and hold the **Preset** button. Use **Prev/Next** to select a preset number (1-20), then press **Enter** to save.
 - **Recalling a Preset:** Briefly press the **Preset** button. Use **Prev/Next** to scroll through saved presets, then press **Enter** to tune.



Image: The radio's control panel, highlighting the capability to store up to 20 preset radio stations.

FM Radio Operation

1. **Selecting FM Mode:** Press the **Mode** button until "FM" is displayed.
2. **Auto Scan:** Press and hold **Enter** to automatically scan for the next available FM station.
3. **Manual Tuning:** Briefly press **Prev** or **Next** to fine-tune the frequency in 0.05 MHz steps.
4. **Preset Stations:** Saving and recalling FM presets follows the same procedure as DAB presets.

Setting Alarms

The Histon radio features a dual alarm function.



Image: The radio displaying "DUAL ALARM" on its screen, illustrating its dual alarm capability.

1. Press and hold **Info/Menu** to enter the menu.
2. Use **Prev/Next** to navigate to "System Settings" and press **Enter**.
3. Navigate to "Alarm" and press **Enter**.
4. Select "Alarm 1" or "Alarm 2" and press **Enter**.
5. Configure the alarm time, duration, source (Buzzer, DAB, FM), frequency (Daily, Once, Weekends, Weekdays), and volume using **Prev/Next** and **Enter**.
6. To activate/deactivate an alarm, select "On" or "Off" for the chosen alarm.
7. When an alarm sounds, press **Enter/Snooze** to snooze for 9 minutes, or press the **Power** button to turn off the alarm.

Sleep Timer

The sleep timer allows the radio to turn off automatically after a set period.

1. Press and hold **Info/Menu** to enter the menu.
2. Navigate to "System Settings" and press **Enter**.
3. Navigate to "Sleep" and press **Enter**.
4. Use **Prev/Next** to select the desired sleep duration (e.g., 15, 30, 45, 60, 90, 120 minutes) or "Off". Press **Enter** to confirm.

Display Brightness

Adjust the brightness of the LED display.

- Briefly press the **Dimmer** button to cycle through brightness levels.

Headphone Use

For private listening, connect standard 3.5mm headphones to the headphone jack on the side of the radio. The internal speaker will automatically mute when headphones are connected.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No power / Radio does not turn on.	Ensure mains power cable is securely connected and the wall socket is active. If using batteries, check if they are inserted correctly with correct polarity. Replace old or depleted batteries with new ones.
Poor DAB/FM reception or no stations found.	Fully extend the telescopic antenna. Reposition the radio to a location with better signal (e.g., near a window, away from other electronics). Perform a full scan for DAB stations or an auto scan for FM stations. Check for local signal strength issues in your area.
Sound is distorted or intermittent.	Adjust the volume level. Check antenna position for better signal. If using headphones, ensure they are fully plugged in and not faulty.
Alarm does not sound.	Ensure the alarm is set to "On" in the menu. Verify the alarm time and frequency settings (e.g., Daily, Weekdays). Check the alarm volume setting.
Display is blank or unreadable.	Press the Dimmer button to adjust brightness. Ensure the radio is powered on.

SPECIFICATIONS

- **Model:** Histon 2

- **Product Dimensions:** 18 x 4.5 x 11 cm (L x W x H)
- **Weight:** 249 grams
- **Power Source:** Mains (via included adapter) or 4 x AA Batteries (not included)
- **Radio Bands Supported:** DAB/DAB+, FM
- **Presets:** 20 (DAB) / 20 (FM)
- **Connectivity:** 3.5mm Headphone Jack, DC IN Port
- **Special Features:** Portable, Lightweight, Automatic and Manual Tuning, Dual Alarm Clock, Sleep Timer, LED Display, Mono/Auto Switching in FM Mode



Image: A visual representation of the radio's dimensions for reference.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the radio's surface. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the radio for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.
- **Water Exposure:** This radio is not waterproof. Avoid exposure to water or high humidity.
- **Antenna Care:** Handle the telescopic antenna gently to prevent bending or breaking.

WARRANTY AND SUPPORT

The MAJORITY Histon radio comes with a **3-year warranty**. To activate your warranty and for further support, please refer to the registration instructions provided with your purchase or visit the official MAJORITY website.



For technical assistance or warranty claims, please contact MAJORITY customer support through their official channels. Keep your proof of purchase for warranty validation.







Image: A graphic highlighting the 3-year warranty provided with Majority audio products.

© 2025 MAJORITY. All rights reserved.

Related Documents - Histon 2

 <p>Instructions Guide</p>	<p>Majority Histon II Portable Digital Radio Instructions Guide</p> <p>Comprehensive instructions guide for the Majority Histon II Portable Digital Radio, covering controls, functions, DAB/DAB+ and FM radio operation, presets, alarms, and troubleshooting.</p>
 <p>Instructions Guide</p>	<p>Majority Histon Portable Digital Radio Instructions Guide</p> <p>This comprehensive instructions guide provides detailed information on setting up, operating, and troubleshooting the Majority Histon portable digital radio, including DAB/DAB+ and FM functions, alarms, and specifications.</p>

 <p>MAJORITY NEPTUNE FREE</p> <p>Bedside Radio and Alarm Clock</p> <p>NEPTUNE FREE</p> <p>Instructions Guide</p>	<p>Majority Neptune Free Bedside Radio and Alarm Clock User Manual</p> <p>This user manual provides detailed instructions for operating the Majority Neptune Free bedside radio and alarm clock. Learn about its features including Bluetooth connectivity, FM radio, USB playback, wireless charging, alarm settings, and sleep mode. Includes specifications and safety information.</p>
 <p>MAJORITY</p> <p>Majority MP3 player</p> <p>16GB Black/White</p> <p>Instructions Guide</p>	<p>Majority MP3 Player 16GB Black/White Instructions Guide</p> <p>Comprehensive instructions guide for the Majority MP3 player 16GB Black/White, covering setup, controls, music playback, Bluetooth, recording, settings, specifications, and warranty.</p>
 <p>D100 Bookshelf Speakers</p> <p>User Manual</p> <p>MAJORITY</p> <p>FOR AUDIO CONNECTION</p>	<p>Majority D100 Bookshelf Speakers User Manual - Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the Majority D100 Bookshelf Speakers. Learn about setup, controls, Bluetooth, USB, HDMI ARC, optical, phono, and analogue inputs, troubleshooting, specifications, and warranty.</p>
 <p>Majority MP3 Pro Player</p> <p>User Manual</p> <p>MAJORITY</p> <p>FOR AUDIO CONNECTION</p>	<p>Majority MP3 Pro Player User Manual</p> <p>User manual for the Majority MP3 Pro Player, detailing its features, operation, music management, Bluetooth connectivity, settings, troubleshooting, and warranty information.</p>