

SINGER 00187

SINGER 00187 Fix-It Double-sided Tape Strips Instruction Manual

Model: 00187

1. PRODUCT OVERVIEW

The SINGER 00187 Fix-It Double-sided Tape Strips provide a temporary, clear adhesive solution for various fabric and skin applications. These strips are designed to prevent wardrobe malfunctions such as fabric gaps, low necklines, and issues with strapless garments. They also serve as a convenient, no-sew fix for fabric-on-fabric needs, including garment cuffs, curtain hems, and lampshade edges.

Each package contains 40 double-sided tape strips, each measuring 3/4 inch by 3 1/4 inches.



Oh-No! Fix it Tape Strips
Tiras de cinta de
reparación rápida
Bandelettes de ruban de
réparation Oh-no! Fix it Tape

40



Clear
Transparente
Transparent

00187

Image 1.1: Packaging for SINGER 00187 Fix-It Double-sided Tape Strips, showing the product name, count (40), and examples of

use on clothing.

Key Features:

- Double-sided clear sticky tape adheres to fabric and skin.
- No-sew adhesive for fashion applications, preventing gaps and securing garments.
- Temporary fix for clothing cuffs, hems, and other fabric items.
- Strips measure 3/4 inch by 3 1/4 inches.
- Set includes 40 tape strips.

2. SETUP AND PREPARATION

Before applying the tape, ensure that the surfaces (fabric or skin) are clean, dry, and free from oils, lotions, or powders. This will ensure optimal adhesion of the tape strips.



Image 2.1: A stack of individual SINGER Fix-It Double-sided Tape Strips, ready for use.

3. OPERATING INSTRUCTIONS

Follow these steps for effective application of the SINGER Fix-It Double-sided Tape Strips:

1. **Select a Strip:** Choose one double-sided tape strip from the package.
2. **Peel One Side:** Carefully peel off one side of the protective backing from the tape strip.

3. **Apply to First Surface:** Press the exposed adhesive side firmly onto the first surface (e.g., garment fabric or skin) where you want to secure it. Ensure it is smooth and free of wrinkles.



Image 3.1: A hand peeling the protective backing from a tape strip, which is already adhered to a piece of denim fabric.

4. **Peel Second Side:** Once the first side is securely in place, carefully peel off the remaining protective backing from the other side of the tape strip, exposing the second adhesive surface.
5. **Apply to Second Surface:** Bring the second surface (e.g., another piece of fabric, or skin) into contact with the newly exposed adhesive. Press firmly for several seconds to ensure a strong bond.



Image 3.2: The tape strip fully applied between two layers of denim fabric, creating a temporary hem.

6. **Adjust as Needed:** For best results, apply the tape to areas that are not subject to extreme stretching or friction.



Image 3.3: A light blue button-up shirt with the front placket secured by the tape, demonstrating a discreet and effective quick-fix for a fashion emergency.

4. MAINTENANCE AND CARE

Store unused tape strips in their original packaging in a cool, dry place, away from direct sunlight and extreme temperatures. This helps preserve the adhesive quality. The tape is designed for temporary use and should be removed before washing garments to prevent residue or damage.

5. TROUBLESHOOTING

- **Tape Not Sticking:**
 - Ensure surfaces are clean, dry, and free of oils, lotions, or powders.
 - Apply firm pressure for several seconds after placing the tape.
 - Avoid applying to heavily textured or delicate fabrics that may not provide a suitable surface for adhesion.
- **Difficulty Peeling Backing:**
 - Use a fingernail or a thin, blunt object to gently lift a corner of the backing.
 - Ensure the tape is not expired or stored in conditions that may degrade the adhesive or backing.
- **Residue on Fabric/Skin:**

- The tape is designed to be temporary. Remove it carefully and promptly after use.
- If residue occurs on fabric, gently dab with a clean cloth and a small amount of rubbing alcohol or a fabric-safe adhesive remover. Test on an inconspicuous area first.
- For skin, wash gently with soap and water.







6. SPECIFICATIONS

Brand	SINGER
Model Number	00187
Item Weight	0.8 ounces (22.68 g)
Product Dimensions	5 x 2.9 x 0.25 inches
Tape Strip Dimensions	3/4 inch x 3 1/4 inches
Number of Strips	40
Special Feature	Double Sided
Surface Recommendation	Cloth, Skin
Water Resistance Level	Not Water Resistant
Compatible Material	Fabric, Skin (Note: Product specifications also list Aluminum, Plastic, but primary use is fabric/skin)
UPC	075691001872

7. WARRANTY AND SUPPORT

For questions regarding the SINGER 00187 Fix-It Double-sided Tape Strips or other SINGER products, please visit the official SINGER website or contact their customer support. Specific warranty information for this consumable product may vary; please refer to the product packaging or SINGER's official resources for the most current details.

You can find more information and support at the [SINGER Store on Amazon](#).

	<p>Singer 500A Sewing Machine Parts List and Diagrams</p> <p>Explore the official parts list and detailed diagrams for the Singer 500A sewing machine, including electrical components for related models. Find part numbers for maintenance and repair.</p>
 <p>6199/6180/6160</p> <p>KULLANIM KILAVUZU</p>	<p>Singer 6199/6180/6160 Dikiş Makinesi Kullanım Kılavuzu</p> <p>Singer 6199, 6180 ve 6160 ev tipi dikiş makineleri için kapsamlı kullanım kılavuzu. Bu belge, makinenin güvenli kurulumu, tüm dikiş fonksiyonlarının kullanımı, düzenli bakım ve sorun giderme adımları hakkında detaylı bilgiler sunar.</p>
	<p>Singer 107W5 Sewing Machine Parts List and Index</p> <p>Comprehensive parts list and index for the Singer 107W5 sewing machine, detailing components for the machine head, bobbin winder, and accessories.</p>
	<p>Singer 1408/1409 Instruction Manual</p> <p>Comprehensive instruction manual for Singer 1408 and 1409 sewing machines. Covers safety, operation, maintenance, and troubleshooting for home use.</p>
 <p>INSTRUCTION MANUAL NOTICE D'UTILISATION MANUAL DE INSTRUCCIONES 9960</p> <p>SINGER</p>	<p>Singer 9960 Sewing Machine Instruction Manual</p> <p>Comprehensive instruction manual for the Singer 9960 sewing machine, covering operation, safety, stitch selection, maintenance, and troubleshooting for household use.</p>
 <p>SINGER 3223 HANDLEIDING</p>	<p>Singer 3223 Naaimachine Handleiding: Gebruik en Onderhoud</p> <p>Uitgebreide gebruikershandleiding voor de Singer 3223 naaimachine, inclusief installatie, bediening, onderhoud en probleemplossing. Leer uw naaimachine effectief en veilig gebruiken.</p>