

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SVAKOM](#) /

› [SVAKOM Angel User Manual](#)

SVAKOM 6571

SVAKOM Angel User Manual

Rechargeable, Warming Rabbit G-Spot Vibrator

INTRODUCTION

Thank you for choosing the SVAKOM Angel. This intelligent warming G-spot and clitoris vibrator is designed for personal pleasure and relaxation. Crafted from ultra-soft silicone and body-safe ABS, it offers a unique experience with its dual motors, warming function, and multiple vibration modes. Please read this manual carefully before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Clean the product thoroughly before and after each use with warm water and mild soap or a specialized toy cleaner.
- Do not use the product if the silicone is damaged or torn.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- Keep out of reach of children.
- This product is for external use only.
- If you experience any discomfort or irritation, discontinue use immediately and consult a healthcare professional.
- Use only water-based lubricants with this product. Oil-based lubricants may damage the silicone material.

PRODUCT OVERVIEW

The SVAKOM Angel features a unique design for targeted stimulation. It includes two powerful motors and a warming function for enhanced sensation.



Figure 1: SVAKOM Angel Product View. This image displays the vibrator's ergonomic design, featuring a main curved shaft and a smaller, rabbit-ear shaped stimulator for clitoral focus. The device is a vibrant pink color with a metallic silver base.

Components:

- **Main Body:** Ergonomically designed for G-spot stimulation.
- **Rabbit Ear Stimulator:** Smaller, flexible arm for clitoral stimulation.
- **Control Buttons:** Located on the main body for power, vibration modes, and warming function.
- **Charging Port:** Discreetly located at the base.



Figure 2: Control Buttons. This image shows a top-down view of the Svakom Angel, highlighting the two control buttons on its surface. One button is marked with a power symbol, and the other with a wave-like symbol, indicating mode control.

SETUP

Charging the Device:

Before first use, fully charge your Svakom Angel. The device uses a Polymer lithium battery with a capacity of 650mAh.

1. Locate the charging port at the base of the device.
2. Insert the provided USB charging cable into the port.
3. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
4. The indicator light will illuminate during charging. A full charge takes approximately 1 hour.
5. Once fully charged, the indicator light will change or turn off (refer to specific product light behavior). Disconnect the charger

before use.

A full charge provides approximately 3 hours of continuous use.

OPERATING INSTRUCTIONS

Power On/Off:

- To turn on: Press and hold the power button () for 2 seconds.
- To turn off: Press and hold the power button () for 2 seconds.

Changing Vibration Modes:

The SVAKOM Angel features 7+1 vibration modes and 5 intensities.

- While the device is on, short press the mode button (wave symbol) to cycle through the 7 vibration modes.
- The device also features an intelligent mode (the "+1" mode). Refer to the product's specific intelligent mode activation if applicable.
- To adjust intensity within a mode, short press the power button () to cycle through the 5 intensity levels.

Warming Function:

The SVAKOM Angel includes a warming feature for added comfort.

- To activate warming: While the device is on, press and hold the mode button (wave symbol) for 2 seconds.
- To deactivate warming: Press and hold the mode button (wave symbol) for 2 seconds again.

MAINTENANCE

Cleaning:

- The SVAKOM Angel is IPX6 waterproof, meaning it is protected against powerful water jets. It can be rinsed under running water.
- Clean the device thoroughly before and after each use.
- Use warm water and a mild, antibacterial soap or a dedicated toy cleaner.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth or allow to air dry completely before storing.

Storage:

- Store the device in a clean, dry, and cool place.
- Keep it away from direct sunlight, extreme temperatures, and other sex toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully (approx. 1 hour).
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.

Problem	Possible Cause	Solution
Warming function not working.	Function not activated or low battery.	Ensure device is on and press/hold mode button for 2 seconds to activate. Recharge if necessary.
Device not charging.	Charging cable or port issue.	Ensure cable is properly connected. Try a different USB port or adapter. Clean charging port if necessary.

SPECIFICATIONS

- Product Name:** SVAKOM ANGEL
- Model Number:** 6571
- Material:** Ultra soft silicone + Body-safe ABS
- Product Size:** F33mm*191mm
- Product Weight:** 146g
- Battery Type:** Polymer lithium battery
- Battery Capacity:** 650mAh
- Charging Time:** Approximately 1 hour
- Using Time:** Up to 3 hours
- Water Repellency:** IPX6 Waterproof
- Vibration Modes:** 7+1
- Intensities:** 5
- Manufacturer:** Svakom
- Date First Available:** May 1, 2018

WARRANTY AND SUPPORT

For warranty information and customer support, please visit the official SVAKOM website or contact your retailer. Keep your purchase receipt as proof of purchase.

Manufacturer: Svakom

Website: www.svakom.com

Contact: Refer to the SVAKOM website for contact details.