

UpStart Components RC-AKB74915305-DL4

UpStart Components Replacement Remote Control User Manual

For LG TV Models Compatible with AKB74915308 and 43LF5900

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your UpStart Components Replacement Remote Control. This remote is designed to be compatible with various LG TV models, including those originally using the AKB74915308 remote control and the 43LF5900 TV model. Please read these instructions carefully to ensure proper use and longevity of your remote control.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Image: Back view of the remote control, highlighting the battery compartment cover. This is where two AAA batteries are inserted for power.

2. Initial Use

This replacement remote control is designed for immediate use without any programming. Once batteries are correctly installed, it should function directly with compatible LG TV models.

- Point the remote control directly at your LG TV.
- Press the **POWER** button to turn on your television.
- Verify functionality by attempting to change channels or adjust volume.

OPERATING INSTRUCTIONS

The UpStart Components Replacement Remote Control features a layout similar to the original LG AKB74915308 remote, providing intuitive control over your television's functions.





Image: Front view of the remote control, displaying all buttons and their labels. This image illustrates the full button layout for operation.

Key Functions:

- **POWER**: Turns the TV on or off.
- **VOL +/-**: Adjusts the volume level.
- **CH PAGE +/-**: Changes channels up or down.
- **MUTE**: Mutes or unmutes the TV sound.
- **Number Buttons (0-9)**: Directly input channel numbers.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **LIST**: Displays the channel list.
- **FAV**: Accesses favorite channels.
- **INFO**: Displays program information.
- **RECENT**: Shows recently viewed content.
- **SETTINGS (Gear icon)**: Opens the TV settings menu.
- **HOME (House icon)**: Accesses the TV's home screen or smart features.

- **LIVE MENU / LIVE ZOOM:** Specific functions for live TV viewing.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model or application.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are correctly installed with the proper polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Buttons are unresponsive or lag:**
 - This can sometimes indicate low battery power. Try replacing the batteries.
 - Ensure the remote's infrared emitter is clean and free from dust or debris.
 - If the issue persists, it may indicate a hardware malfunction.

SPECIFICATIONS

Feature	Detail
Brand	UpStart Components
Model Number	RC-AKB74915305-DL4
Compatible with	LG TV (e.g., 43LF5900, AKB74915308 original remote)

Feature	Detail
Connectivity Technology	Infrared
Power Source	2 x AAA Batteries (not included)
Product Dimensions	5.91 x 1.77 x 0.91 inches
Item Weight	2.38 ounces
Max Number of Supported Devices	1 (Television)
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part and is not an OEM (Original Equipment Manufacturer) product. It is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

Any warranties for this product are offered solely by UpStart Components. For specific warranty details or support inquiries, please refer to the documentation provided at the time of purchase or contact UpStart Components directly through their official channels.

All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners.