

## UpStart Components RC-XRT122-DL20

# UpStart Components Replacement Remote Control Instruction Manual

Compatible with VIZIO D50U-D1 and XRT122 TV Models

## INTRODUCTION

---

This manual provides instructions for the UpStart Components Replacement Remote Control, designed to function as a direct replacement for your original VIZIO TV remote, specifically compatible with models such as D50U-D1 and those using the XRT122 remote control. This remote control requires no programming; simply install batteries to begin operation. It is constructed from durable materials for reliable, long-term use.

## SETUP

---

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. **Note: Batteries are not included.**
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery compartment indicated. This is where two AAA batteries are inserted.

## OPERATING INSTRUCTIONS

---

Once batteries are installed, the remote control is ready for immediate use with compatible VIZIO TVs. Point the remote directly at your television and press the desired function button.



Image: Front of the remote control, showing the layout of all buttons for TV operation.

## Key Functions:

- **Power ( ):** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **VOL (+/-):** Adjusts the volume level.
- **CH ( ^ / v ):**  Changes TV channels.
- **Mute (x):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Menu:** Opens the TV's main menu.
- **Info:** Displays information about the current program or input.
- **Netflix, Amazon, iHeartRadio:** Direct access buttons for these streaming services.
- **Numeric Keypad (0-9):** For direct channel entry.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure batteries are installed correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Ensure you are within a reasonable range and pointing the remote directly at the TV.
- **Specific buttons not working:**
  - This remote is designed to replicate the original remote's functions. If a specific button does not work, ensure your TV model supports that function with its original remote.
  - Clean the remote control as described in the Maintenance section, as dirt or debris might interfere with button contacts.

## SPECIFICATIONS

---

- **Model Number:** RC-XRT122-DL20
- **Product Dimensions:** 1.97 x 0.59 x 6.5 inches
- **Item Weight:** 2.38 ounces

- **Batteries Required:** 2 AAA batteries (not included)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Compatible Devices:** Television (specifically VIZIO D50U-D1, XRT122 series)

## WARRANTY INFORMATION

---

Any warranties for this UpStart Components product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact UpStart Components directly.

## SUPPORT

---

If you encounter issues not covered in this manual or require further assistance, please contact the manufacturer, UpStart Components, through their official support channels. Please have your product model number (RC-XRT122-DL20) available when seeking support.