Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Sharp /
- > Sharp EN2A27S TV Remote Control User Manual

Sharp EN2A27S

Sharp EN2A27S TV Remote Control User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Sharp EN2A27S TV Remote Control. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible Sharp Smart LCD HDTV Television.

PACKAGE CONTENTS

• Sharp EN2A27S TV Remote Control

Note: Batteries are not included and must be purchased separately. Two AAA batteries are required.

SETUP

Battery Installation

- 1. Locate the battery compartment on the back of the remote control.
- 2. Slide the battery compartment cover downwards to open it.
- 3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Slide the battery compartment cover back into place until it clicks securely.





Image: The Sharp EN2A27S remote control shown alongside two AAA batteries, indicating where batteries are inserted for operation.

The remote control is now ready for use with your compatible Sharp TV. No programming is typically required for original Sharp remote controls.

OPERATING INSTRUCTIONS

The Sharp EN2A27S remote control provides direct access to various functions of your Sharp Smart LCD HDTV. Familiarize yourself with the button layout for efficient operation.



Image: A detailed view of the lower portion of the Sharp EN2A27S remote, showcasing dedicated buttons for Netflix, Amazon, Vudu, and YouTube.

Key Functions:

• Power (Red Button): Turns the TV on or off.

- Input: Selects the video input source (e.g., HDMI 1, HDMI 2, AV).
- Number Buttons (0-9): Directly select TV channels.
- CC (Closed Caption): Toggles closed captions on or off.
- Color Buttons (Red, Green, Yellow, Blue): Used for specific functions within menus or applications, as indicated on the TV screen.
- Settings (Gear Icon): Accesses the TV's main settings menu.
- **Grid Icon:** Opens the TV's smart hub or app launcher.
- Navigation Pad (Up, Down, Left, Right, OK): Navigates through menus and confirms selections.
- Back: Returns to the previous screen or menu.
- Exit: Exits the current menu or application.
- Home (House Icon): Returns to the TV's home screen.
- Live TV: Switches to live television broadcast.
- Volume Up/Down (VOL +/-): Adjusts the TV's volume level.
- Mute (Speaker Icon): Mutes or unmutes the TV's audio.
- Channel Up/Down (CH +/-): Changes TV channels.
- Playback Controls (Play, Pause, Fast Forward, Rewind, Stop): Controls media playback.
- Sleep: Sets a timer for the TV to automatically turn off.
- Dedicated App Buttons (Netflix, Amazon, Vudu, YouTube): Provides direct access to these streaming applications.

COMPATIBILITY

The Sharp EN2A27S TV Remote Control is compatible with the following Sharp Smart LCD HDTV Television models:

55H6B, 50H7GB, 50H6B, N6200U, LC-60N6200U, LC-60N7000U, LC-65N7000U, LC-43N7000U, LC-50N7000U, LC-55N7000U, LC-40N5000U, LC-43N5000U, LC-43N6100U, LC-50N5000U, LC-50N6000U, LC-55N620CU, LC-55N5300U, LC-55N6000U, LC-60N5100U, LC-65N5200U, LC-65N6200U, LC-65N9000U, LC-75N620U, LC-75N8000U.

MAINTENANCE

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

Battery Care:

- Replace batteries when the remote's responsiveness decreases.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Remote Not Responding:

• Check Batteries: Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new ones.

- Line of Sight: Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- Remote Sensor: Verify that the TV's remote sensor is not blocked or dirty.
- TV Power: Confirm that the TV is powered on and not in standby mode.

Buttons Not Working:

- **Individual Button Test:** If only specific buttons are not working, try pressing them firmly. If the issue persists, the remote may require replacement.
- Clean Remote: Dust or debris under buttons can sometimes cause issues. Refer to the cleaning instructions in the Maintenance section.

SPECIFICATIONS

Model Number	EN2A27S
Internal Item Number	8541714996
Brand	Sharp
Product Dimensions	8 x 2 x 0.5 inches
Item Weight	2.89 ounces
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television
Manufacturer	OEM Sharp

SUPPORT

For further assistance or inquiries regarding your Sharp EN2A27S TV Remote Control, please refer to the support resources provided by Sharp or your television's original documentation. You may also visit the official Sharp website for product information and customer service contacts.

Related Documents - EN2A27S



<u>SHARP LC-42LE756/758/759/760/761/762 & LC-50LE756/758/759/760/761/762 Series LCD Colour Television User Manual</u>

Comprehensive user manual for SHARP LC-42LE and LC-50LE series LCD Colour Televisions, covering setup, operation, features, safety, troubleshooting, and technical specifications.



Sharp AQUOS LCD TV Operation Manual - Setup, Features, and Specifications

Comprehensive operation manual for Sharp AQUOS Liquid Crystal Televisions, covering initial setup, remote control functions, picture and sound settings, smart TV features, internet connectivity, troubleshooting, and technical specifications for various models.

Guía de inicio rápido para televisores SHARP Roku Aprenda a configurar su televisor SHARP Roku con esta guía de inicio rápido. Cubre la conexión de dispositivos, la configuración de la red y la personalización de la pantalla de inicio. Sharp Q5000 Series TV Quick Start Guide A concise guide to setting up your new Sharp Q5000 Series TV, covering unboxing, connections, network setup, and basic operation. Learn how to get the most out of your Sharp television with this easy-to-follow manual. SHARP SHARP 4K UHD Smart LED TV User Manual This user manual provides comprehensive instructions for operating SHARP LC-CUG8052E and LC-CUG8062E series 4K UHD Smart LED TVs. Learn about setup, safety guidelines, remote control functions, smart features like AQUOS NET+, Netflix, YouTube, and various connectivity options for an optimal viewing experience. SHARP AQUOS LCD TV Operating Manual LC-32XL8E LC-32XL8S LC-37XL8E LC-37XL8S Comprehensive operating manual for SHARP AQUOS LCD Televisions, models LC-32XL8E, LC-32XL8S, LC-37XL8E, and LC-37XL8S. This guide covers setup, daily operation, connecting

specifications to optimize your viewing experience.

external devices, advanced features like AQUOS LINK, troubleshooting, and technical

Documents - Sharp - EN2A27S

no relevant documents