

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for LG 42LA6200 TV (AGF76692608 Compatible)

UpStart Components RC-AGF76692608-DL27

UpStart Components Replacement Remote Control for LG 42LA6200 TV

Model: RC-AGF76692608-DL27 | Brand: UpStart Components

INTRODUCTION

This manual provides instructions for the UpStart Components replacement remote control, designed for seamless compatibility with LG 42LA6200 series televisions and compatible with the AGF76692608 LG TV remote control. This replacement unit is engineered to function like the original remote without requiring any programming. Simply insert batteries, and it is ready for use.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



UpStart Components



Figure 1: Back of the remote control with battery compartment.

OPERATING INSTRUCTIONS

This replacement remote control is designed to function identically to the original LG remote for compatible models without any additional setup or programming. Point the remote control directly at your television's infrared receiver.







Figure 2: Front of the remote control with button layout.

Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Pad (0-9):** For direct channel selection.
- **Volume Up/Down:** Adjusts the television's volume.
- **Channel Up/Down:** Changes television channels.
- **Mute Button:** Silences the television audio.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Home/Smart TV Buttons:** Accesses the TV's smart features and applications (e.g., Netflix, Amazon, if present on the remote).
- **Input/Source Button:** Selects different input sources (HDMI, AV, etc.).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time. Remove depleted batteries promptly to prevent leakage and damage.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective range of the TV's IR receiver.
- **Limited Functionality:**
 - Verify that your television model (LG 42LA6200 or AGF76692608 compatible) is listed as compatible.
 - Some advanced functions specific to the original remote might not be replicated if they rely on unique proprietary signals not present in this replacement model.

SPECIFICATIONS

Feature	Detail
Brand	UpStart Components

Model Number	RC-AGF76692608-DL27
Compatible Devices	Television (LG 42LA6200, AGF76692608 compatible)
Connectivity Technology	Infrared
Battery Type	2 x AAA (not included)
Special Feature	Ergonomic design
Item Weight	3.4 Ounces
UPC	632726551384

WARRANTY AND SUPPORT

This product is an UpStart Components brand replacement part. It is not an OEM product and is not affiliated with any original equipment manufacturer (OEM) brands. Any warranties for this product are offered solely by UpStart Components and are not covered under any warranties provided by the original manufacturers.

For warranty claims, technical support, or further assistance, please refer to the official support channels provided by UpStart Components. Contact information can typically be found on the product packaging or the UpStart Components official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

