

UpStart Components RC-AKB74915305-DL25

UpStart Components Replacement TV Remote Control User Manual

For LG TV Models 49UF6400-UA and AKB74915329

INTRODUCTION

This manual provides comprehensive instructions for the proper setup, operation, and maintenance of your UpStart Components replacement remote control. This remote is designed to be compatible with various LG TV models, including 49UF6400-UA and those originally using the AKB74915329 remote control. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

IMPORTANT SAFETY INFORMATION

- **Battery Handling:** Always insert batteries with the correct polarity (+/-). Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Disposal:** Dispose of used batteries according to local regulations. Do not dispose of batteries in fire.
- **Environment:** Keep the remote control away from extreme temperatures, direct sunlight, and moisture. Avoid dropping or subjecting the remote to strong impacts.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use liquid cleaners or abrasive materials.

PACKAGE CONTENTS

- 1 x UpStart Components Replacement TV Remote Control (Model: RC-AKB74915305-DL25)

Note: Batteries are not included and must be purchased separately. This remote requires 2 AAA batteries.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment. Locate this area to install or replace batteries.

Once batteries are installed, the remote control is ready for use. No programming is required for compatible LG TV models.

OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of your original LG TV remote. Point the remote directly at your television's infrared receiver for optimal performance.



Image: Front view of the remote control, displaying the layout of all functional buttons.

Basic Functions

- **Power ()**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **VOL (+/-)**: Adjusts the volume level.
- **CH PAGE (^ / v)**: Changes channels sequentially.
- **Mute ()**: Mutes or unmutes the TV sound.
- **Input/Source**: Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Buttons (▲ ▼ ◀ ▶ , OK)**: Used to navigate menus and confirm selections.
- **Back**: Returns to the previous screen or menu.
- **Exit**: Exits the current menu or application.
- **Menu/Settings (⚙)**: Accesses the TV's main menu or settings.
- **Play/Pause/Stop/Rewind/Fast Forward**: Controls media playback.

Advanced Functions

- **CAPTION**: Toggles closed captions on/off.
- **LIST**: Displays a list of channels or recorded programs.
- **FAV**: Accesses favorite channels.
- **INFO**: Displays current program information.
- **FLASHBK**: Returns to the previously viewed channel.
- **RECENT**: Shows recently viewed content or applications.
- **LIVE MENU**: Accesses live TV menu options.
- **LIVE ZOOM**: Zooms in on a portion of the screen during live TV.
- **SAP/***: Selects Secondary Audio Program or special audio features.
- **SLEEP**: Sets a sleep timer for the TV.
- **Color Buttons (Red, Green, Yellow, Blue)**: Used for specific functions within certain applications or menus, as indicated on the TV screen.

MAINTENANCE

- **Cleaning**: To clean the remote control, gently wipe it with a soft, dry cloth. Do not use water, alcohol, or chemical cleaners, as these can damage the remote's surface or internal components.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace both batteries simultaneously with new ones of the same type (AAA).
- **Storage**: Store the remote in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new AAA batteries.
 - Remove any obstructions between the remote and the TV.
- **Some buttons not working:**
 - This may indicate low battery power; try replacing the batteries.

- Ensure the button is not physically stuck or damaged.
- **TV not turning on/off:**
 - Verify the TV is plugged into a working power outlet.
 - Test the remote with other functions to confirm it is working generally.

SPECIFICATIONS

- **Model:** RC-AKB74915305-DL25
- **Dimensions:** 5.91 x 1.77 x 0.91 inches (approximately)
- **Item Weight:** 2.38 ounces (without batteries)
- **Power Source:** 2 x AAA batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** LG Televisions (specifically models compatible with AKB74915329, e.g., 49UF6400-UA)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. It is not an OEM (Original Equipment Manufacturer) product and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components.

For support or warranty inquiries, please refer to the contact information provided by your retailer or UpStart Components directly. Please retain your proof of purchase for warranty claims.