

## UpStart Components RC-NH000UD-DL6

# UpStart Components Replacement Remote Control for Emerson TV (Model NH000UD)

Model: RC-NH000UD-DL6

## INTRODUCTION

---

This manual provides instructions for the UpStart Components replacement remote control, designed for compatibility with Emerson TVs, specifically models that use the NH000UD remote. This remote control is engineered to function like the original, offering a straightforward replacement solution without the need for complex programming.

## SETUP

---

### Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control, illustrating the battery compartment and how to open it for battery installation.

Once batteries are installed, the remote is ready for use with your compatible Emerson TV. No programming is required.

## OPERATING INSTRUCTIONS

This replacement remote control is designed to replicate the functionality of your original Emerson TV remote. Point the remote directly at your television's infrared sensor for optimal performance.



Image: Front view of the remote control, displaying the layout of all operational buttons.

### Key Functions:

- **Power (Red Button):** Turns the television on or off.

- **SOURCE:** Selects input sources (e.g., HDMI 1, AV).
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **CH+ / CH-:** Changes channels up or down.
- **Mute (Speaker with X):** Mutes or unmutes the television audio.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **MENU:** Accesses the television's main menu.
- **Navigation Arrows (Up, Down, Left, Right) & OK:** Navigate through menus and confirm selections.
- **BACK:** Returns to the previous menu or screen.
- **INFO:** Displays information about the current program or input.
- **SAP:** Secondary Audio Program function.
- **ECO:** Activates or deactivates energy-saving modes.
- **SLEEP:** Sets a timer for the TV to turn off automatically.
- **FREEZE:** Pauses the current image on screen.
- **FORMAT:** Adjusts the screen aspect ratio.
- **PREV.CH:** Switches to the previously viewed channel.

## MAINTENANCE

---

### Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper function. Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure fresh AAA batteries are correctly installed with proper polarity.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Verify that you are pointing the remote directly at the TV.
  - Confirm that the TV is powered on.
- **Intermittent response:**
  - Batteries may be low; replace them.
  - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the remote's signal.

## SPECIFICATIONS

---

<b>Brand</b>	UpStart Components
<b>Model Name</b>	RC-NH000UD-DL6
<b>Compatible Devices</b>	Television (Emerson TVs compatible with NH000UD)
<b>Connectivity Technology</b>	Infrared
<b>Controller Type</b>	Button Control
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Battery Type</b>	Alkaline AAA
<b>Item Weight</b>	2.5 Ounces
<b>Color</b>	Black
<b>Special Feature</b>	Ergonomic design

## WARRANTY AND SUPPORT

---

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components and are not covered under any warranties offered by the original equipment manufacturers (OEMs).

For support or warranty inquiries, please contact UpStart Components directly through their official channels. Refer to the product packaging or the seller's information for specific contact details.