

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

UpStart Components RC-AKB72915239-DL28

User Manual: UpStart Components Replacement Remote Control

Model: RC-AKB72915239-DL28

1. PRODUCT OVERVIEW

This manual provides instructions for the UpStart Components Replacement Remote Control, designed to be compatible with various LG TV models, including those that originally used the AKB72915266 remote control.



Front view of the replacement remote control, showing all buttons and their labels. The remote is black with a standard button layout, including power, number pad, volume, channel, and navigation controls.



Back view of the replacement remote control, highlighting the ergonomic design and the battery compartment cover located at the bottom.

2. SETUP

2.1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control. It is typically a sliding cover at the bottom.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use. No programming is required.

3. OPERATING INSTRUCTIONS

This replacement remote control is designed to function identically to the original LG TV remote control it replaces. Simply point the remote at your television and press the desired button.

3.1. Basic Functions

- **Power (●)**: Turns the television on or off.
- **Number Pad (0-9)**: Directly input channel numbers.
- **Volume Up/Down (VOL +/-)**: Adjusts the sound volume.
- **Channel Up/Down (CH +/-)**: Changes the television channel.
- **Mute ()**: Mutes or unmutes the television sound.
- **Input/Source**: Cycles through available input sources (HDMI, AV, Component, etc.).
- **Home/Menu**: Accesses the television's main menu or smart TV interface.
- **Navigation Buttons (Up, Down, Left, Right, Enter)**: Used to navigate menus and select options.
- **Back/Exit**: Returns to the previous screen or exits a menu.

Refer to your television's original user manual for specific functions of advanced buttons if needed.

4. MAINTENANCE

4.1. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or buttons.

4.2. Battery Care

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage, which can damage the remote's internal components.

5. TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old or depleted batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the television's infrared sensor.

- Make sure you are within the effective range of the television's IR receiver.

- **Some Buttons Not Working:**

- This remote is a direct replacement and does not require programming. If specific buttons are not working, ensure the remote is compatible with your exact TV model.
- Clean the remote's surface, especially around the non-working buttons, to remove any dirt or debris that might be obstructing them.

- **Intermittent Operation:**

- This could indicate low battery power. Replace the batteries.
- Ensure a clear line of sight to the TV's IR sensor.

6. SPECIFICATIONS

Model Number	RC-AKB72915239-DL28
Product Dimensions	1.85 x 0.98 x 8.27 inches
Item Weight	2.91 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (LG TV models compatible with AKB72915266)
Max Number of Supported Devices	1
Special Feature	Ergonomic design

7. WARRANTY INFORMATION

This product is an UpStart Components Brand replacement part and is not an Original Equipment Manufacturer (OEM) product. It is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

Any warranties for this product are offered solely by UpStart Components. Please refer to the product packaging or the UpStart Components website for specific warranty terms and conditions.

8. SUPPORT

For further assistance, troubleshooting, or inquiries regarding your UpStart Components Replacement Remote Control, please contact UpStart Components customer support.

While specific contact details are not provided in this manual, general support information can typically be found on the official UpStart Components website or through the retailer where the product was purchased.

