

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [UpStart Components](#) /
- › [UpStart Components Replacement Dual-Side Remote Control User Manual for VIZIO TV \(Compatible with XRT500, E43-C2\)](#)

UpStart Components RC-XRT500-DL54

UpStart Components Replacement Dual-Side Remote Control User Manual

Compatible with VIZIO TV Models XRT500, E43-C2

1. INTRODUCTION

This manual provides instructions for the UpStart Components Replacement Dual-Side Remote Control. This remote is designed to function as a direct replacement for original VIZIO TV remote controls, specifically compatible with models such as XRT500 and E43-C2. It features a standard remote layout on one side and a full QWERTY keyboard on the reverse side for enhanced navigation and text input.

2. PRODUCT OVERVIEW

The UpStart Components Replacement Dual-Side Remote Control offers convenient operation of your VIZIO TV. It requires no programming; simply insert batteries and begin use. The remote is constructed from durable materials for long-lasting performance.





Figure 2.1: Front side of the remote control with standard TV functions.



Figure 2.2: Back side of the remote control featuring a QWERTY keyboard.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use. No additional programming is required.

4. OPERATING INSTRUCTIONS

4.1 Front Side (Standard Remote Functions)

The front side of the remote control provides standard television operation buttons:

- **Power Button** (●): Turns the TV on or off.
- **Input**: Cycles through available input sources (HDMI, AV, etc.).
- **Quick Access Buttons (amazon, NETFLIX, MGO)**: Direct access to streaming applications.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
- **CC (Closed Captioning)**: Toggles closed captions on or off.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record)**: Controls media playback.
- **Menu**: Opens the TV's main menu.
- **Exit**: Closes current menu or screen.
- **Info**: Displays information about the current program or input.
- **Back**: Returns to the previous screen or menu.
- **Guide**: Opens the electronic program guide.
- **VOL (Volume Up/Down)**: Adjusts the TV volume.
- **CH (Channel Up/Down)**: Changes TV channels.
- **Mute**: Silences the TV audio.
- **PIC (Picture Mode)**: Cycles through picture modes.
- **Number Pad (0-9, Enter, -)**: For direct channel entry and other numerical inputs.

4.2 Back Side (QWERTY Keyboard Functions)

The back side of the remote features a full QWERTY keyboard for easier text input in smart TV applications, search functions, and web browsing:

- **Alphanumeric Keys:** Standard letters and numbers.
- **Shift:** Used to type uppercase letters or symbols.
- **Alt:** Accesses alternative characters or functions.
- **Caps (Caps Lock):** Toggles capital letters on/off.
- **Space:** Inserts a space.
- **Enter:** Confirms input or selection.
- **DEL (Delete):** Deletes characters.
- **Navigation Arrows:** For cursor movement within text fields or menus.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

6. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared (IR) receiver.
 - Ensure you are within the effective range and line of sight of the TV.
- **Certain Functions Not Working:**
 - Verify that your VIZIO TV model is compatible with this replacement remote (e.g., XRT500, E43-C2).
 - Remove and re-insert the batteries to reset the remote.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	1.97 x 0.79 x 6.5 inches
Item Weight	3.05 ounces
Item Model Number	RC-XRT500-DL54
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (VIZIO TV models, e.g., XRT500, E43-C2)

Special Feature	Ergonomic, Dual-Side (Standard Remote + QWERTY Keyboard)
-----------------	--

8. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For technical support, warranty claims, or further assistance, please contact UpStart Components directly through their official support channels.