

Accutime SPD4480

Accutime Marvel Spider-Man Kids Digital Watch (Model SPD4480) Instruction Manual

Model: SPD4480

INTRODUCTION

This manual provides instructions for the Accutime Marvel Spider-Man Kids Digital Watch, Model SPD4480. This digital watch features a Spider-Man design, a digital display, and an adjustable strap. It is designed for children aged 6 years and up.

PRODUCT OVERVIEW

Key Features

- Digital time display
- Vibrant Spider-Man graphics on the watch face and strap
- Adjustable plastic strap with tang buckle
- Light-up function for visibility in low light
- Durable plastic construction

What's Included

- Accutime Marvel Spider-Man Kids Digital Watch (Model SPD4480)
- 1 Product Specific battery (included)
- Warranty information



Figure 1: Front view of the Accutime Marvel Spider-Man Kids Digital Watch.

SETUP

Adjusting the Strap

The watch features an adjustable plastic strap with multiple holes and a tang buckle for a secure and comfortable

fit on various wrist sizes. To adjust, simply insert the buckle pin into the desired hole on the strap.



Figure 2: The watch worn on a wrist, demonstrating strap fit.

Initial Time Setting

To set the time and date on your digital watch:

1. Locate the 'MODE' button, typically on the side of the watch. Press it repeatedly until the time display begins to flash.
2. Use the 'SET' button (or another designated button) to adjust the flashing digits (hours, then minutes).
3. Press 'MODE' again to move to the next setting (e.g., month, day).
4. Repeat step 2 to adjust the date.
5. Once all settings are correct, press 'MODE' one last time to exit setting mode.



Figure 3: Close-up of the watch face and digital display.

OPERATING INSTRUCTIONS

Displaying Time and Date

The watch primarily displays the time. Pressing the 'MODE' button briefly will cycle through different display modes, such as time, date, and potentially a stopwatch.

Using the Light Function

To activate the light-up feature, press the designated light button, usually located on the top right side of the watch case. The display will illuminate for a few seconds.

MAINTENANCE

Cleaning

Wipe the watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the

finish or graphics.

Battery Replacement

The watch uses 1 product-specific battery (included). When the display dims or stops functioning, the battery may need replacement. Battery replacement should be performed by an adult or a qualified technician to ensure proper sealing and function.

Water Resistance

Important: This watch is **NOT WATER RESISTANT**. Avoid exposing the watch to water, including swimming, showering, or heavy rain, as this will cause damage and void the warranty.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may need to be replaced.
- **Time is incorrect:** Follow the 'Initial Time Setting' instructions to reset the time and date.
- **Buttons are unresponsive:** Ensure the watch is not exposed to extreme temperatures or moisture. If the issue persists after a battery change, contact customer support.

SPECIFICATIONS

Brand	Accutime
Model Name	SPD4480
Display Type	Digital
Material	Plastic
Band Material Type	Plastic
Band Length	8.5 Inches
Band Width	16.5 Millimeters
Case Diameter	39 Millimeters
Case Thickness	11.4 Millimeters
Water Resistance Level	Not Water Resistant
Power Source	Battery Powered
Recommended Age	6 years and up

WARRANTY AND SUPPORT

Warranty Information

This Accutime watch comes with a limited warranty. Please refer to the included warranty documentation for specific terms and conditions regarding coverage and duration.

Customer Support

For further assistance, troubleshooting, or warranty claims, please contact Accutime customer support. Contact details can typically be found on the product packaging or the official Accutime website.