

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Samsung](#) /

› [Samsung MA-RS772 Telescopic Drawer Instruction Manual](#)

Samsung MA-RS772

Samsung MA-RS772 Telescopic Drawer Instruction Manual

Model: MA-RS772 | Brand: Samsung

1. INTRODUCTION


This manual provides essential information for the proper installation, operation, and maintenance of your Samsung MA-RS772 Original Telescopic Drawer. Please read these instructions carefully before use to ensure safe and efficient operation.

2. PRODUCT DESCRIPTION

The Samsung MA-RS772 is an original 2-way telescopic extension designed to enhance the functionality of compatible Samsung ovens and cookers. This accessory allows for smooth and easy access to dishes within the oven cavity, improving convenience and safety during cooking and baking.

Key Features:

- 2-way telescopic extension for full access.
- Durable construction, made from aluminum or steel.
- Designed for specific Samsung oven models.

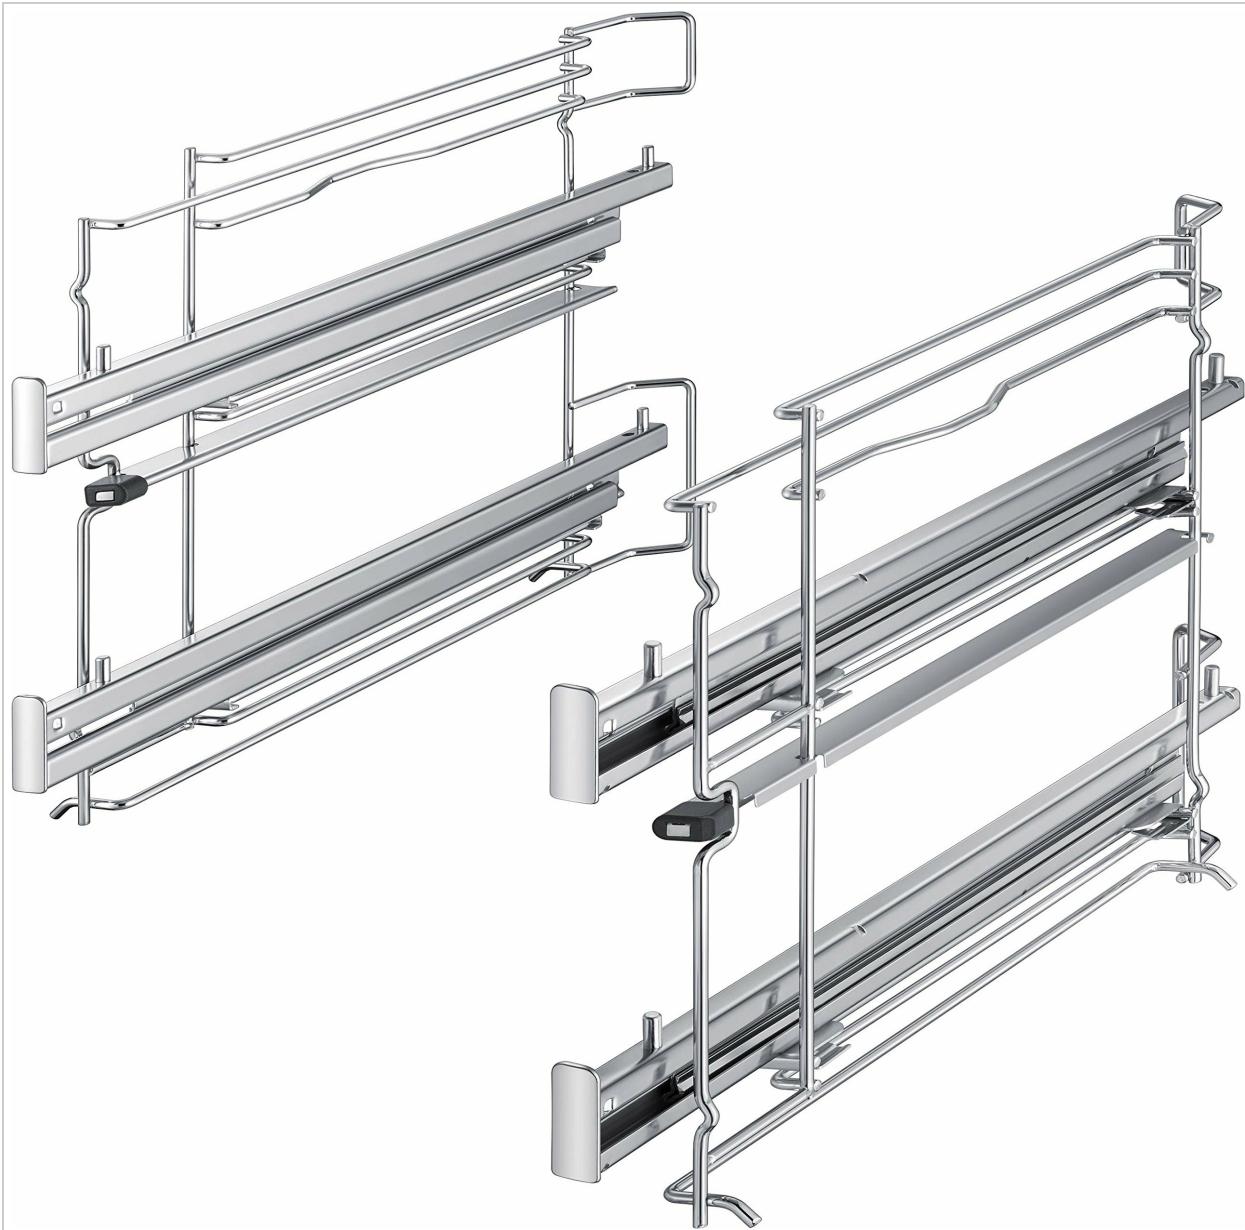

An image showing the Samsung MA-RS772 telescopic drawer, designed for use in compatible Samsung ovens and cookers.
The drawer features a two-way extension mechanism.

3. COMPATIBILITY

The MA-RS772 telescopic drawer is compatible with the following Samsung oven models:

- NV75K5541RS/EG
- NV75K5541RM/EG
- NV75K5571RS/EG
- NV75K5571RM/EG
- NV75N5641RS/EG
- NV75N5671RS/EG
- NV75N5671RM/EG
- NV75N7647RS/EG
- NV75N7677RS/EG

Please verify your oven model number to ensure proper fitment before installation.

4. INCLUDED COMPONENTS

The package for the Samsung MA-RS772 Telescopic Drawer typically includes:

- Telescopic extension unit (consisting of rails and possibly a rack).

Inspect all components upon receipt to ensure nothing is missing or damaged.

5. SETUP AND INSTALLATION

Installation of the telescopic drawer is generally straightforward. Follow these general steps:

1. **Safety First:** Ensure your oven is completely cool and disconnected from the power supply before beginning installation.
2. **Prepare Oven Cavity:** Remove any existing racks or accessories from the oven at the desired installation level.
3. **Identify Mounting Points:** Locate the designated mounting points or slots on the side walls of your oven cavity for the telescopic rails. These are typically small indentations or pre-drilled holes.
4. **Attach Rails:** Carefully align the telescopic rails with the mounting points. Depending on your oven model, the rails may slide into slots or clip onto supports. Ensure they are securely fastened and level.
5. **Test Movement:** Gently extend and retract the rails to confirm smooth operation.
6. **Insert Rack (if applicable):** If your telescopic unit includes a separate rack, slide it onto the extended rails until it locks into place.
7. **Final Check:** Ensure all components are stable and properly installed before reconnecting power to the oven.

Refer to your specific oven's user manual for detailed instructions on installing oven accessories if further guidance is needed.

6. OPERATING INSTRUCTIONS

To use the telescopic drawer:

1. **Placing Items:** Place your baking dish or tray onto the telescopic rack.
2. **Extending:** Gently pull the rack forward. The telescopic mechanism will extend smoothly, allowing you to access your food without reaching deep into the hot oven.
3. **Retracting:** Push the rack back into the oven cavity until it is fully closed and secure.

Always use oven mitts when handling hot dishes or operating the drawer in a hot oven.

7. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and smooth operation of your telescopic drawer.

- **Cleaning:** Allow the drawer to cool completely. Wipe down the rails and rack with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the finish.
- **Lubrication:** The telescopic mechanism is designed for smooth operation. Avoid applying oil or grease, as this can attract food particles and hinder movement. If movement becomes stiff, ensure the rails are clean and free of debris.
- **Inspection:** Periodically check the rails for any signs of wear, damage, or loose connections.

8. TROUBLESHOOTING

If you encounter issues with your telescopic drawer, consider the following:

- **Drawer is Stiff or Difficult to Move:**

- Ensure the rails are clean and free of food debris or grease buildup.
- Check that the drawer is correctly installed and not misaligned.
- Verify that no items in the oven are obstructing the drawer's movement.

- **Drawer Does Not Extend Fully:**

- Confirm that the drawer is installed at the correct depth and not hitting the back of the oven.
- Check for any obstructions within the telescopic mechanism.

If problems persist, contact Samsung customer support or a qualified service technician.

9. SPECIFICATIONS

Feature	Detail
Brand Name	Samsung
Model Number	MA-RS772
Item Weight	1.65 pounds (0.75 kg)
Product Dimensions (L x W x H)	14.45 x 10.68 x 14.74 inches (36.7 x 27.1 x 37.4 cm)
Material Type	Aluminum or Steel
Included Components	Telescopic extension
Country of Origin	Poland

10. WARRANTY AND SUPPORT

Specific warranty information for the Samsung MA-RS772 Telescopic Drawer is not provided in the available product data. For warranty details, technical support, or service inquiries, please refer to the documentation included with your original Samsung oven or visit the official Samsung support website.

You may also contact Samsung customer service directly for assistance.