

[Manuals.plus](#) /

› [Arçelik](#) /

› Arçelik 6343 4 Program Dishwasher User Manual

## Arçelik 6343

# Arçelik 6343 4 Program Dishwasher User Manual

Model: 6343

## PRODUCT OVERVIEW

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Arçelik 6343 4 Program Dishwasher. Please read this manual carefully before using your appliance to ensure safe and efficient operation.



**Figure 1:** Front view of the Arçelik 6343 dishwasher. This image shows the appliance's exterior, including the control panel located at the top edge of the door.

## INSTALLATION AND SETUP

---

Proper installation is crucial for the safe and efficient operation of your dishwasher. It is recommended that installation be performed by a qualified technician.

### 1. Unpacking

- Remove all packaging materials. Keep packaging materials out of reach of children.
- Inspect the dishwasher for any transport damage. Do not install a damaged appliance.

### 2. Placement

- Place the dishwasher on a level, stable floor.
- Ensure there is sufficient space for the door to open fully.
- Avoid placing the appliance near heat sources or in direct sunlight.

### 3. Water Connection

- Connect the water inlet hose to a cold water tap with a  $\frac{3}{4}$  inch thread.
- Ensure the drain hose is securely connected to a drain pipe or sink trap, preventing kinks.
- Check for leaks after connecting.

### 4. Electrical Connection

- Connect the appliance to a grounded electrical outlet.
- Ensure the voltage and frequency match the specifications on the rating plate.
- Do not use extension cords or multiple adapters.

## OPERATING INSTRUCTIONS

---

Follow these steps for effective and safe operation of your Arçelik 6343 dishwasher.

### 1. Control Panel

The control panel is located on the top edge of the dishwasher door. It includes program selection buttons, a start/pause button, and indicator lights for rinse aid and salt.



**Figure 2:** Angled view of the Arçelik 6343 dishwasher. This perspective highlights the control panel and the overall design of the appliance.

### 2. Loading Dishes

- Scrape off large food particles from dishes.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure spray arms can rotate freely.



**Figure 3:** Arçelik 6343 dishwasher with the door open. This view displays the interior layout, including the upper and lower racks for loading dishes and cutlery.

### 3. Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser if necessary.
- Add dishwasher salt to the salt compartment if your water is hard.

### 4. Selecting a Program

The Arçelik 6343 offers 4 washing programs:

- **Program 1:** Intensive (for heavily soiled dishes)
- **Program 2:** Eco (for normally soiled dishes, energy-saving)
- **Program 3:** Quick (for lightly soiled dishes, shorter cycle)
- **Program 4:** Pre-wash (for rinsing dishes before a full wash)

Select the desired program using the program selection button on the control panel.

### 5. Starting a Program

- Close the dishwasher door firmly.
- Press the Start/Pause button. The program will begin.

### 6. Interrupting or Canceling a Program

- To interrupt, open the door slightly. The program will pause.

- To cancel, press and hold the Start/Pause button for a few seconds. The program will reset.

## CARE AND MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

### 1. Cleaning Filters

- Clean the coarse and fine filters regularly (e.g., weekly).
- Remove the filter assembly, rinse under running water, and brush away any food residue.
- Reassemble and place back securely.

### 2. Cleaning Spray Arms

- Check the spray arm nozzles for blockages.
- If blocked, remove the spray arms and clear the holes with a thin object.
- Rinse and reattach.

### 3. Cleaning the Interior

- Wipe the interior with a damp cloth after each use.
- Periodically run a dishwasher cleaning cycle with a specialized cleaner.

### 4. Exterior Cleaning

- Clean the exterior surfaces with a soft, damp cloth and mild detergent.
- Avoid abrasive cleaners or solvents.

### 5. Winter Storage (if applicable)

- If the dishwasher will be unused for an extended period in freezing temperatures, drain all water from the appliance and hoses to prevent damage.

## TROUBLESHOOTING GUIDE

---

Before contacting customer service, please refer to the following table for common issues and their solutions.

| Problem                   | Possible Cause                                                                                   | Solution                                                                                        |
|---------------------------|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Dishwasher does not start | Power cord not plugged in; door not closed properly; fuse blown.                                 | Check power connection; ensure door is latched; check household fuse/circuit breaker.           |
| Dishes are not clean      | Improper loading; spray arm nozzles blocked; insufficient detergent; incorrect program selected. | Reload dishes correctly; clean spray arms; add more detergent; select a more intensive program. |
| Water remains in the tub  | Drain hose kinked or blocked; filter clogged; drain pump malfunction.                            | Check and clear drain hose; clean filters; contact service if pump issue persists.              |
| White streaks on dishes   | Too much rinse aid; water hardness setting incorrect.                                            | Reduce rinse aid dosage; adjust water hardness setting (refer to full manual for details).      |

## TECHNICAL SPECIFICATIONS

---

- **Brand:** Arçelik
- **Model:** 6343
- **Programs:** 4 (Intensive, Eco, Quick, Pre-wash)
- **Type:** Freestanding Dishwasher
- **Color:** White
- **ASIN:** B07CNRPVG9
- *Note: For detailed technical specifications, including dimensions, energy consumption, and water consumption, please refer to the product label or the full technical documentation.*

## WARRANTY AND CUSTOMER SUPPORT

---

Your Arçelik 6343 Dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Arçelik customer support. Contact information can typically be found on the official Arçelik website or in your product documentation.

When contacting support, please have your model number (6343) and serial number ready to expedite the process.

