

KAI-ROAD Ballroom Dance Shoes

KAI-ROAD Ballroom Dance Shoes User Manual

Model: Ballroom Dance Shoes

1. PRODUCT OVERVIEW

The KAI-ROAD Ballroom Dance Shoes are designed for various dance styles, offering a blend of stability and comfort. These shoes feature a low heel, glitter material, and an adjustable strap for a secure fit. They are suitable for ballroom dancing, Latin dance, and other social dance events.



Image 1.1: Side view of the KAI-ROAD Ballroom Dance Shoe, showcasing the glitter upper and low heel design.

2. SETUP AND FITTING

2.1 Sizing and Fit

To ensure the best fit, measure your foot length accurately. KAI-ROAD shoes generally run true to American street sizes. Refer to

the following size guide:

- 5.5 US (22.5 cm)
- 6 US (23 cm)
- 6.5~7 US (23.5 cm)
- 7.5 US (24 cm)
- 8 US (24.5 cm)
- 8.5 US (25 cm)
- 9 US (25.5 cm)
- 9.5~10 US (26 cm)

These shoes are designed for medium width. If you find the fit is not ideal upon receipt, please contact customer support for assistance.

2.2 Strap Adjustment

The shoes feature an adjustable ankle strap with a buckle and clip mechanism. Adjust the strap to achieve a snug yet comfortable fit around your ankle. This ensures stability and prevents the foot from slipping during dance movements.



Image 2.1: Top-down view illustrating the adjustable ankle strap and buckle closure.

3. OPERATING INSTRUCTIONS

3.1 Intended Use

These dance shoes are suitable for a wide range of dance styles, including:

- Ballroom dancing (Quickstep, Waltz, Foxtrot)
- Latin dancing (Rumba, Cha Cha, Samba, Jive)
- Tango
- Swing
- Disco

The low 2-inch heel provides stability, making these shoes suitable for both beginners and experienced dancers. The lightweight and flexible suede sole allows for smooth movement and comfort during extended periods of dancing.

4. MAINTENANCE AND CARE

4.1 Suede Sole Care

The shoes feature a real suede sole, which is essential for proper grip on dance floors. To maintain its texture and prevent slipperiness:

- **Brush Regularly:** Use a specialized suede brush to gently remove dirt and restore the nap of the suede.
- **Avoid Moisture:** Keep the suede sole dry. Exposure to water can damage the material and affect its performance.
- **Inspect for Wear:** Periodically check the sole for excessive wear. Severely worn soles may need professional repair or replacement.



Image 4.1: Underside view highlighting the real suede sole, designed for dance floor grip.

4.2 Glitter Material Care

The glitter material on the upper part of the shoe requires gentle handling:

- **Gentle Cleaning:** Wipe the glitter surface with a soft, dry cloth to remove dust. Avoid harsh chemicals or abrasive materials.
- **Minimize Friction:** Avoid rubbing the glitter against rough surfaces to prevent loss of glitter particles.

4.3 Storage

Store your dance shoes in a cool, dry place away from direct sunlight and humidity. Using a shoe bag can help protect them from dust and damage.

5. TROUBLESHOOTING

5.1 Fit Issues

If the shoes do not fit correctly (too tight, too loose, or uncomfortable width):

- **Re-verify Size:** Double-check your foot measurements against the size chart in Section 2.1.
- **Ankle Strap Adjustment:** Ensure the ankle strap is adjusted correctly for optimal support. An improperly adjusted strap can lead to a feeling of instability.
- **Contact Support:** If fit issues persist, contact KAI-ROAD customer support for guidance on exchanges or returns.

5.2 Material Concerns

If you observe unexpected wear or material degradation:

- **Review Care Instructions:** Ensure you are following the maintenance guidelines in Section 4.
- **Intended Use:** Confirm the shoes are being used for their intended purpose (indoor dance floors).
- **Contact Support:** For significant material defects, contact KAI-ROAD customer support.

6. SPECIFICATIONS

Heel Height	5 cm (2 inches)
Sole Material	Suede
Outer Material	Glitter material, Suede
Closure Type	Buckle
Heel Type	Low-heel
Toe Style	Peep Toe
Department	Women's
Approximate Weight	14.39 ounces (per pair)
Package Dimensions	11.1 x 6.4 x 3.7 inches



Image 6.1: Rear view of the shoe, indicating the 5cm (2 inch) heel height.

7. WARRANTY AND SUPPORT

7.1 Customer Support

For any questions, concerns, or issues regarding your KAI-ROAD Ballroom Dance Shoes, please contact the seller directly through the platform where the purchase was made. This includes inquiries about sizing, returns, or product defects.

7.2 Returns and Exchanges

If you receive shoes that do not fit or have manufacturing defects, please initiate a return or exchange request through your purchase order history. KAI-ROAD aims to ensure customer satisfaction and will assist with appropriate resolutions.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CNY6DSJ>

More documents and user manuals: <https://manuals.plus/>