

[Manuals.plus](#) /

› [Nexus](#) /

› Nexus G Stroker Stimulator User Manual GS001

Nexus GS001

Nexus G Stroker Stimulator User Manual

Model: GS001

1. PRODUCT OVERVIEW

The Nexus G Stroker is a versatile stimulator designed for both G-spot and prostate stimulation. Crafted from 100% silicone, this device features a powerful motor with 6 distinct vibration modes and internal moving beads that offer 3 different speed settings for enhanced sensation. Its ergonomic design allows for comfortable use by both men and women, for both anal and vaginal exploration.



Image 1.1: The Nexus G Stroker Stimulator shown with its packaging.

2. GETTING STARTED

2.1 Unpacking and Initial Charge

Carefully remove the Nexus G Stroker from its packaging. Before first use, ensure the device is fully charged. The device requires 1 Lithium-ion battery, which is included. Locate the charging port, typically found at the base of the device, and connect the provided charging cable. An indicator light will typically show charging status.



Image 2.1: Bottom view of the Nexus G Stroker, highlighting the charging port.

2.2 First Use Preparation

Before the first use, and after every subsequent use, clean the device thoroughly. Refer to the 'Care and Maintenance' section for detailed cleaning instructions.

3. OPERATION GUIDE

The Nexus G Stroker is designed for intuitive operation, featuring both on-device controls and a remote control for convenience.

3.1 Powering On/Off

Press and hold the power button on the device or the remote control for 2-3 seconds to turn the device on or off. The device will typically vibrate briefly to indicate it is powered on.

3.2 Vibration Modes

Once powered on, short press the vibration button on the device or remote to cycle through the 6 distinct vibration modes. Each press will advance to the next mode. Experiment to find your preferred setting.

3.3 Bead Movement Speeds

The internal beads offer additional stimulation. Short press the bead control button on the device or remote to cycle through the 3 available bead movement speeds. These can be used independently or in conjunction with the vibration modes.

3.4 Remote Control Usage

The included remote control allows for discreet and convenient adjustment of all functions (power, vibration modes, bead speeds) from a distance.



Image 3.1: Angled view of the Nexus G Stroker, highlighting the textured beads for enhanced stimulation.

4. CARE AND MAINTENANCE

Proper care ensures the longevity and hygiene of your Nexus G Stroker.

4.1 Cleaning Instructions

After each use, clean the device with lukewarm water and a toy cleaner. Gently scrub all surfaces, paying attention to textured areas. Rinse thoroughly to remove all cleaner residue. Pat the device dry with a lint-free cloth before storage.

- Do not use harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone material.
- Ensure the charging port is dry before connecting the charger.

4.2 Storage

Store the Nexus G Stroker in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

4.3 Charging

Recharge the device when the battery is low. Avoid overcharging by disconnecting the charger once the battery is full. Store the device with a partial charge if it will not be used for an extended period.

5. TROUBLESHOOTING

If you encounter any issues with your Nexus G Stroker, refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Press and hold the power button for 2-3 seconds.
- **Weak vibrations or bead movement:** The battery may be low. Recharge the device fully.
- **Remote control not responding:** Ensure the device is powered on. Check the remote control's battery if applicable (some remotes have replaceable batteries, others are integrated). Try operating the device using its on-board controls.
- **Unusual noises or smells:** Discontinue use immediately and contact customer support.

6. PRODUCT SPECIFICATIONS

Model Number	GS001
Brand	Nexus
Material	100% Silicone
Dimensions (L x W x H)	17.5 x 17.5 x 6 cm
Weight	240 g
Battery Type	1 Lithium-ion (included)
Vibration Modes	6
Bead Movement Speeds	3
Features	Unisex design, moving beads, remote control

7. WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or any product-related inquiries, please contact Nexus customer service directly. Refer to the product packaging or the official Nexus website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question