

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Baby Einstein](#) /
- › [Baby Einstein and Hape Magic Touch Wooden Toy Piano Instruction Manual](#)

## Baby Einstein 11649

# Baby Einstein and Hape Magic Touch Wooden Toy Piano Instruction Manual

Model: 11649

## PRODUCT OVERVIEW

---

The Baby Einstein and Hape Magic Touch Wooden Toy Piano is designed to inspire creativity and foster a lifelong love of music in babies and toddlers aged 6 months and up. Featuring innovative Magic Touch technology, this toy allows children to create music with a simple touch, eliminating the need for traditional buttons or keys. It offers multiple modes of play to encourage musical exploration and problem-solving skills.



Figure 1: The Baby Einstein and Hape Magic Touch Wooden Toy Piano, showcasing its colorful keys and music sheet holder.

## Key Features:

- **Magic Touch Technology:** Allows music creation with a gentle touch, no buttons or keys required.
- **Multiple Play Modes:** Enables toddlers to compose their own melodies or play along with classic tunes.
- **Color-Coded Music Sheets:** Includes 3 double-sided music sheets with color-coded notes for easy learning and coordination.
- **Adjustable Volume Control:** Features "low" and "high" volume settings for adaptable play environments.
- **High-Quality Speakers:** Ensures clear and pleasant sound output at all volume levels.
- **Durable and Child-Safe Materials:** Constructed from 60% wood and 40% plastic, designed for long-lasting use and safety.

## WHAT'S IN THE BOX

---

- Magic Touch Wooden Piano
- 3 Double-Sided Music Sheets (6 songs total)

## SETUP

---

### Battery Installation:

1. Locate the battery compartment on the underside of the piano.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 AA alkaline batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

### Inserting Music Sheets:

The piano comes with 3 double-sided music sheets. To use them, simply slide a desired music sheet into the slot located above the piano keys. The sheet will stand upright, displaying the color-coded notes for the song.



Figure 2: A child's hands interacting with the piano, demonstrating how music sheets are placed and used for guided play.

## OPERATING INSTRUCTIONS

---

### Power On/Off and Volume Control:

- Locate the power switch and volume control buttons on the top panel of the piano.
- Slide the switch to turn the piano ON.
- Adjust the volume to "low" or "high" as desired using the dedicated buttons.

### Magic Touch Play:

The piano utilizes Magic Touch technology, meaning there are no physical keys to press down. Simply touch the colored sections of the piano keys to produce musical notes. This makes it easy for even the youngest children to create sounds.

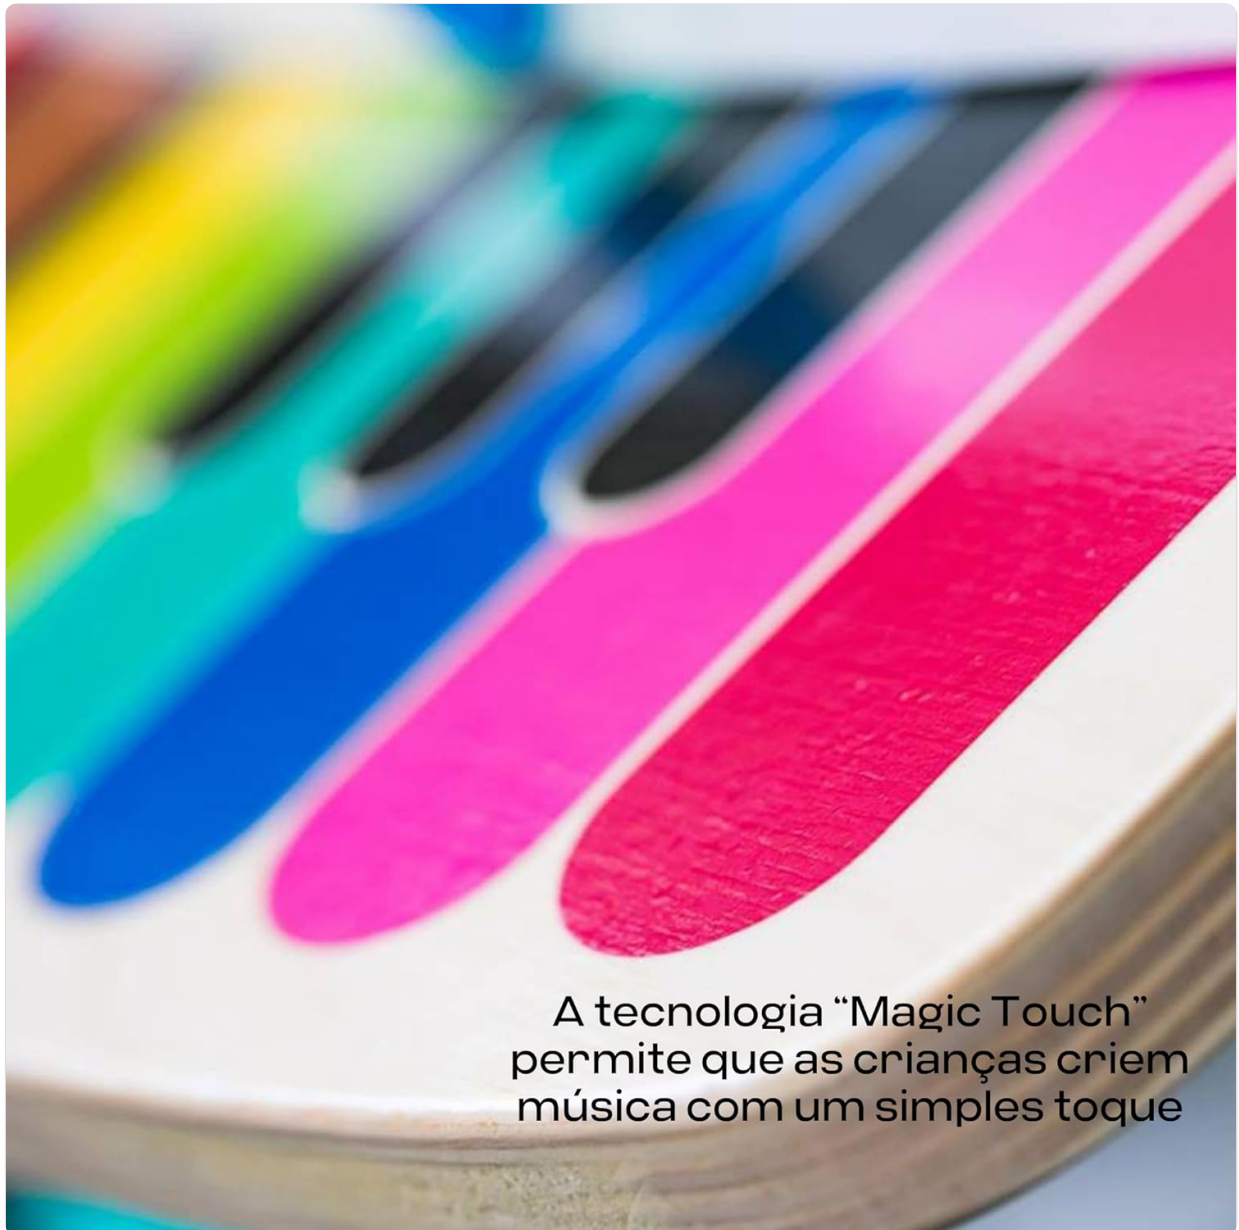


Figure 3: A close-up view of the colorful, touch-sensitive piano keys, highlighting the Magic Touch technology.

### Play Modes:

The piano offers two primary play modes, selectable via a button on the top panel:

- **Piano Playing Mode (Free Play):** In this mode, each touch on a colored key will produce a distinct piano note, allowing for free musical exploration and improvisation.
- **Song Mode (Guided Play):** When a music sheet is inserted, this mode allows the child to play along with pre-recorded melodies. Touching any key will advance the song, encouraging rhythm and note recognition by matching the color-coded notes on the sheet.



Ajuda a desenvolver  
habilidades motoras  
finas enquanto  
estimula a imaginação  
e a criatividade dos  
pequenos

Figure 4: A toddler seated and actively engaging with the piano, demonstrating the ease of use for young children and promoting fine motor skills.

## MAINTENANCE

---

### Cleaning Instructions:

- To clean the piano, wipe it with a damp cloth and mild soap.
- **DO NOT immerse the piano in water**, as this can damage the electronic components.

### Battery Care:

- Remove batteries if the toy is not going to be used for an extended period.
- Dispose of used batteries responsibly according to local regulations.

## TROUBLESHOOTING

---

- **No Sound or Distorted Sound:**
  - Check if the piano is turned ON.

- Ensure batteries are correctly installed and not depleted. Replace with fresh AA batteries if necessary.
- Verify that the volume is not set to the lowest setting.

- **Keys Not Responding to Touch:**

- Ensure the piano surface is clean and free of debris that might interfere with the Magic Touch sensors.
- Confirm batteries are fresh and properly installed.

## SPECIFICATIONS

---

Feature	Detail
Product Dimensions	7 x 11.7 x 8.9 inches
Item Model Number	11649
Batteries Required	3 AA batteries (not included)
Material Type	Wood (60%), Plastic (40%)
Item Weight	1.94 pounds
Recommended Age	6-36 months
Care Instructions	Wipe clean with damp cloth and mild soap. Do not immerse in water.