

AUNA Peggy Sue

AUNA Peggy Sue Retro Record Player User Manual

Model: Peggy Sue | Brand: AUNA

1. INTRODUCTION

Thank you for choosing the AUNA Peggy Sue Retro Record Player. This manual provides essential information for the safe and efficient operation of your new device. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INSTRUCTIONS

- **Power Source:** Ensure the power supply matches the voltage specified on the device. Use only the provided AC adapter.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Ventilation:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth only.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, level surface to prevent damage from falling.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- AUNA Peggy Sue Retro Record Player
- Mini-LP attachment (45 RPM adapter)
- USB power adapter
- USB cable

- Recording software (Audacity)
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your AUNA Peggy Sue record player.



Figure 1: AUNA Peggy Sue Retro Record Player, open, displaying the platter, tonearm, and controls.



Figure 2: Detailed view of the tonearm, rear connection ports (USB, RCA), and integrated stereo speakers.

Key Components:

1. **Platter:** Where the record rests.
2. **Tonearm:** Holds the stylus (needle) and tracks the record grooves.
3. **Stylus:** The needle that reads the record.
4. **Speed Selector:** Switch to select 33, 45, or 78 RPM.
5. **Lift Lever:** Raises and lowers the tonearm.
6. **Volume Control:** Adjusts the output volume of the built-in speakers.
7. **USB Port:** For connecting to a computer for digitization.
8. **RCA Output:** For connecting to external speakers or an amplifier.
9. **Built-in Stereo Speakers:** Integrated audio output.
10. **Carrying Handle & Clip Closure:** For portability and secure transport.

5. SETUP

5.1 Unpacking and Placement

1. Carefully remove the record player from its packaging.
2. Place the unit on a flat, stable, and vibration-free surface.
3. Ensure adequate ventilation around the unit.

5.2 Power Connection

1. Connect the provided USB power adapter to the DC 5V input port on the record player.
2. Plug the AC adapter into a standard wall outlet (AC 220-240V, 50-60Hz).

6. OPERATING INSTRUCTIONS

6.1 Playing Records

1. Open the lid of the record player.
2. Place a record on the platter. For 45 RPM singles, place the mini-LP attachment (adapter) on the spindle first.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch.
4. Release the tonearm lock.
5. Gently raise the tonearm using the lift lever.
6. Position the tonearm over the desired starting groove of the record.
7. Slowly lower the tonearm using the lift lever. The platter will begin to rotate automatically.
8. Adjust the volume using the volume control knob.
9. At the end of the record, the tonearm will automatically return to its rest position (auto-stop function). If not, manually lift the tonearm and return it to its rest.
10. Secure the tonearm with the lock and close the lid when finished.

6.2 Digitizing Records via USB

The AUNA Peggy Sue allows you to convert your vinyl records into digital audio files.

1. Connect the record player to your computer using the provided USB cable.
2. Install the Audacity recording software (included) on your computer.
3. Open Audacity and configure the input device to recognize the record player.
4. Start recording in Audacity, then begin playing your record as described in Section 6.1.
5. Once the record has finished playing, stop the recording in Audacity.
6. You can then edit, save, and export your digitized audio files using Audacity.

6.3 Connecting External Speakers (RCA Output)

To connect your record player to an external amplifier or powered speakers:

1. Locate the RCA output ports on the rear of the record player.
2. Connect an RCA cable (not included) from these ports to the audio input of your external amplifier or powered speakers.
3. Ensure the external audio system is set to the correct input source.
4. Adjust the volume on your external audio system. The record player's internal speakers will be muted when an external connection is made.

7. MAINTENANCE

7.1 Cleaning the Stylus

- A dirty stylus can degrade sound quality and damage records.
- Gently clean the stylus periodically using a soft brush designed for stylus cleaning, brushing from back to front.
- Avoid touching the stylus with your fingers.

7.2 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Keep the lid closed when not in use to prevent dust accumulation on the platter and tonearm.

8. TROUBLESHOOTING

If you encounter issues with your record player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not active.	Ensure power adapter is securely connected to the unit and a working power outlet.
No sound from speakers	Volume too low; external speakers connected; stylus protector still on.	Increase volume. Disconnect RCA cables if using internal speakers. Remove stylus protector.
Record skipping	Dirty or damaged record; dirty or worn stylus; unit not level.	Clean record. Clean or replace stylus. Ensure unit is on a stable, level surface.
Record plays too fast/slow	Incorrect speed selected.	Adjust the speed selector to match the record's RPM (33, 45, or 78).
Tonearm does not move or auto-stop fails	Tonearm lock engaged; auto-stop mechanism interference.	Ensure tonearm lock is disengaged. Gently check for any obstructions around the tonearm base.

9. SPECIFICATIONS






Feature	Detail
Model Name	Peggy Sue
Item Model Number	00819885020405US
Product Dimensions	11 x 14 x 4.6 inches (WxDxH)
Item Weight	5.5 pounds




Feature	Detail
Playable Speeds	33, 45, 78 RPM
Connections	1 x USB input, 1 x RCA output
Motor Type	DC Motor
Special Feature	Portable, Built-in Speakers, Digitization via USB
Power Supply	AC 220-240V, 50-60Hz or DC 5V
Material	Plastic
Color	Blue

10. WARRANTY AND SUPPORT

AUNA products are designed for reliability and performance. For information regarding warranty coverage or technical support, please refer to the warranty card included with your purchase or visit the official AUNA website. Please have your model number (Peggy Sue) and item model number (00819885020405US) available when contacting support.

Related Documents - Peggy Sue

  	<p>Auna Turntable Player 10000343 / 10015399: Instruction Manual</p> <p>User manual for the Auna turntable player (models 10000343 / 10015399), covering setup, operation, safety precautions, and environmental disposal instructions.</p>
	<p>auna BX-Graceland TT Jukebox User Manual</p> <p>User manual for the auna BX-Graceland TT Jukebox (model US-10030442) by Berlin Brands Group Inc. This guide provides setup, operation, safety, and technical details for the turntable and Bluetooth-enabled jukebox.</p>
	<p>auna AV2-CD509 HiFi CD-Player Bedienungsanleitung</p> <p>Umfassende Anleitung für den auna AV2-CD509 HiFi CD-Player. Enthält Sicherheitshinweise, Bedienung, Fehlerbehebung und Entsorgungsinformationen für optimale Leistung.</p>

	<p>Auna CD-1000 DG CD Player User Manual</p> <p>User manual for the Auna CD-1000 DG CD Player, detailing technical specifications, safety instructions, device description, remote control functions, and setup.</p>
	<p>Auna AV2-CD509 HiFi CD-Player Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für den Auna AV2-CD509 HiFi CD-Player, die Informationen zu Einrichtung, Funktionen, Sicherheit und Fehlerbehebung enthält.</p>
	<p>auna Stereosonic Flache Stereoanlage mit CD-Player Bedienungsanleitung</p> <p>Bedienungsanleitung für die auna Stereosonic Flache Stereoanlage mit CD-Player (Modelle 10032461, 10032462). Enthält technische Daten, Sicherheitshinweise, Bedienung und Fehlerbehebung.</p>