

[Manuals.plus](#) /

› [Baby Einstein](#) /

› Baby Einstein Magic Touch Wooden Drum Musical Toy Instruction Manual

Baby Einstein 11650-6

Baby Einstein Magic Touch Wooden Drum Musical Toy Instruction Manual

Model: 11650-6

1. INTRODUCTION

Thank you for choosing the Baby Einstein Magic Touch Wooden Drum Musical Toy. This Montessori-inspired drum set is designed to introduce babies aged 6 months and older to the joy of music through intuitive touch technology. This manual provides essential information for the safe and proper use of your musical toy.



Image 1.1: The Baby Einstein Magic Touch Wooden Drum Musical Toy, featuring four colorful drum pads with animal characters.

2. WHAT'S IN THE BOX

The package contains the following items:

- Magic Touch Wooden Drum



Image 2.1: The Magic Touch Wooden Drum toy shown within its retail packaging.

3. SETUP

3.1 Battery Installation

The Magic Touch Wooden Drum requires 3 AAA alkaline batteries for operation. Batteries are not included.

1. Locate the battery compartment on the underside of the toy.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Warning: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy is not used for an extended period.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Locate the power switch on the toy. Slide the switch to the 'ON' position to activate the drum. Slide to 'OFF' when not in use.

4.2 Magic Touch Technology

The drum utilizes Magic Touch technology, eliminating the need for physical buttons on the drum pads. Simply tap the wooden surface of each colorful drum pad to produce different musical notes or drum sounds.



Image 4.1: A child's hand gently tapping one of the drum pads, demonstrating the Magic Touch feature.

4.3 Modes of Play

The toy features two distinct play modes:

- **Drum Mode:** Allows the child to create their own rhythms and beats by tapping the drum pads.
- **Melody Mode:** Enables the child to play along with pre-programmed classical tunes.

To switch between Drum Mode and Melody Mode, press the central blue button, often referred to as the 'Einstein button'.



Image 4.2: A baby lying on their stomach, engaging with the drum toy, tapping the surfaces.

4.4 Volume Control

The toy includes volume control buttons to adjust the sound output. You can select between a 'low' volume setting for quiet play or a 'high' volume setting for a more immersive musical experience. The higher-quality speakers ensure clear sound at both settings.



Image 4.3: A baby sitting comfortably, using both hands to play the Magic Touch Wooden Drum.

5. MAINTENANCE

5.1 Cleaning

The Magic Touch Wooden Drum is designed for easy cleaning. To clean the toy, simply wipe it with a damp cloth. Avoid submerging the toy in water or using harsh cleaning agents, as this may damage the electronic components and wooden surfaces.

5.2 Storage

Store the toy in a dry place away from direct sunlight and extreme temperatures. Remove batteries if the toy will not be used for an extended period to prevent battery leakage.

6. TROUBLESHOOTING

6.1 No Sound or Stuttering Sounds

If the toy produces no sound, or if the sounds are stuttering or inconsistent, please check the following:

- **Batteries:** Ensure that the batteries are correctly installed with the proper polarity. Replace old or weak batteries with a fresh set of 3 AAA alkaline batteries. Low battery power is a common cause for

sound issues.

- **Power Switch:** Verify that the power switch is in the 'ON' position.

If the issue persists after checking these points, please refer to the warranty and support information.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	1.8 x 15.1 x 7.5 inches
Item Model Number	11650-6
Batteries Required	3 AAA batteries (not included)
Battery Type	Alkaline
Battery Life	Approximately 144 Hours
Material Type	Wood
Material Composition	60% wood, 40% plastic
Item Weight	1.25 pounds
Target Gender	Unisex

8. SAFETY INFORMATION

- Always supervise children during play.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if any damage is found.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of batteries properly according to local regulations.
- This toy is intended for children aged 6 months and older.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or visit the official Baby Einstein website. Keep your purchase receipt as proof of purchase.