

Electrolux DF82X

Electrolux 553L Frost Free Refrigerator DF82X User Manual

Model: DF82X | Capacity: 553 Liters | Voltage: 110 Volts

1. INTRODUCTION

Thank you for choosing the Electrolux 553L Frost Free Refrigerator, model DF82X. This manual provides important information regarding the installation, operation, maintenance, and troubleshooting of your appliance. Please read it carefully before using your refrigerator to ensure safe and efficient operation. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- **Electrical Safety:** Ensure the refrigerator is connected to a grounded 110-volt outlet. Do not use extension cords or adapters.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with flammable propellants in this appliance. Keep flammable materials and vapors away from the refrigerator.
- **Ventilation:** Ensure adequate ventilation around the appliance. Do not block ventilation openings.
- **Child Safety:** Supervise children to ensure they do not play with the appliance. Old refrigerators must be disposed of safely to prevent child entrapment.
- **Service:** Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

3. SETUP AND INSTALLATION

3.1 Unpacking

Remove all packaging materials, including tape and protective films, from the refrigerator and its accessories. Inspect the appliance for any damage during transit.

3.2 Placement

Place the refrigerator on a firm, level surface. Allow sufficient space around the appliance for proper air circulation and heat dissipation. Refer to the dimensions below for planning your space.



This image illustrates the external dimensions of the Electrolux DF82X refrigerator, showing a height of 191 cm, a width of 81 cm, and a depth of 75 cm, which includes the handle. These measurements are crucial for proper placement and installation. Ensure the refrigerator is not exposed to direct sunlight or placed near heat sources like stoves or radiators. The ambient temperature should be between 10°C and 43°C for optimal performance.

3.3 Leveling

Adjust the leveling feet at the bottom of the refrigerator to ensure it is stable and level. This helps prevent vibrations and ensures proper door sealing.

3.4 Electrical Connection

Plug the refrigerator into a dedicated 110-volt, 60 Hz, AC-only electrical outlet. Do not use an adapter or extension cord. Ensure the outlet is properly grounded.

3.5 First Use

After installation, wait at least 2-4 hours before plugging in the appliance to allow refrigerants to settle. Once plugged

in, allow the refrigerator to operate for 4-6 hours to reach its optimal cooling temperature before storing food.



A full front view of the Electrolux DF82X Frost Free Refrigerator, showcasing its sleek stainless steel finish and two-door design. The control panel is visible on the upper door.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

Your Electrolux DF82X refrigerator features an intuitive digital control panel located on the freezer door. This panel allows you to adjust temperatures and activate special functions.



A detailed view of the digital control panel on the Electrolux DF82X refrigerator. It shows buttons for temperature settings, special functions like 'Turbo Congelamento' (Turbo Freezing), 'Drink Express', and indicators for various modes.

4.2 Temperature Adjustment

Use the temperature control buttons on the panel to set the desired cooling levels for both the refrigerator and freezer compartments. Refer to the icons on the panel for specific temperature zones or modes (e.g., 'Compras' for shopping mode, 'Festa' for party mode).

4.3 Special Functions

- **Turbo Congelamento (Turbo Freezing):** Activates a rapid freezing function for quick chilling of newly added items in the freezer.
- **Drink Express:** A specialized function to quickly chill beverages.
- **Ice Express:** For accelerated ice production.

4.4 Interior Features

The refrigerator features multiple adjustable shelves, door bins, and a large crisper drawer for fruits and vegetables. The freezer compartment is located at the top.



This image displays the interior layout of the Electrolux DF82X refrigerator, featuring multiple adjustable shelves, door bins, and a large crisper drawer at the bottom. The freezer compartment is located at the top.



This image demonstrates the spacious interior of the Electrolux DF82X refrigerator when filled with groceries. It highlights the effective use of space with items stored on shelves, in door bins, and the crisper drawer, showcasing its 553-liter capacity.

5. MAINTENANCE AND CARE

5.1 Cleaning the Interior

Unplug the refrigerator before cleaning. Wash the interior surfaces, shelves, and drawers with a solution of mild soap and warm water. Rinse thoroughly and dry with a soft cloth. Do not use abrasive cleaners or harsh chemicals.

5.2 Cleaning the Exterior

Clean the exterior surfaces with a soft cloth dampened with mild soap and water. For stainless steel finishes, use a specialized stainless steel cleaner. Wipe dry to prevent streaks.

5.3 Defrosting

Your Electrolux DF82X refrigerator features an automatic defrosting system (Frost Free), eliminating the need for manual defrosting of the freezer compartment.

5.4 Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

- **Refrigerator Not Cooling:** Ensure the power cord is securely plugged in and the circuit breaker has not tripped. Check if the temperature settings are correct.
- **Unusual Noises:** Some operational noises are normal (e.g., compressor running, refrigerant flowing). However, if you notice excessively loud or unusual noises, ensure the refrigerator is level and not touching any walls or cabinets.
- **Water on Floor:** Check if the drain pan is correctly positioned and not overflowing. Ensure the refrigerator is level.
- **Door Not Sealing Properly:** Check for obstructions preventing the door from closing fully. Clean the door gaskets if they are dirty or sticky.

If the problem persists after checking these points, please contact Electrolux customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Electrolux
Model Name/Number	DF82X
Product Dimensions (D x W x H)	75 cm x 81 cm x 191 cm
Total Capacity	553 Liters
Fresh Food Capacity	553 Liters (Note: This seems to be the total capacity, as freezer capacity is not separately listed in the provided data, but it is a top freezer model)
Voltage	110 Volts
Number of Doors	2
Defrost System Type	Automatic (Frost Free)
Configuration	Top Freezer, Two Doors
Color	Inox (Stainless Steel)
Cooling Method	Compressor
Number of Shelves	3

Adjustable Temperature Control	No (Digital panel offers modes, but not explicitly 'adjustable temperature control' as a separate spec)
Door Opening Orientation	Right
Power Source	Corded Electric
Item Weight	101 Kilograms
Annual Energy Consumption	500 Kilowatt Hours Per Year
Installation Type	Freestanding
BEE Star Rating	3 Stars

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Electrolux refrigerator comes with a **1-year warranty**, which includes 3 months of legal warranty and an additional 9 months of special warranty granted by the manufacturer. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact Electrolux customer support. Refer to the official Electrolux website or your purchase documentation for contact details specific to your region.

When contacting support, please have your refrigerator's model number (DF82X) and serial number ready.